 
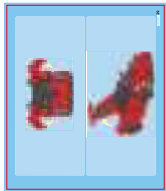 
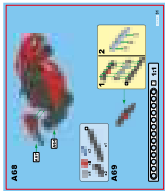 
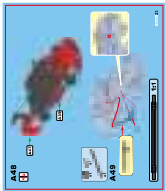 
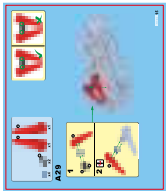 
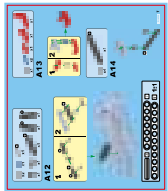 
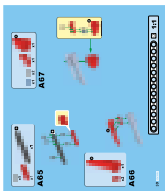 
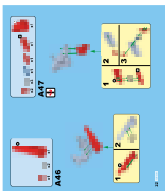 
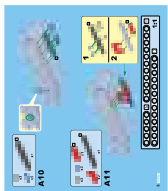 
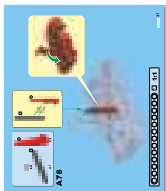 
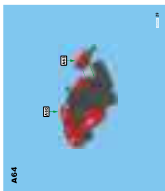 
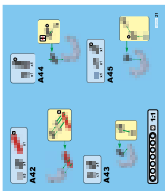 
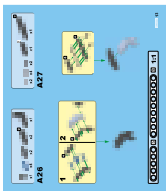 
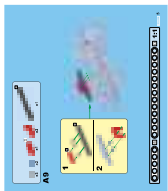 
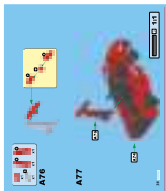 
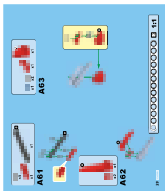 
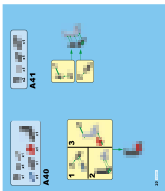 
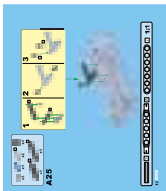 
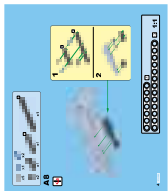 
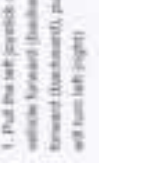 
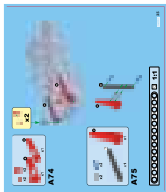 
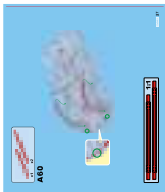 
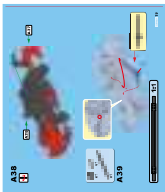 
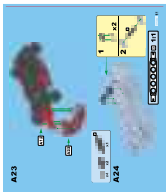 
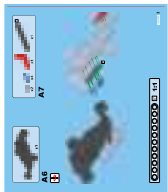 
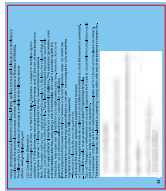 
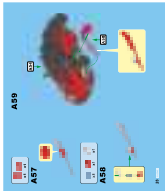 
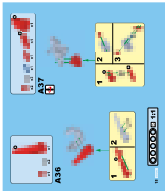 
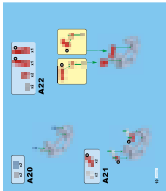 
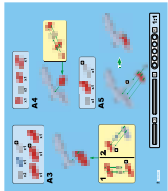 
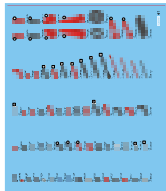 
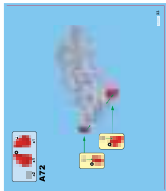 
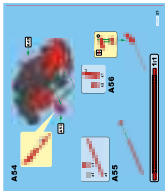 
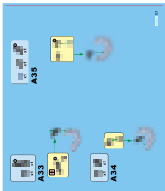 
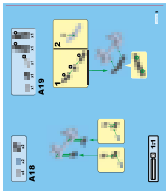 
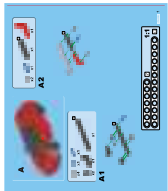 
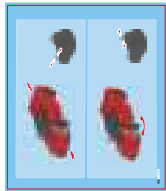 
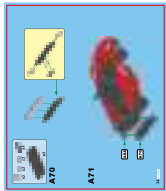 
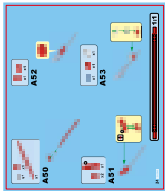 
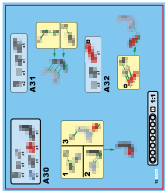 
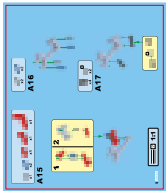 


DATE	TIME
10/10/2020	10:00
10/10/2020	10:00

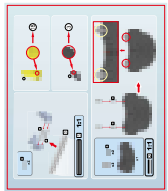

1. Put the left joystick of the remote control (backward) to move the vehicle forward (backward); 2. Put the left joystick of the remote control forward (backward), put the right joystick to the left (right), and the vehicle will turn left (right).