


User Manual

Unit overview

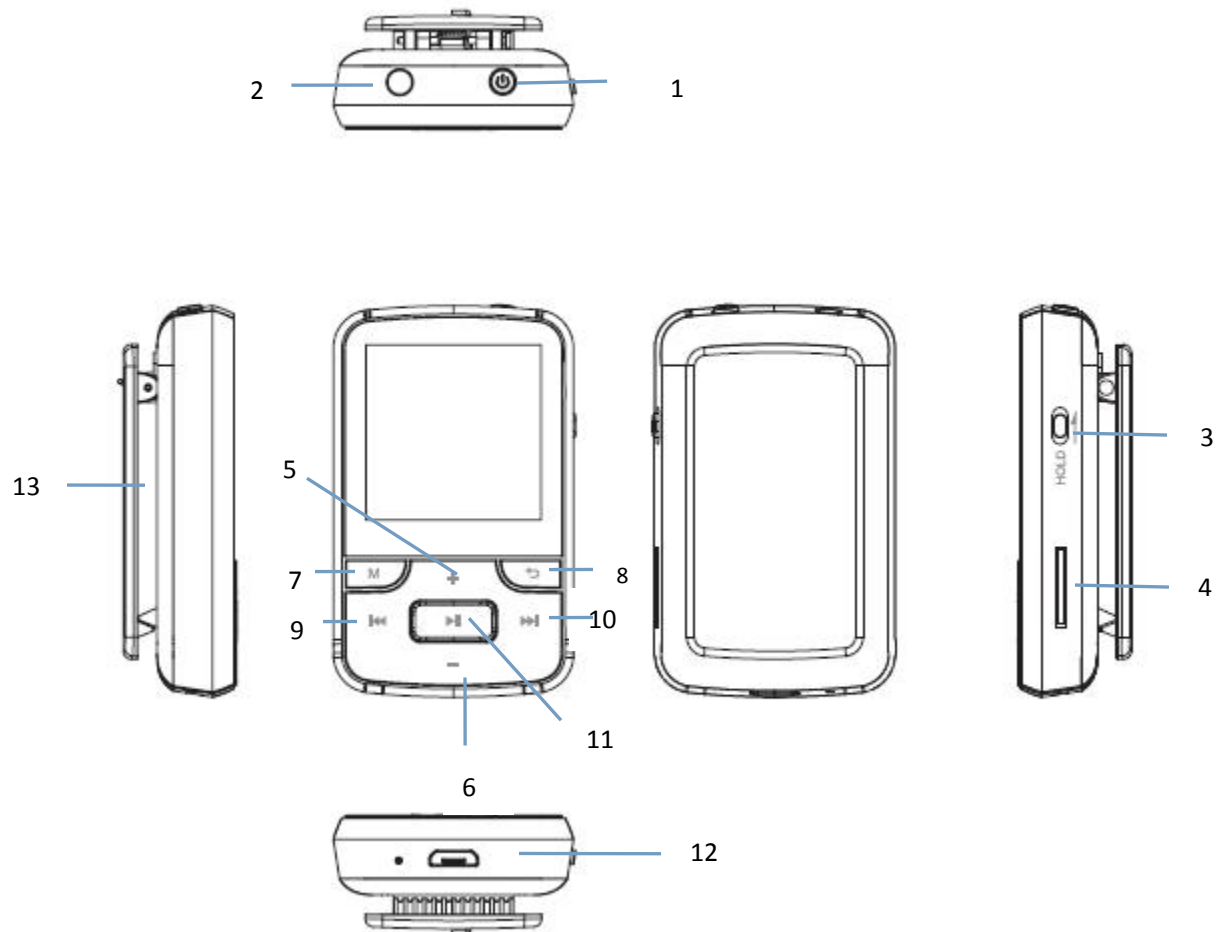

1.Power on-off

3.Hold/Unlock

5.Vol+/Scroll up

7. Main Menu

9.Previous and fast forward playing

10.Next and fast backward playing

11.Play/Pause/On-off/Enter

12.USB Port

13.Clip

2.Earphone jack

4.Micro SD card slot

6.Vol-/Scroll down

8.Back/Exit to superior menu

Technical Specification

| | |
|-------------------|---------------------------------------|
| Screen | 1.5 inch 128*128 TFT display |
| Flash memory | 8GB |
| Bluetooth version | Bluetooth 4.0 |
| Audio format | MP3/WMA/OGG/APE/FLAC/WAV/AAC-LC/ACELP |
| Recording format | FM/MIC record and WAV |
| Battery | Li-polymer rechargeable 300mAh |
| FM frequency | 87.5-108MHZ |
| Micro-SD card | Extend to 128GB |
| Photo format | JPG,BMP and GIF |
| Charging time | 3 hours |

Basic Operation

Powering on the player

- Long Press power button and hold(about 3 seconds) to turn it on..
- Long Press power button and hold(about 3 seconds) to turn it off.

Battery Charging

When the battery indicator on the screen , you must charge the device.

The device has two charge options:

a)You can charge the device via the USB connector.

b)You can also charge the device via a USB wall adapter(not supplied)

Note:The charging time should not exceed 4 hours.It is recommended to turn off the device before charging.



Press buttons definition

| | |
|-------------|-------------------------------------|
| Action | Basic operation |
| Short press | Press time is less than 1-2 seconds |
| Long press | Press time is more than 1-2 seconds |
| Hold | Keep pressing one button |

Note:Without special instruction, all pressing mean short pressing in this user manual

FM RADIO

On radio menu press  to enter below radio playing interface.

You can press   to search programs manually.

At radio playing interface, press **M** and will show a related lists including “Auto tune”, “FM Record”, “Save to preset”, “Clear preset”, “FM bands” .

- Save to preset

The frequency points of radio station are displayed with 30 frequency points reserved at most.

- Clear preset

Press **⏏** to clear preset stations.

- Auto tune

Press **⏏** to enter Auto tune mode, it will show “Perform auto search? ”, press **⏏** to confirm Yes or No. If choose Yes, it will be searching automatically and automatically save searched station in “Station list”.

- FM record

When listening to the broadcast station program, press **M** button to find the sub-menu “start FM radio record”, and press **⏏** to start recording, and long press **⏏** to quickly saved recording content in the formats of FM REC001/002.....WAV

You will find saved FM recording in Record folder under FOLDER menu.

- FM bands

The player is defaulted to command band, if you are in Japan, you need to change to Japan Band “76-90Mhz.”, If you are in Europe, you need to set to European band 87-108Mhz.

MUSIC

Play your music

On music menu, press **⏏** to enter music function ,and by pressing + / - view sub-menu from up to down: “Resume”, “Files” “playlists”.

Resume: play music from the last music stop point .

Files: Display all of music files, Press **⏏** to confirm your option and start to play your music.

Playlists: you can create playlist or find music, you can seeking and play music by “all songs” , “Artists” , “Albums”, “Genres”

When the device is playing songs, press **M** button to enter below sub-menus, and press **⏏** to enter the option you want.

- Play mode

Here appears 4 options, Play music from..., Repeat , Shuffle and Repeat Setting1

- Equalizer

Choose music mode as you want - Off , Rock , Funk , Hip-Hop, Jazz, Classical, Techno


- Add to playlist

There are 3 options prepared for you, including “Playlist on the go [1]”, “Playlist on the go [2]” and “Playlist on the go [3]”, you can add the song which is playing to any one of these three as you like.

- Remove from playlist

You can remove the song which is playing to any one of these three Playlist as you like.


- Delete



It will show”...(song name)” delete? Press  to choose yes to delete this song.

- Bookmarks

It is marked by the stopping time as “hh:mm:ss”.So you can set the stopping time before you add it for continues playing next time conveniently.

BLUETOOTH

Open the Bluetooth of the device you want to connect with the player. Select **Bluetooth on and off** , press  and select Bluetooth on .

Then select **Search for device** and click  to search the nearby devices, all of the devices which has opened its Bluetooth will be listed. Select the device you want to connect, then click  to connect. After successfully connected, it will go back to the submenu:

Bluetooth on and off : Open device bluetooth ;


Search for Device: choose from the available devices and select to connect




Device list : you can find all of Bluetooth device

After connect Bluetooth successfully , Press  Back main menu .


In the end , you find music or radio on main menu to play music or FM by Bluetooth receiver device .

RECORDER

On record menu and press  to enter voice recording. The following lists will show: Start Voice Recording, Recordings library, Recording Format and Record Settings. Press+/-to navigate these lists.

- Quick Record:scroll to “Start Voice Recording” ,press  to start your recording, and long press  to quickly save recording content.
- In recording library view recording files and delete all files.
- Tap  to pause or stop recording,
- To play, go to “Recordings Library” and play as music

PICTURES

To view pictures, select **Photo** from the main menu and press  button to enter the photo browser.

Use the **+** or **-** button to scroll through your picture and select a photo you would like to view, and press the **HI** button.

VIDEO

To watch movies, select **VIDEO** from the main menu and press the **HI** button to confirm. The video playback screen will be displayed

Movie playback controls

1. **PRE** button: previous video/Rewind(hold)
2. **NEXT** button: next video/Fast forward(hold)
3. **M** button: Enter video submenu
 - Brightness
 - Repeat
 - Delete Video
 - Create Playlist
4. **HI** button: Play/Pause
5. **VOL+** button: Increase volume
6. **VOL-** button: Decrease volume

TEXT

On ebook menu, press **HI** to enter Text. This player supports TXT file.

FILES

On files menu press **HI** to enter folder menu. Here you can check files you have stored on the device including music, recording and pictures Text .

When you play music under "Folder", it will shuffle songs by folder if you turn shuffle on.

SETTING

On setting menu and press **HI** to access the following settings: "Language", "Display setting", "Power off", "Information", "Format device", "Factory settings".

Press **HI** to default your favorite setting.

- Setting sleep timer or Auto Turn Off under "Power off".
When playing time is reach sleep timer you set, the player will power off automatically

- Choose the language according to your need
- Set brightness or Back light timer under “ display setting “
- See information about your player under “Information”
- Set the backlight time of your player
- Format the device or restore to factory setting

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

***RF warning for Portable device:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.