

**Openers Equipped with Learn Code Button (1995 to present)**

1. Press then release the "Learn Code" button on the OPENER hanging in your garage (LED will blink rapidly)
2. Press then release the button you wish to program on the remote transmitter (LED will stop blinking)
3. Press then release the same button on the remote transmitter (the LED will go out)
4. Press the same button on the remote one more time. The garage door will open indicating successful programming.

\*\*Repeat the steps above if you wish to program multiple remotes (or a multi-button remote to multiple doors). If a remote loses it's "program" repeat the steps above.

**For Openers Equipped with Program/Set Button (2010 to present)**

1. Locate the Program/Set Button and the indicator LED on the OPENER hanging in your garage.
2. Hold the Program/Set Button until the LED turns blue and then release. The LED will then blink purple.
3. Press then release the button you wish to program on the remote transmitter (the LED will stop blinking)
4. Press then release the same button on the remote transmitter (LEDs will turn off after blinking blue)
5. Press the same button on the remote one more time. The garage door will open indicating successful programming.
6. \* Repeat the steps above if you wish to program multiple remotes (or a multi-button remote to multiple doors). If a remote loses it's "program" repeat the steps above.

a) The statement "Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate."

b) The statement "Even used batteries may cause severe injury or death."

c) The statement "Call a local poison control center for treatment information."

d) A statement indicating the compatible battery type ( CR2032 ).

e) A statement indicating the nominal battery voltage 3V.

f) The statement "Non-rechargeable batteries are not to be recharged."


g) The statement "Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns."

a) The statement "Ensure the batteries are installed correctly according to polarity (+ and -)."

b) The statement "Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries."

c) The statement "Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations."

d) The statement "Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children."

⚠ WARNING	
<ul style="list-style-type: none"> <li><b>INGESTION HAZARD:</b> This product contains a button cell or coin battery.</li> <li><b>DEATH</b> or serious injury can occur if ingested.</li> <li>A swallowed button cell or coin battery can cause <b>Internal Chemical Burns</b> in as little as <b>2 hours</b>.</li> <li><b>KEEP</b> new and used batteries <b>OUT OF REACH of CHILDREN</b></li> <li><b>Seek immediate medical attention</b> if a battery is suspected to be swallowed or inserted inside any part of the body.</li> </ul>	

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.