

# **PB704**

## **Quick Use Guide**


Version V1.0



Please read the Quick Use Guide carefully before use.  
Appearance, color and accessory are all subject to  
change without notice.



## 1. Product Appearance

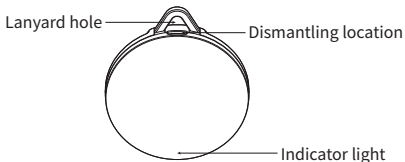

## 2. Product specifications

Battery	210mAh CR2032 disposable button cell battery
Device size	9.2*Φ38mm
Working Voltage	3V
Operating temperature	0°C to 60°C
Indicator light	Red and green

### 3. Instructions for use

1、 Pull out the battery insulator, and then the device will be turned on immediately.



2、 Contact the selling company to download the device management APP and bind the device to manage the device. When you bind the device, you need to turn on the Bluetooth of the cell phone and bring the device close to the cell phone to make it convenient to bind it quickly and successfully.

## 4. Battery Replacement Instructions

- 1、The unit uses CR2032 battery.
- 2、Please use a pry bar or other tools to separate the upper and lower cover through the grooves on the top.



- 3、Choose the battery purchased from regular supplier and insert it in the direction indicated by the arrow on the main board.



- 4、After replacing the new battery, you need to open the bound cell phone application and approach the device to synchronize the battery status.

Note: Please do not immerse the battery in water or put it into fire, please do not destroy or force open the battery, the battery is disposable and does not allow charging! To protect the environment, please recycle the used battery.



## **WARNING**

### **KEEP BATTERIES AWAY FROM CHILDREN**

Swallowing may lead to serious injury or death in 2 hours, due to chemical burns and potential perforation of the oesophagus.

If you suspect your child has swallowed or inserted a button battery, immediately call the 24-hour Poison Information Centre for emergency specialists advice.

## **5. Important reminders**

1. Battery life time varies depending on individual usage habits. Frequent audible searching will accelerate the consumption of the battery.

2, In order to ensure better dustproof and waterproof, after installation, please be sure to press the upper and lower covers to ensure that the equipment is sealed.

3、Because the device adopts crowdsourcing network, there may be a delay in positioning, such as the management platform and APP no data, you can wait for half an hour to refresh the location information. And try to open the device in the place where there are more cell phones.

4、Please do not disassemble the device, improper handling by non-professionals may cause damage to the device.

## **6. FAQ**

### **1、How to confirm that the device has been turned**

There will be a buzzer reminder after powering on, accompanied by flashing LEDs.

### **2、How to turn off the device?**

The device has low power consumption and can not be shut down, if you need to shut down the device, you need to pull out the battery.

## 7. FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.