 
 


802.11ax-HE20 - Ant 1 (Nss = 1)

 
Channel 165 (6775MHz)

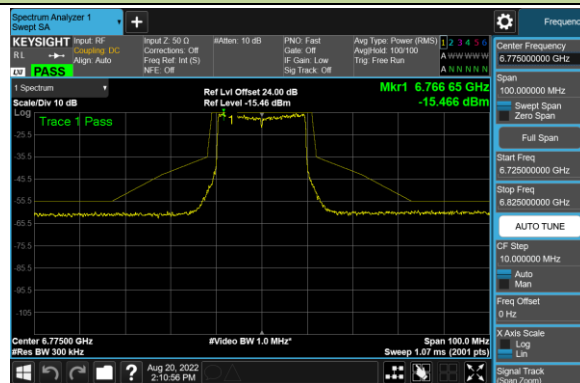


Channel 181 (6855MHz)

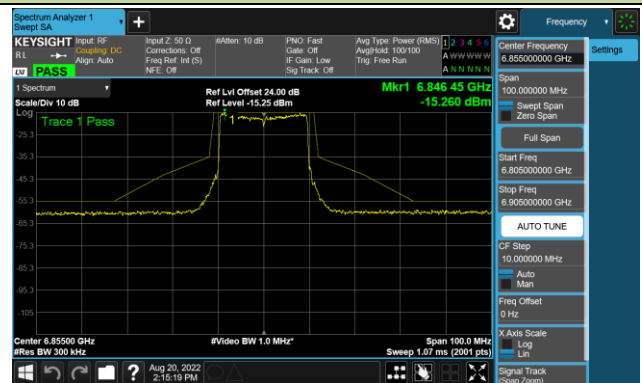


Channel 197 (6935MHz)

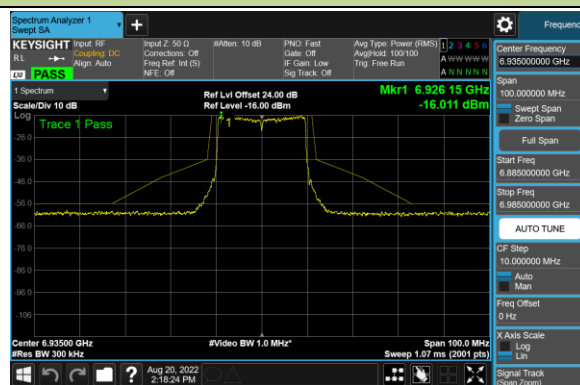

Channel 213 (7015MHz)

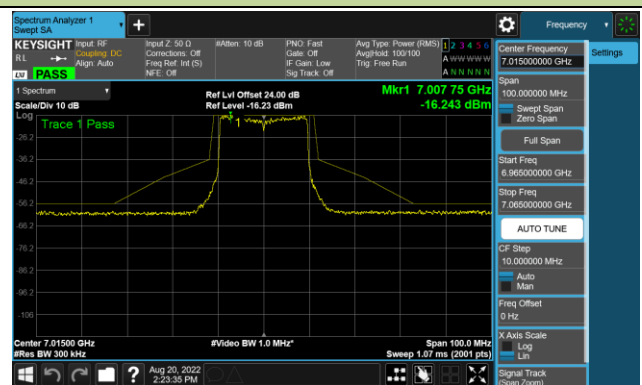 


Channel 229 (7095MHz)

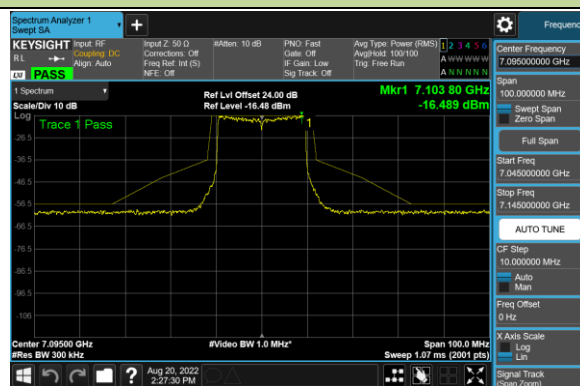 


802.11ax-HE40 - Ant 1 (Nss = 1)

 
Channel 35 (6125MHz)

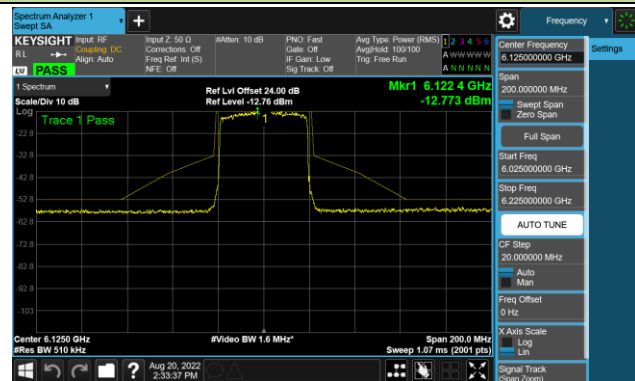


Channel 51 (6205MHz)

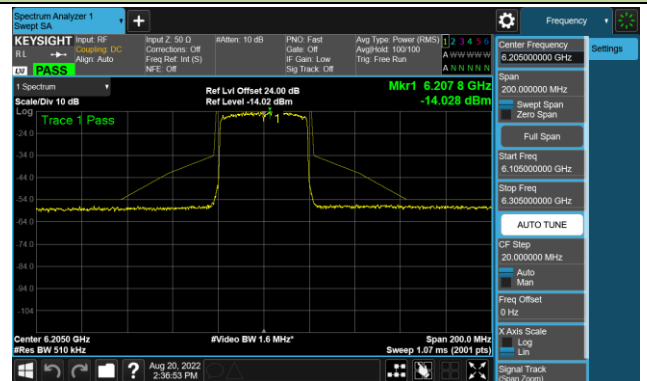 


Channel 67 (6285MHz)

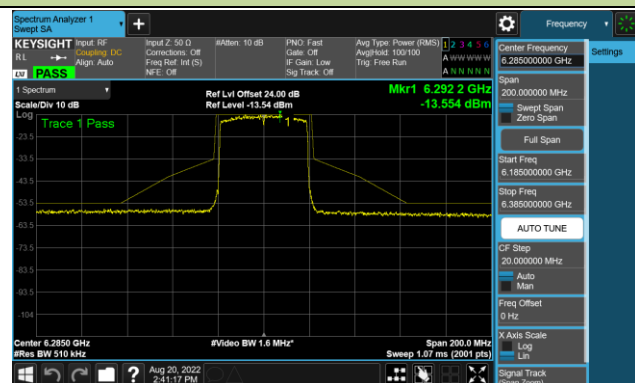 


Channel 83 (6365MHz)

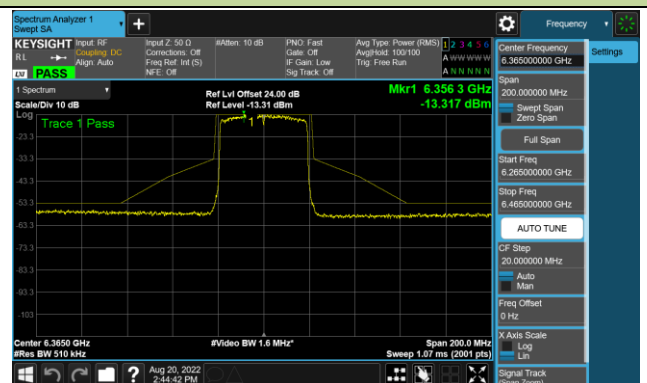 


Channel 99 (6445MHz)

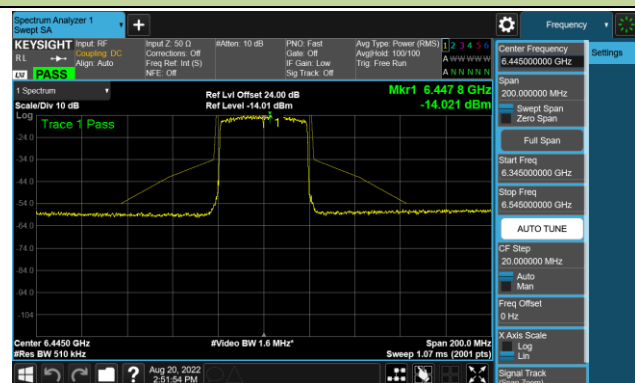 


Channel 115 (6525MHz)

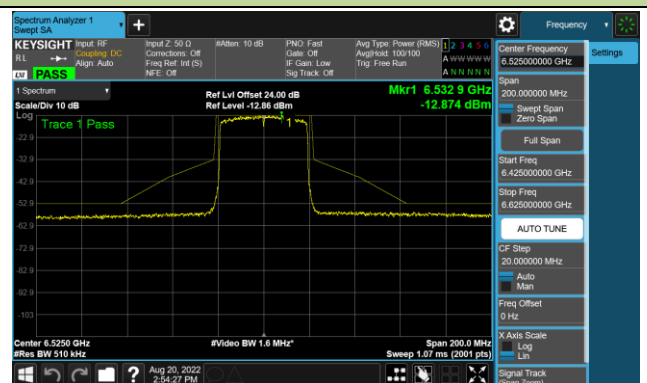 

Channel 131 (6605MHz)

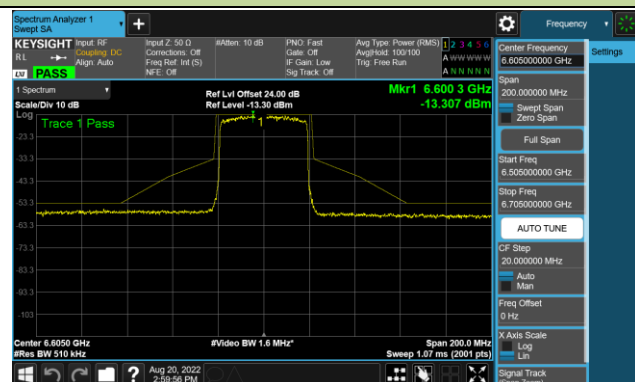 


Channel 147 (6685MHz)

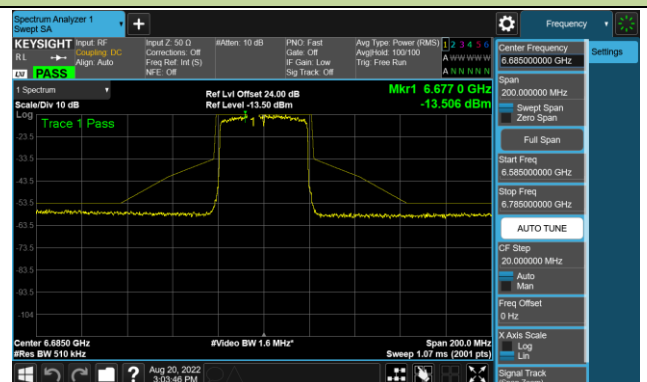 


802.11ax-HE40 - Ant 1 (Nss = 1)

 
Channel 163 (6765MHz)

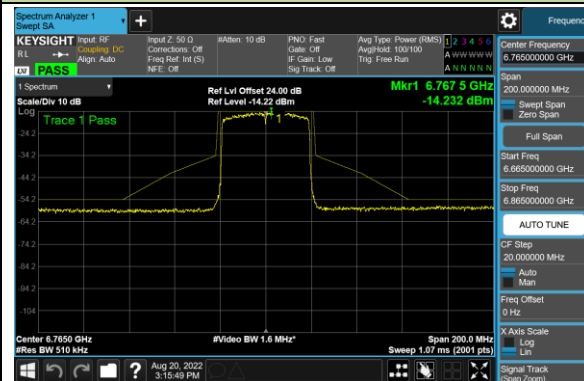


Channel 179 (6845MHz)

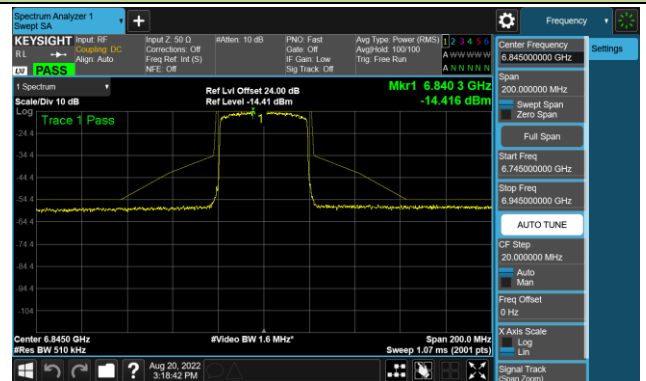 


Channel 195 (6925MHz)

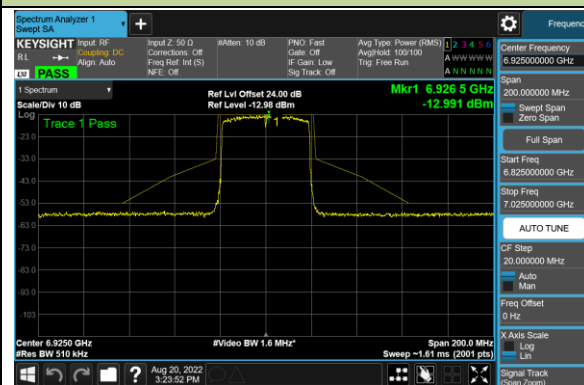 

Channel 211 (7005MHz)

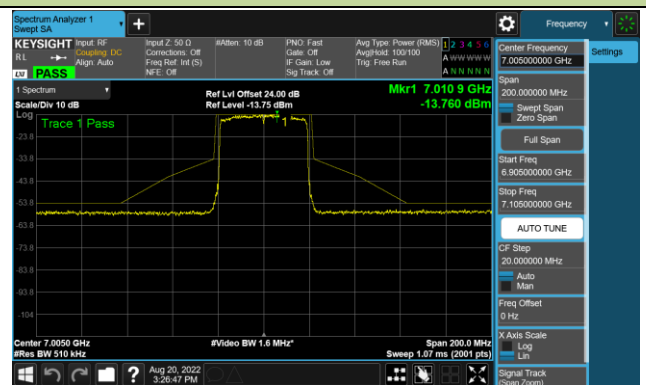 


Channel 211 (7085MHz)

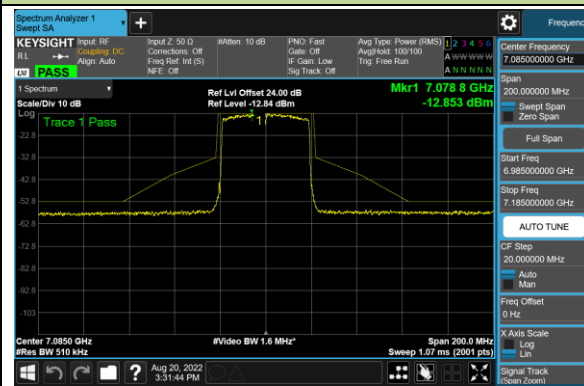 


802.11ax-HE80 - Ant 1 (Nss = 1)

 
Channel 39 (6145MHz)

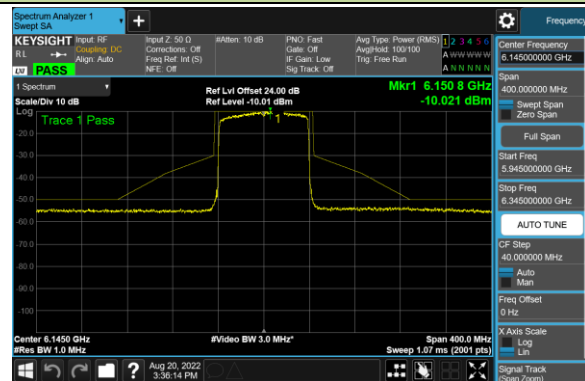


Channel 55 (6225MHz)

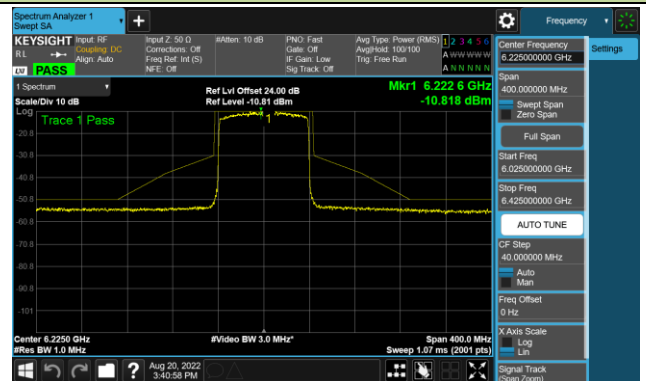 


Channel 71 (6305MHz)

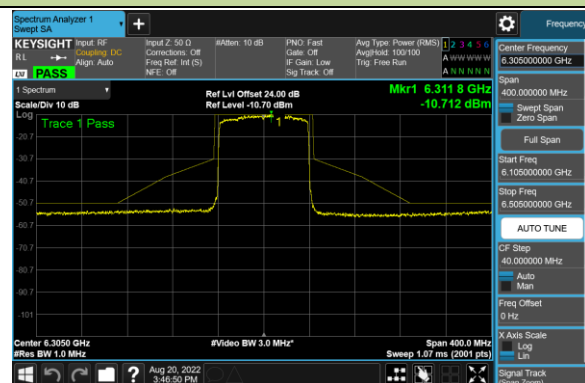 


Channel 87 (6385MHz)

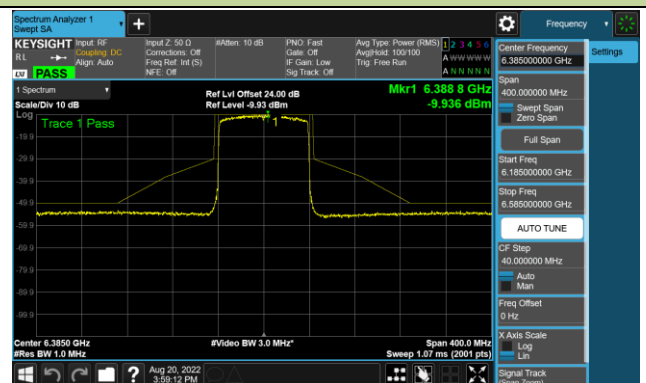 


Channel 103 (6465MHz)

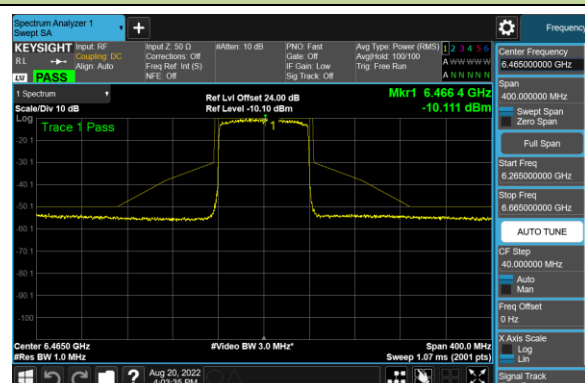 


Channel 119 (6545MHz)

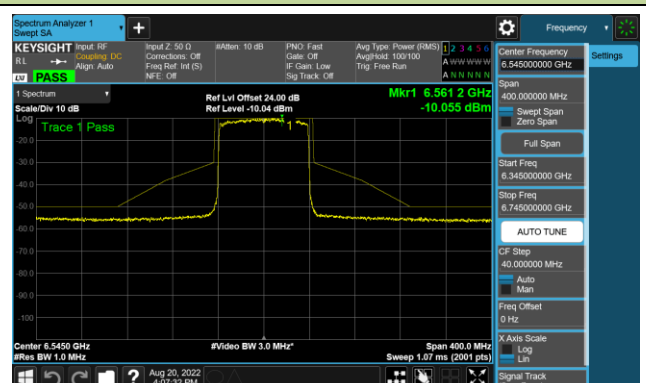 

Channel 135 (6625MHz)

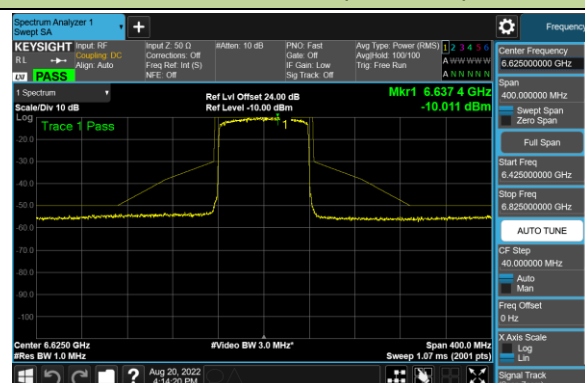 


Channel 151 (6705MHz)

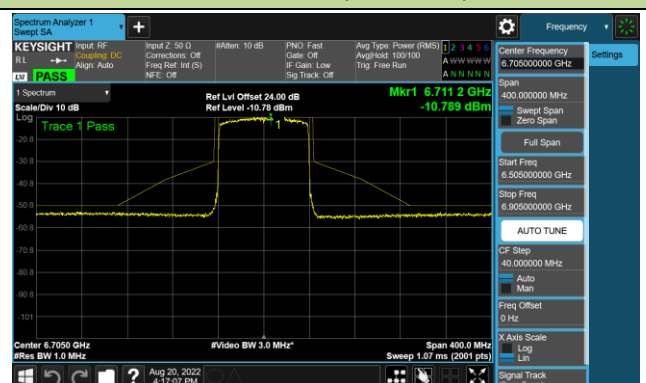 


802.11ax-HE80 - Ant 1 (Nss = 1)

 
Channel 167 (6785MHz)

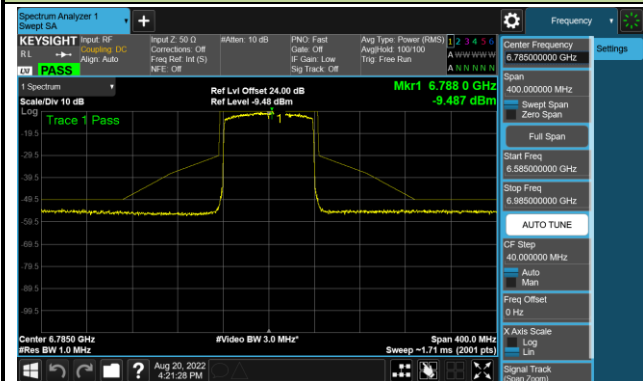


Channel 183 (6865MHz)

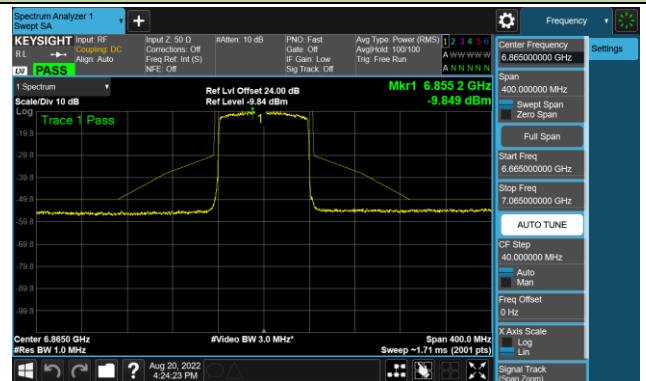 

Channel 199 (6945MHz)

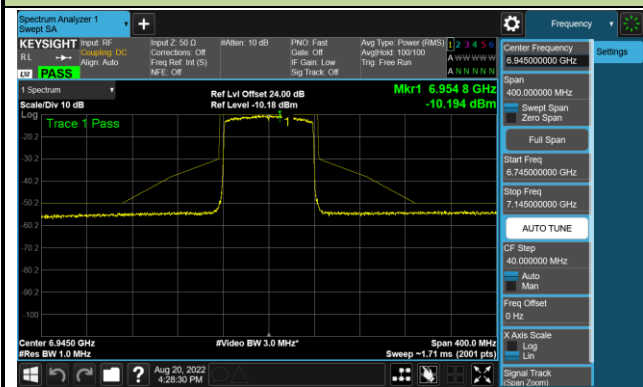 


Channel 215 (7025MHz)

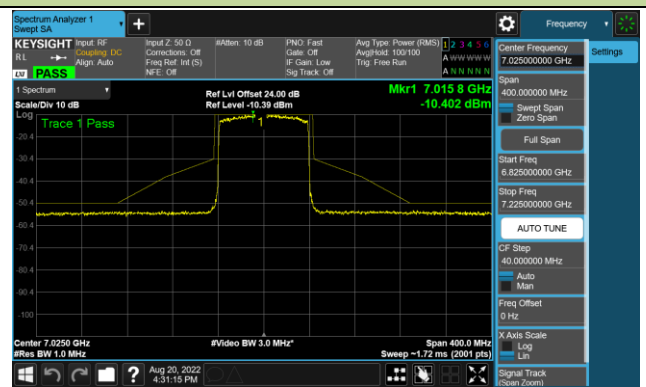 


802.11ax-HE160 - Ant 1 (Nss = 1)

 
Channel 47 (6185MHz)

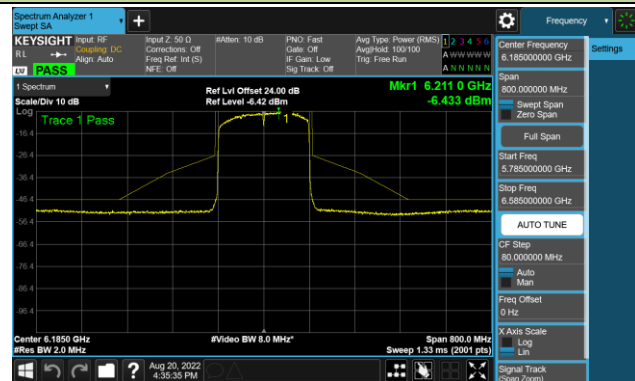


Channel 79 (6345MHz)

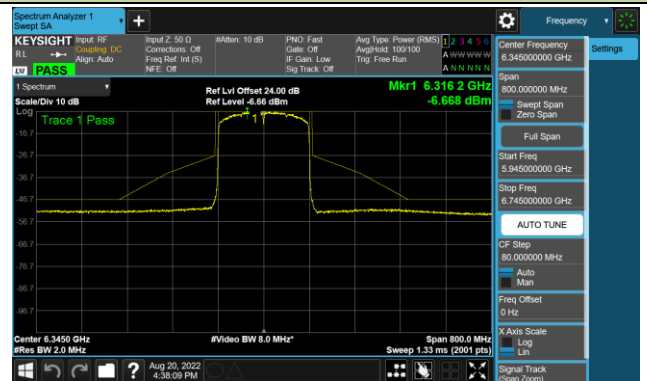 


Channel 111 (6505MHz)

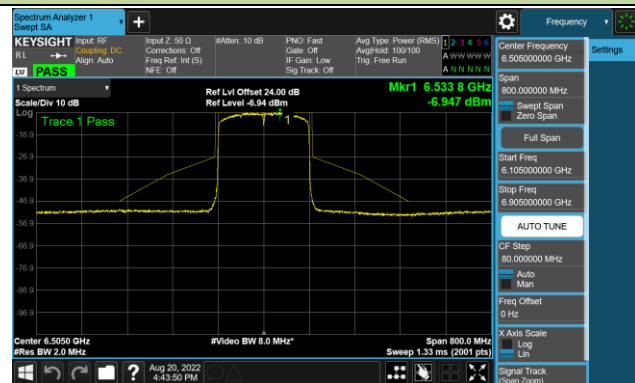 


Channel 143 (6665MHz)

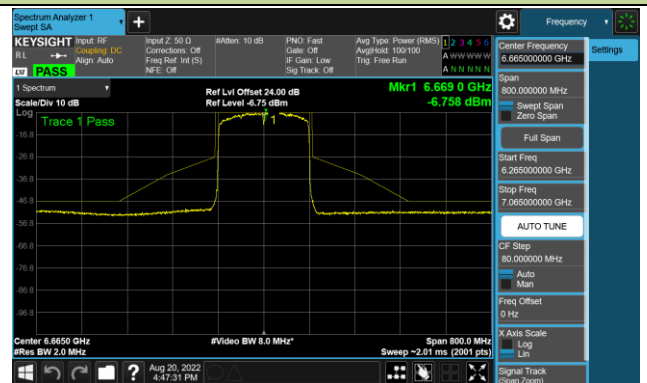 

Channel 175 (6825MHz)

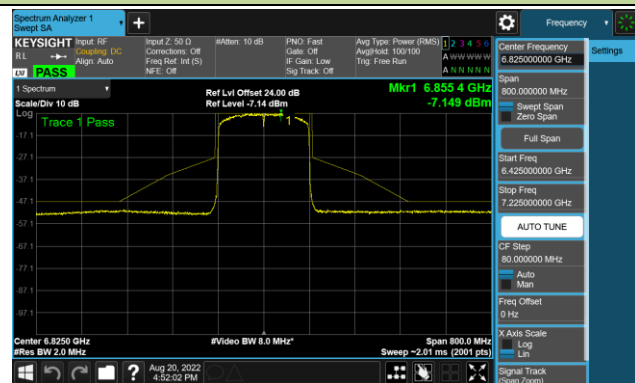 


Channel 207 (6985MHz)

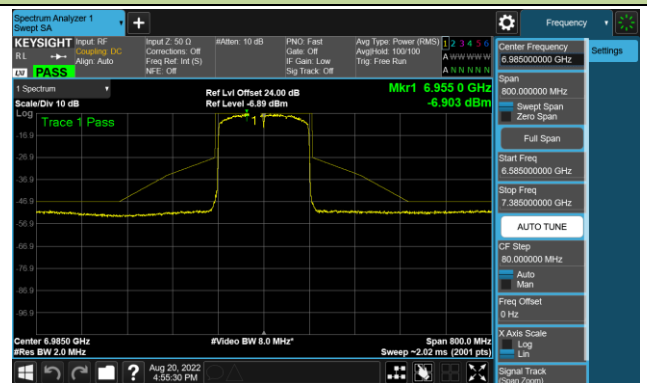 


802.11ax-HE20 - Ant 2 (Nss = 1)

 
Channel 37 (6135MHz)

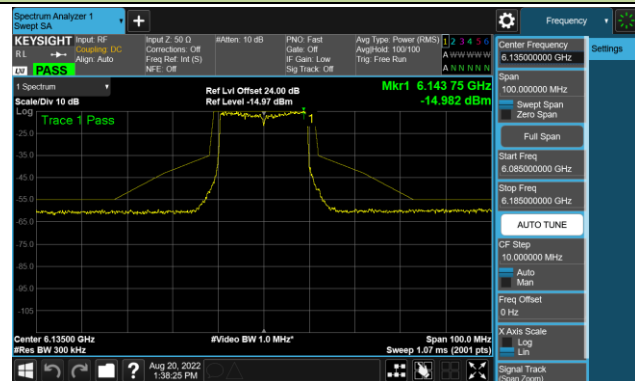


Channel 53 (6215MHz)

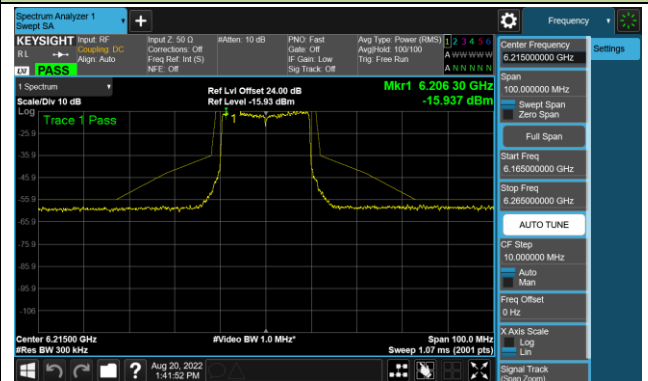 


Channel 69 (6295MHz)

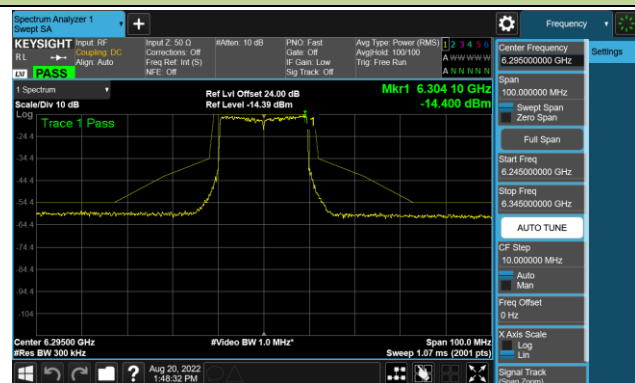 


Channel 85 (6375MHz)

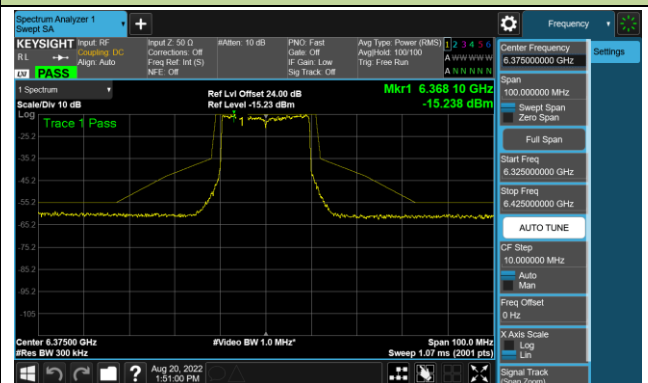 


Channel 101 (6455MHz)

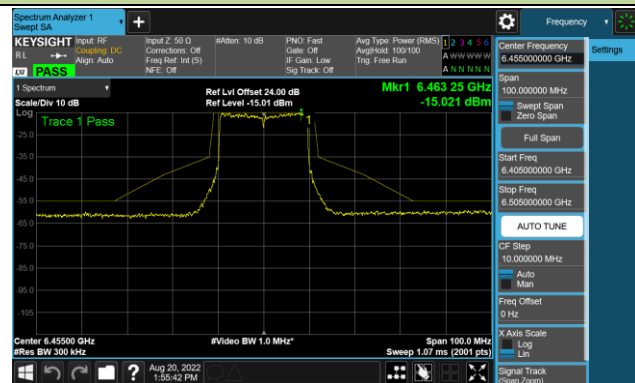 


Channel 117 (6535MHz)

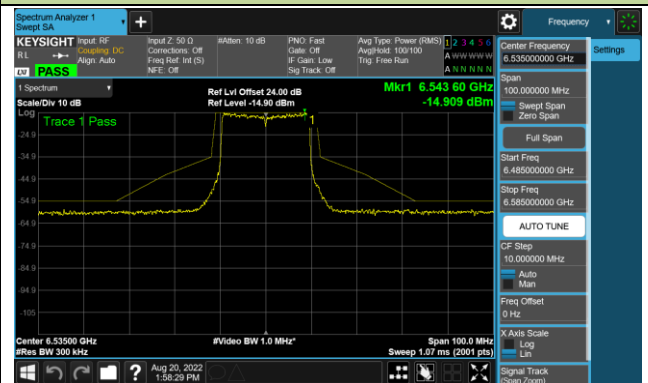 

Channel 133 (6615MHz)

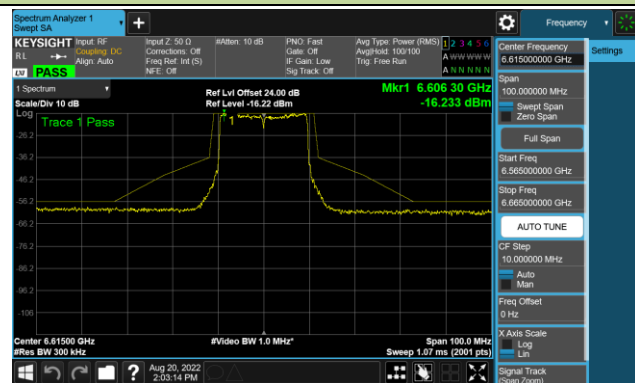 


Channel 149 (6695MHz)

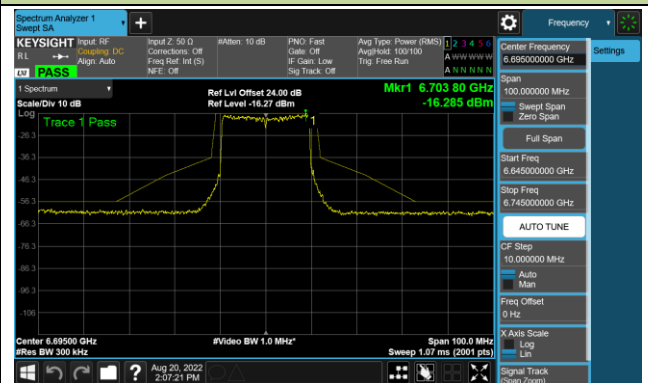 


802.11ax-HE20 - Ant 2 (Nss = 1)

 
Channel 165 (6775MHz)

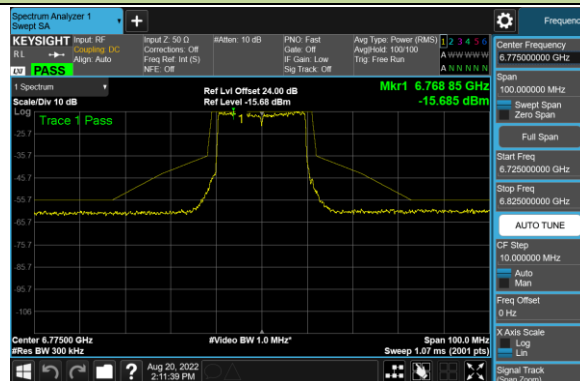


Channel 181 (6855MHz)

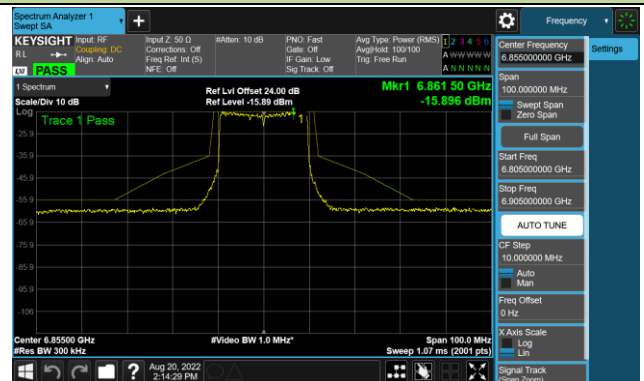 


Channel 197 (6935MHz)

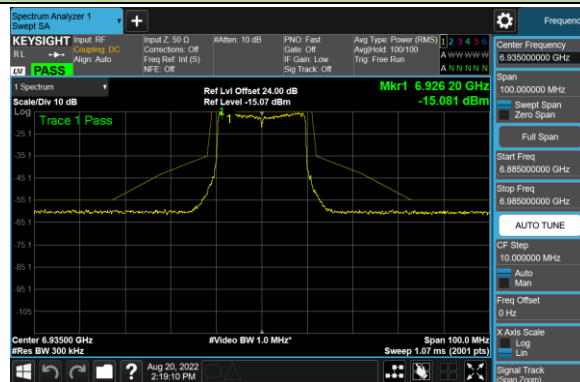 

Channel 213 (7015MHz)

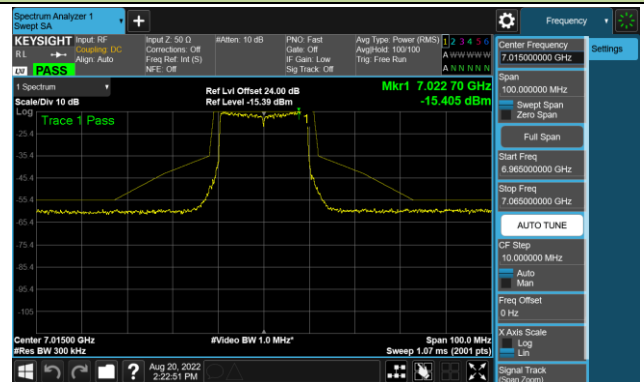 


Channel 229 (7095MHz)

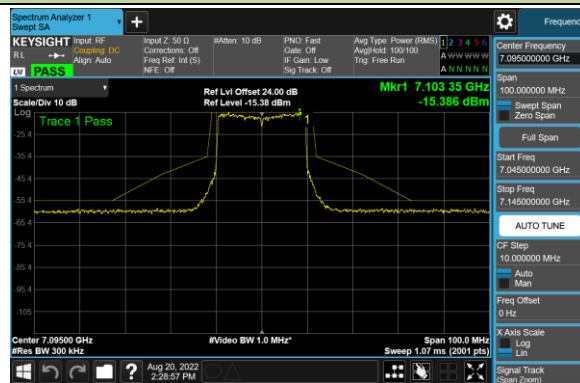 


802.11ax-HE40 - Ant 2 (Nss = 1)

 
Channel 35 (6125MHz)

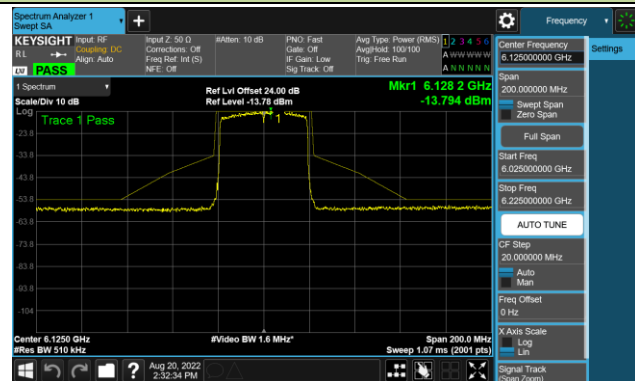


Channel 51 (6205MHz)

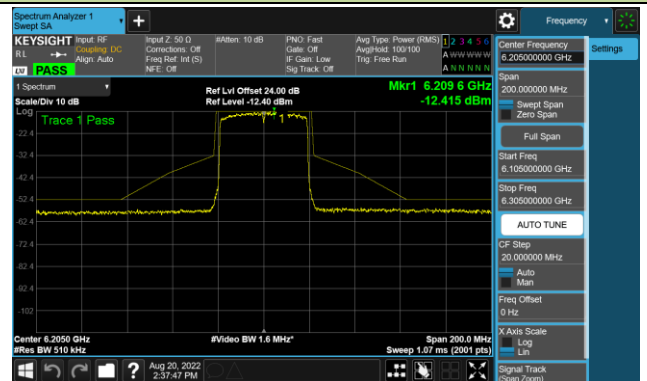 


Channel 67 (6285MHz)

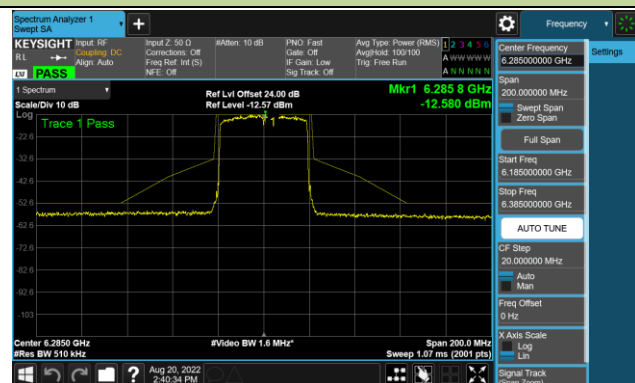 


Channel 83 (6365MHz)

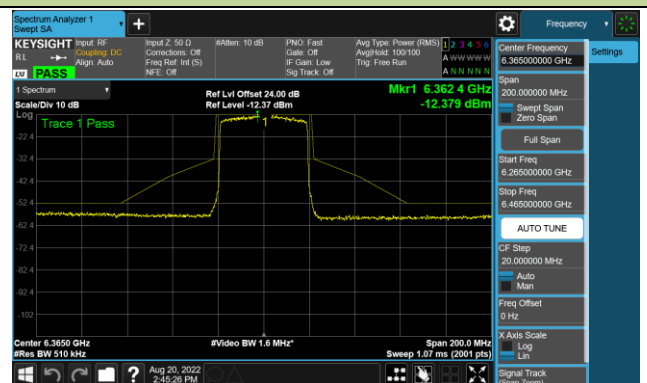 


Channel 99 (6445MHz)

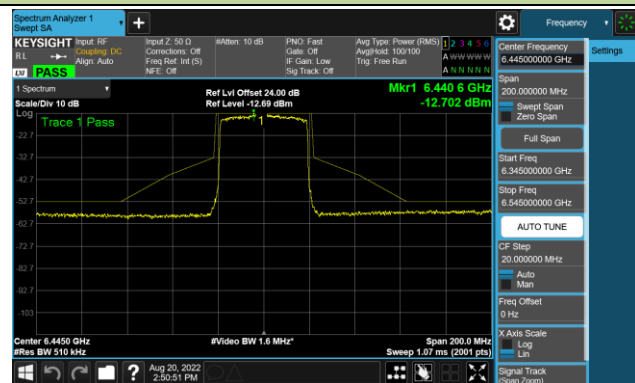 


Channel 115 (6525MHz)

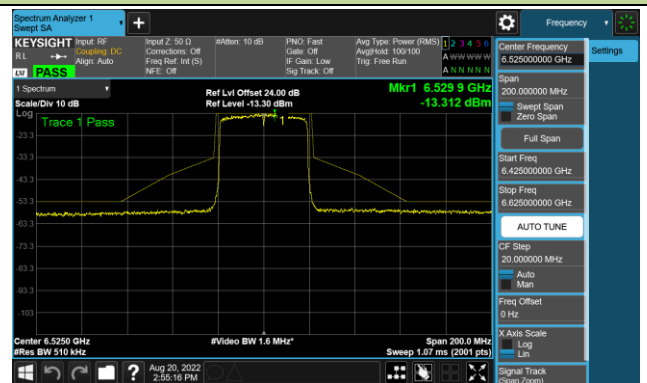 

Channel 131 (6605MHz)

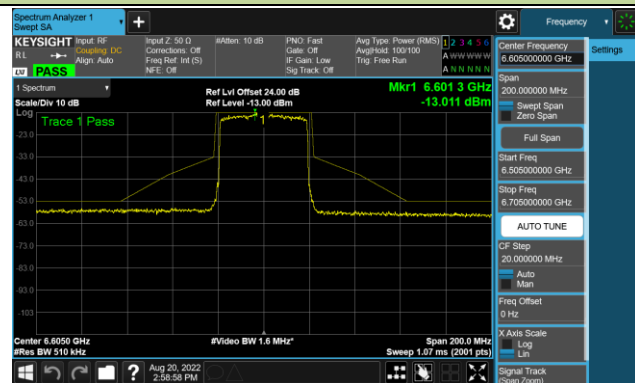 


Channel 147 (6685MHz)

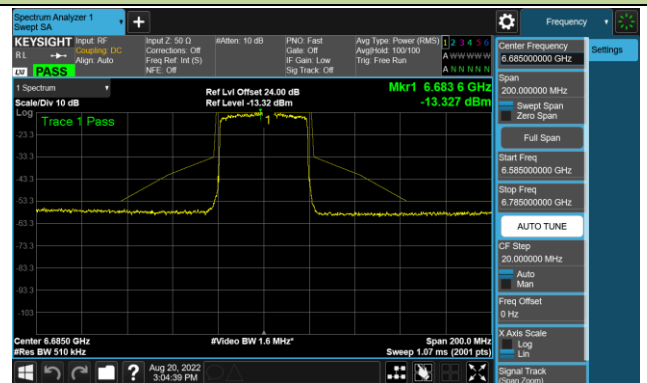 


802.11ax-HE40 - Ant 2 (Nss = 1)

 
Channel 163 (6765MHz)

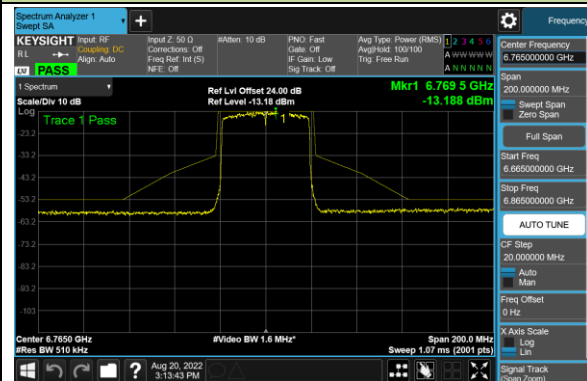


Channel 179 (6845MHz)

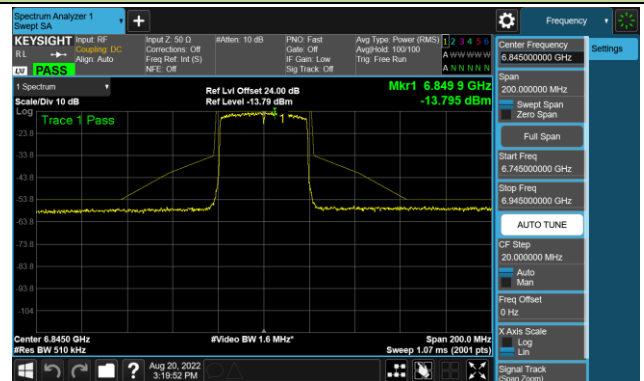 


Channel 195 (6925MHz)

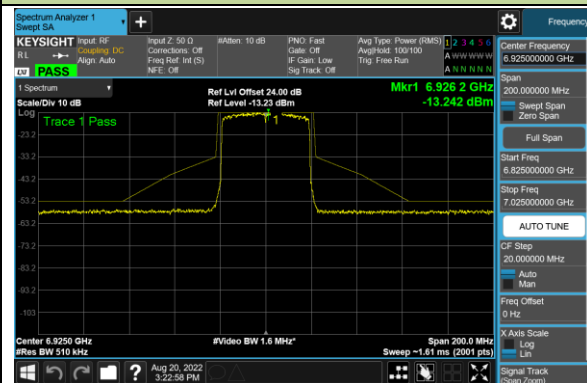 

Channel 211 (7005MHz)

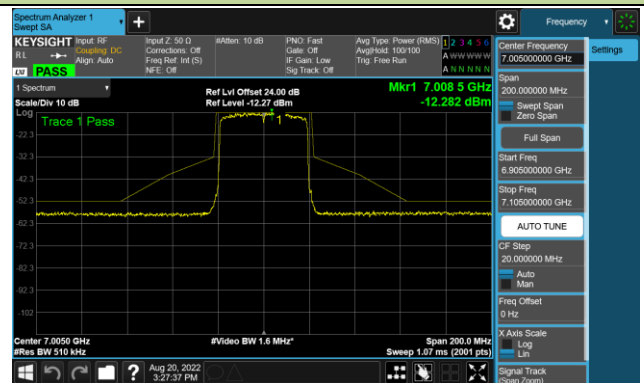 


Channel 227 (7085MHz)

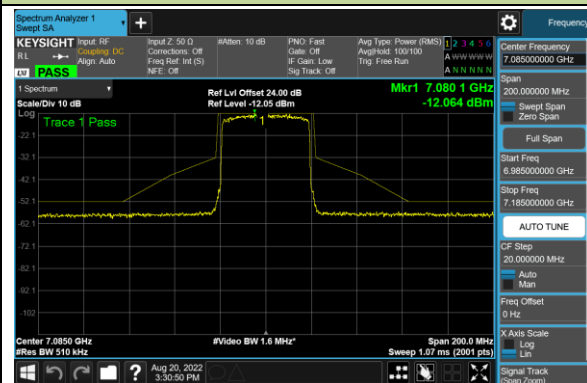 


802.11ax-HE80 - Ant 2 (Nss = 1)

 
Channel 39 (6145MHz)

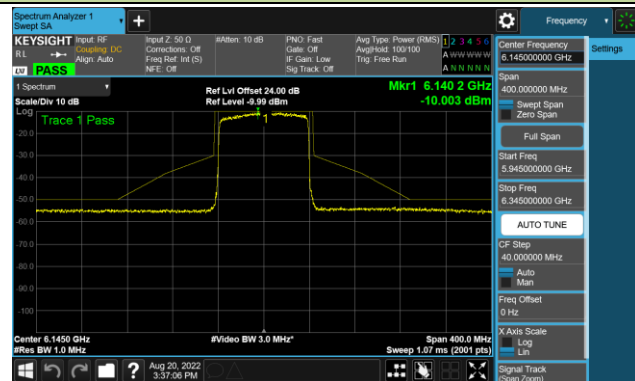


Channel 55 (6225MHz)

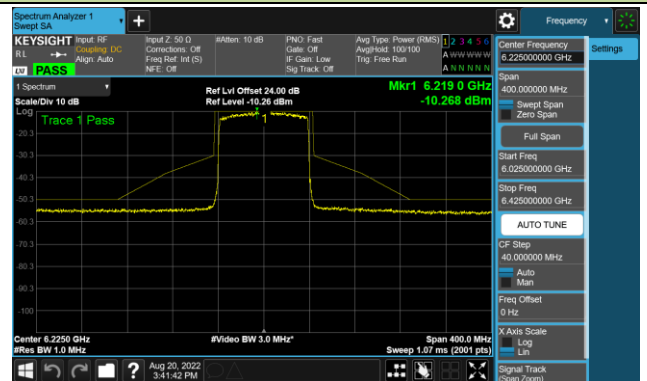 


Channel 71 (6305MHz)

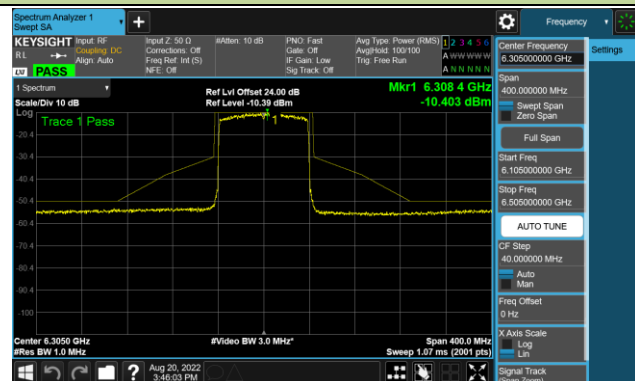 


Channel 87 (6385MHz)

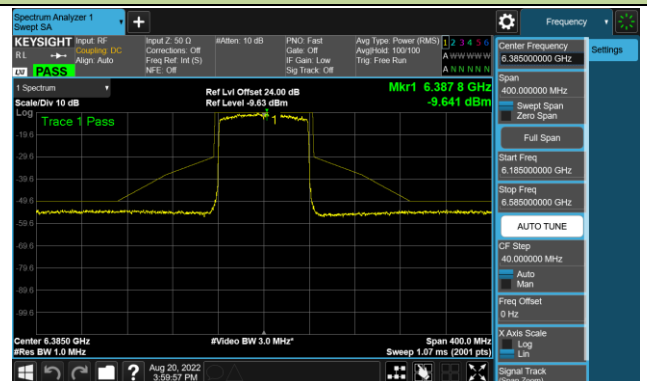 


Channel 103 (6465MHz)

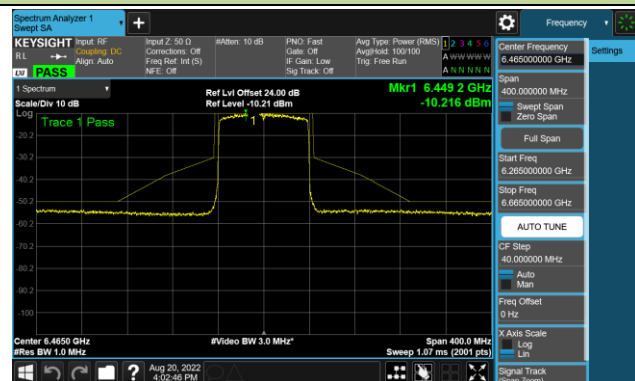 


Channel 119 (6545MHz)

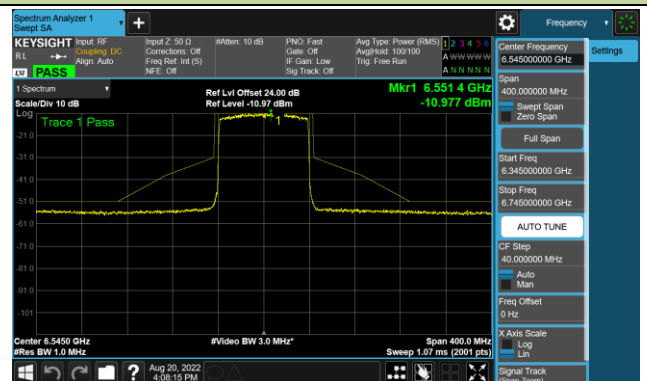 

Channel 135 (6625MHz)

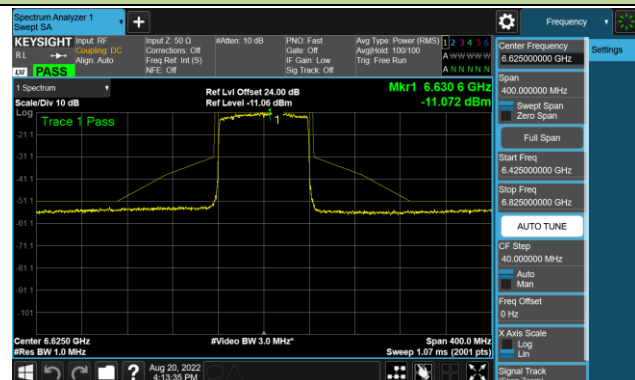 


Channel 151 (6705MHz)

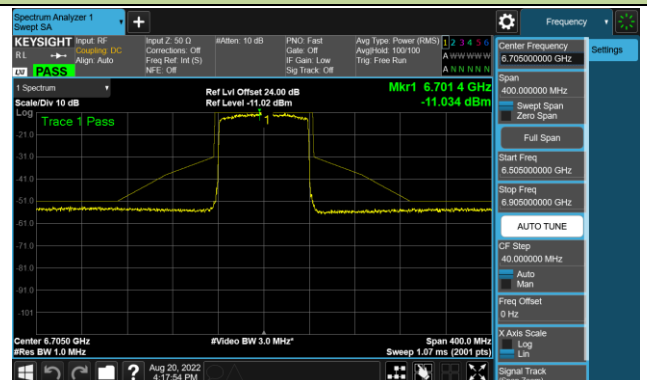 


802.11ax-HE80 - Ant 2 (Nss = 1)

 
Channel 167 (6785MHz)

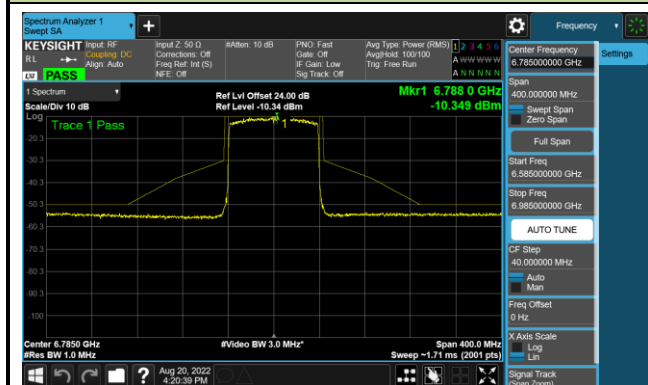


Channel 183 (6865MHz)

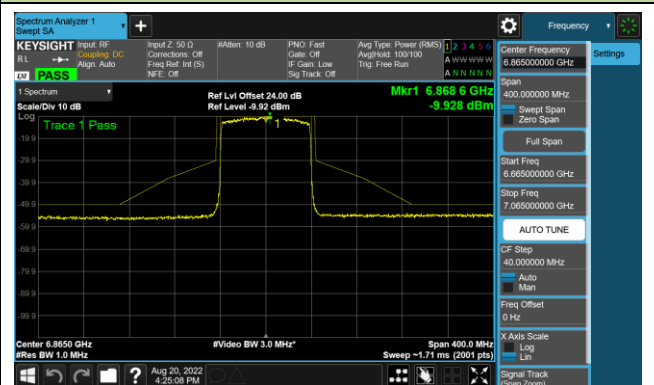 

Channel 199 (6945MHz)

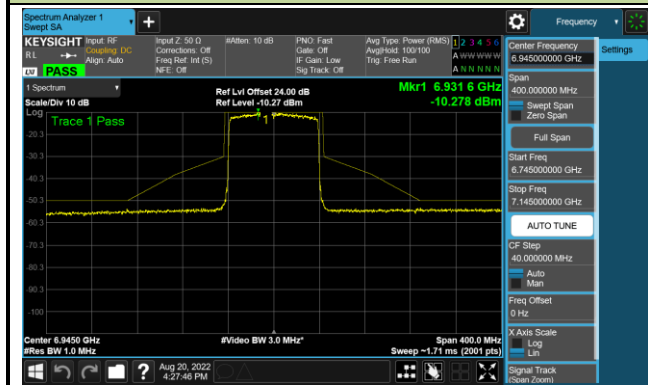 


Channel 215 (7025MHz)

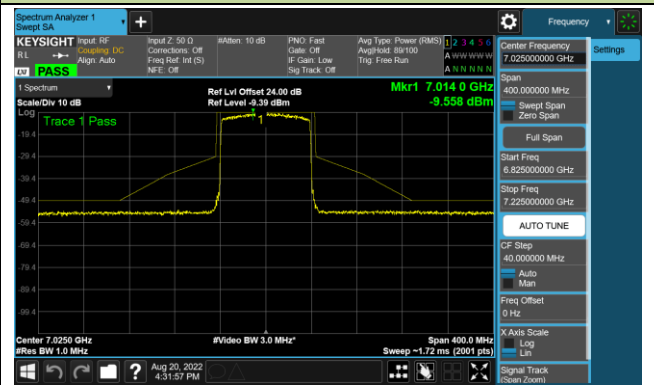 


802.11ax-HE160 - Ant 2 (Nss = 1)

 
Channel 47 (6185MHz)

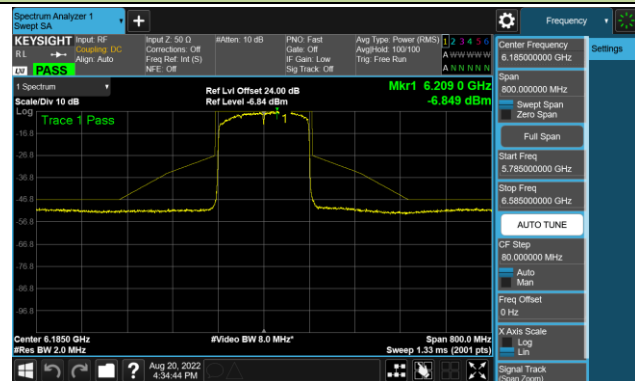


Channel 79 (6345MHz)

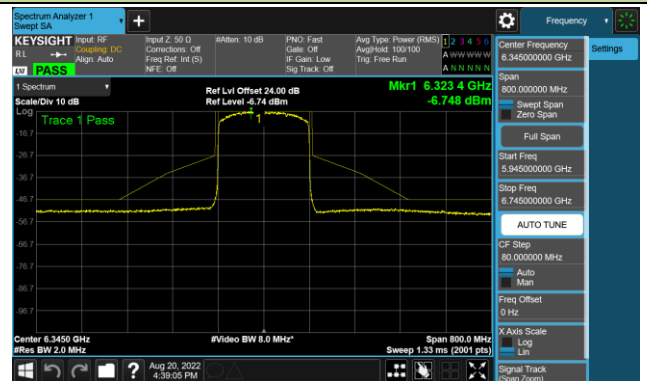 


Channel 111 (6505MHz)

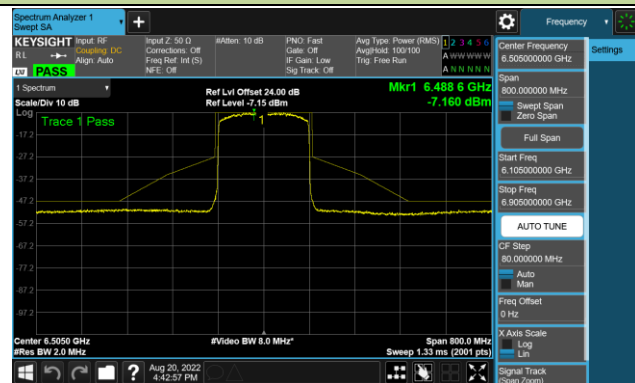 

Channel 143 (6665MHz)

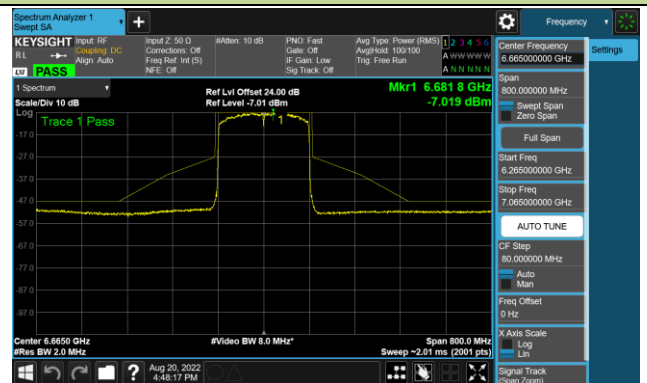 

Channel 175 (6825MHz)

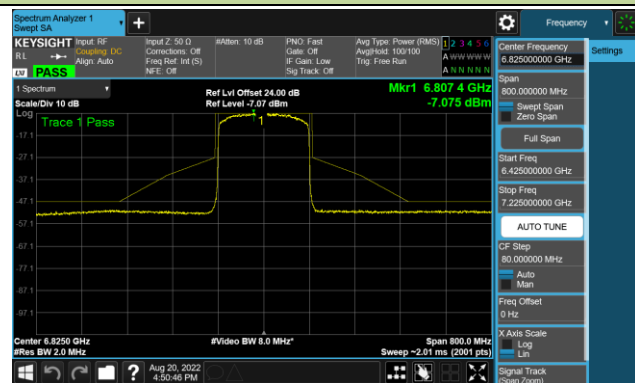 

Channel 207 (6985MHz)

