Model: OZ-TP10	


480.0 mm

## 80.0 mm

#### What's In The Box?

- Sound Stick Magnetic Speaker
- USB-C Charging Cord
- Pinned Sticker • Instruction Manual

#### **Get To Know Your Sound Stick**

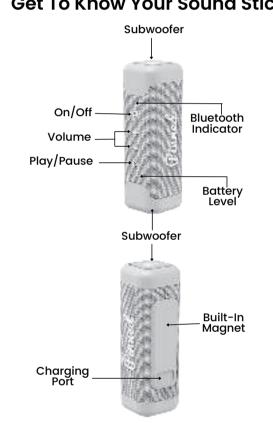


### **How To Use Your Sound Stick**


- 1. Charge Sound Stick for two hours or until the four lights on the battery level indicator are on.
- 2. Press and hold the  ${\boldsymbol \theta}$  button to turn unit on. 3. The speaker will enter into Bluetooth pairing
- mode with the indicator flashing.
- 4. Find "Pinned Golf Sound" in your Bluetooth devices list and select it to pair.
- 5. Once paired and connected, you'll hear an audible confirmation from the Sound Stick and the LED indicator will stay on. Your speaker is ready to use!

## **Dual Sound Stick Pairing**

- 1. Turn on both Sound Sticks.
- 2. Press and hold the play/pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound. The default is the primary speaker that you operated the Play/Pausebutton of this speaker for pairing initially.
- 3. Release play/pause button. It can take a few more seconds before speakers connect to each other. Check the indicator lights to distinguish L/R channel: The white light on one speaker is flashing white for every 3 seconds that should be the left channel (the primary speaker); the white light on the other speaker is solid white that should be the right channel.
- 4. Go into the Bluetooth menu on your phone and pair the speakers with your phone by selecting "Pinned Golf Sound" (it will only display I speaker which is both combined in to one connection).
 
### **Features**

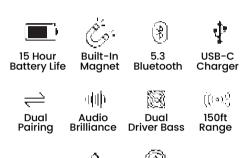

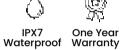

### **Tech Specs**

- Dimensions | 192\*68\*67mm
- Weight | 1.32 lbs
- Bluetooth | V5.3 • Playing time | 15 hours
- Waterproof Rating | IPX7
- Battery | Rechargeable 1 800mAh\*2
- Charging | USB Type C
- TWS Connection | Dual Speaker Pairing

160.0 mm

# 正面

# **Troubleshooting**

- The Sound Stick does not turn on? o Please recharge your Sound Stick.
- The Sound Stick does not turn off or does not respond?
- o Please reset your Sound Stick. Simply press and hold the  $oldsymbol{arPhi}$  button for six seconds to automatically reset the speaker. There is no sound?
- o Adjust the volume. Make sure that your phone is in range. Ensure there is no obstacles in the way that can block/disturb
- There is poor sound quality?
- Move the Sound Stick closer to your phone. • The Sound Stick turns off automatically?
  - Yes, after 10 minutes of no music playing, the Sound Stick will turn off.

# **One Year Limited Warranty**

Your Pinned Golf Sound Stick Speaker is warrantied to be free of defects in materials and workmanship for one year after the date of

In the event of a defect under this warranty, we will, at our option, repair or replace the product, provided that you return the product using our prepaid postage.

This warranty does not cover damages caused by misuse, improper handling, installation, or maintenance provided by someone other than Pinned Golf. Please note, this warranty is not transferable.

## **Safety Warning**

- Do not disassemble, repair or modify this product by unauthorized personnel.
- Please read the user manual before using this product and follow the instructions for correct operation. Improper use may cause damage.
- This product contains batteries, please do not use it in a flammable environment.
- Do not expose this product to excessive heat or cold, as this may cause battery damage, leakage, or explosion.
- Please ensure that the power adapter for this product matches the electrical outlet and use the
- manufacturer's recommended charging cable. • Do not use this product near flammable materials
- to avoid fire hazard. • This product uses a Lithium based battery. Lithium batteries can overheat and cause damage if
- physically abused. • If this product appears abnormal, such as overheating, emitting strange smells, smoking, etc., please stop using it immediately and contact us.

## **Legal Notice**

By using this product, you agree that Pinned Golf LLC, will not be held legally responsible for any injury or damage to you, or any person or property caused by the user's improper operation and/or poor judgment while using this product.

Note: See Limited Warranty for other limitations to our liability.

FCC Warning

can radiate

This device complies with part 15 of the FCC Rules Operation is subject to the following two

(1) This device may not cause harmful interference and (2) this device must accept any interference

received, including interference that may cause

undesired operation Any Changes or modifications not expressly approved by the party responsible for compliance

void the user's authority to operate the equipment

Note: This equipment has been tested and found to comply with the limits for a Class B digital

pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and

radio frequency energy and, if not installed and used in accordance with the instructions, may harmful interference to radio communications.

However, there is no guarantee that interference occur in a particular installation. If this

equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to

correct the interference by one or more of the following measures: - Reori ent or relocate the receiving antenna.

-Increase the separation between the equipment and recei ver. - Connect the equipment into an outlet on a circuit

different from that to which the receiver is connect ed.

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.