



Fit the headphone to your ear

the fit should feel tight and secure in your ear.

For optimal audio performance ,it's important to choose the Use the earbuds for the first time correct size earplug that gives you the best comfort and fit in Step one: pairing the earbuds

S M L

Remove the earbuds from the charging case. Insert the earbuds Move the earbuds from the charging case, they will be turned in your ear to test the fit for comfort and stability .The original on and pair with each other automatically. size of earplug is M ,please try each of the earplug sizes and

Instructions

Step two: pairing with the smartphone

Turn on the Bluetooth function of the smartphone, search the available Bluetooth devices until see "TWS-T8" on the list, select it to establish connection.

TWS-T8 Connected (i)

Next time onwards

Move the earbuds from the charging case and insert them in your ears, they will link to the smartphone witch was connected last time automatically.

Mono earbud using

Power on/off

Move the earbud from the charging case to power on and put it in Playback/Pause: single tap the charging case to power off. You can also power it on/off manually by tap and hold on the

Each one earbud could be used separately to connect the

touch control area for several seconds. Skip backward: Double click the L earbud

> indicator light Reject a call: tap and hold Redial the last number: double tap while not in music mode

Indicator light status Flashes blue slowly: no link

smartphone for playback or call function.

Flashes blue for 2 times by every 5 seconds: link normal Flashes red: low power

Flashes red and red alternately: wait for pair with zhe

Activate Siri

Triple tap the earbud to activate Siri and do it again to exit.

Headphone control

Skip forward: Double click the R earbud

Answer/End a call: single tap

Volume control: tap and hold the R earbud for volume up and L earbud for volume down



Factory Reset

Put the earbud in the charging case. Triple tap the touch control area while the indicator glowes red. The indicator will flash and extinguish after reset successfully.

Charging the earbud

Put the earbuds in the charging case until they magnetically snap into the place to start charging and the indicator on the earbud growes red.

The indicator will extinguish when fully charged.

Do not press the charging pins hard to avoid damage.



Close the lid firmly while charging

Charging the charging case

Plus the charging case into a USB power supply (5V1A) with the attached cable. Highly recommend you to use the USB charger that is

manufactured by regular producer.

Check the battery level

The indicators glow according to the battery level as follows: · If three indicators glow solid, the battery is fully charged. · If only one indicator glows solid, the battery is low. Charge the case battery.

When the battery fully charged, pull out the USB cable from the charging case.

Specification

Support protocol: A2DP/AVRCP/HFP/HSP Frequency range: 2402MHz 2480MHz Transmission distance : ≦ 10m

Audio playback time: about 3 hours

Earbud charge time : within 60 minutes

WARNINGS/CAUTIONS

or the warranty will lose effectiveness.

Charging case charge time: about 3-4 hours

Supported system: all Bluetooth devices and smartphones

Don't disassemble the earbuds and charging case

The earbuds and charging case contain a lithium-ion battery,

The earbud has a certain waterproof ability, but not

do not expose them to the fire or excessive temperature.

suitable for swimming and do not let it touch hot water.

place to check. If this situation is sustained, pls contact us. Q: Why can not play music after reset?

A: It's maybe affected by the environment, charge to another

A: You must pair the earbud with smartphone again Delete the "TWS-T8" from the connectd devi ce list and search again for new paring.

Q: What is "one link two"?

A: The earbud can link to 2 smartphones at the same time. Steps: link to the first smartphone and then switch off the Bluetooth of this smartphone. Link to the second smartphone

Q: Why is the headphone sound intermittent?

Q&A

and then switch on the Bluetooth of the first smartphone.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.