


USER MANUAL

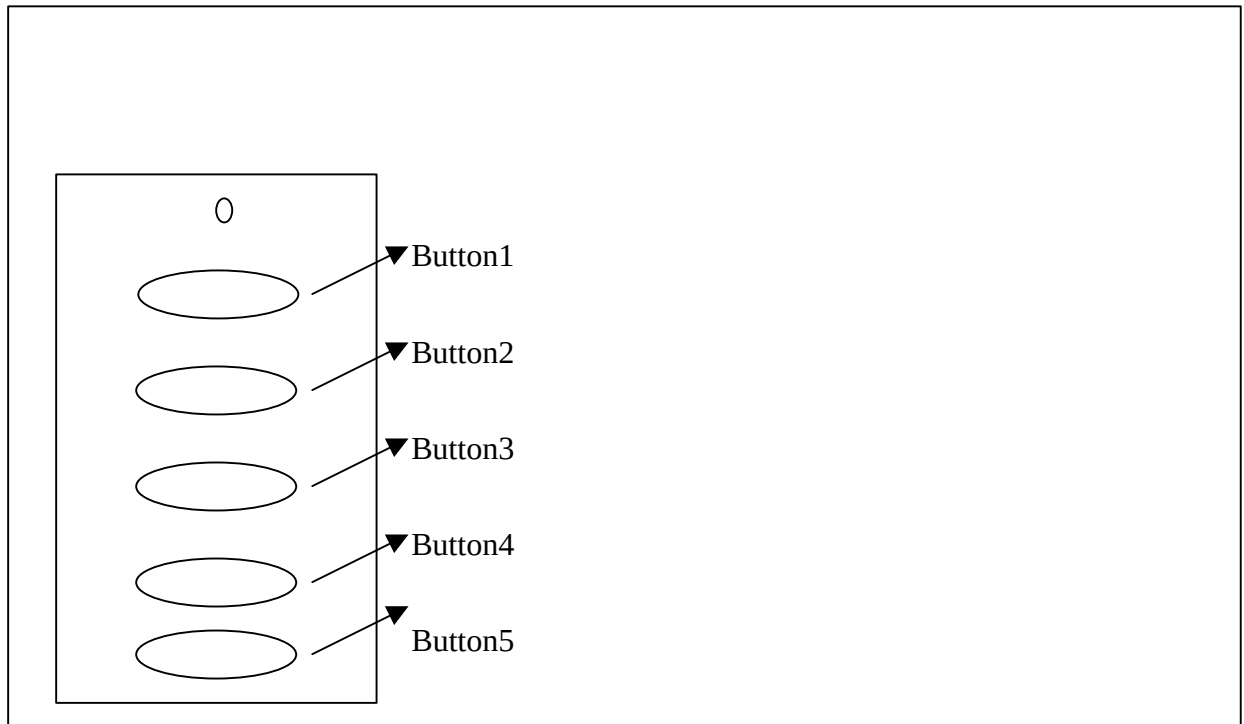

- input voltage: 3V
- RF frequency is 303.8MHZ
- Receive distance 12 meter
- Button operation
The maximum are five buttons every button have its specific command .
It will send this command by RF and led will on when user press button to receiver
then receiver will action follow its command.
When user release button will stop send RF signal.

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment