### QUICK START GUIDE

### QUICK START GUIDE

### QUICK START GUIDE QUICK START GUIDE

### QUICK START GUIDE

## TRUE WIRELESS STEREO EARBUDS TRUE WIRELESS STEREO EARBUDS TRUE WIRELESS STEREO EARBUDS TRUE WIRELESS STEREO EARBUDS TRUE WIRELESS STEREO EARBUDS





HY-PRO-ASST



Turn on Bluetooth on your To turn OFF press and phone or tablet. Choose "VTY-PCH". Enter "0000" if button on both earbuds asked. You're paired! Both earbuds flash blue every 6 for three times. seconds.

**₹ VTY-PCH** 



hold the multifunction until the LED flashes red

QUICK START GUIDE

### **USING EARBUDS FOR DIFFERENT DEVICES**

The earbuds can be paired to different devices. For example, you can use one earbud with a smart phone and the other earbud for a tablet.



Turn on one earbud by press and hold the multif ction button for 3 secon. The earbud flash red an blue. Leave the other earbuil turned off.



Select "VTY-PCH" from the Bluetooth menu of your first device. Enter PIN code '0000" if asked. This earbud is ready to use.

To pair the other earbud, make sure your other wireless device is nearby. Same pairing operation as the first earbud. Choose "VTY-PCH". Enter "0000" if asked.

### USING THE PORTABLE CHARGING CASE

We recommend that you keep the earbuds in the portable charge case when not in use. While on-the-go, the case doubles as a charging solution for the earbuds. Simply put the earbuds into the charging case. Press the button on the charging case to turn on the case. And the earbuds will begin to charge, a full charge of the earbuds takes 1.5 hours.



Connect the Micro USB cable to the

charging port on case. A full charge of the case battery takes up 2 hours. When the case is charging, the LED light flashes red. The red light will turn to blue when fully charged.

Your earbuds come pre-paired: If they lose connection, please follow the below steps to

Press and hold multifunction buttons on both earburds to power on both earbuds, then wait till the indicator lights flash red and blue slowly on both earbuds.

each other automatically. The indicator liahts of both earbuds will flash red and blue quickly to indicate they are paired successfully. Both earbuds still flash red and blue to indicate it is ready to pair.

Double click the multifunction button on either earbud

to select a master earbud. The two earbuds will pair to

### QUICK START GUIDE

# QUICK START GUIDE

### MUSIC CONTROLS

- Press the button once to pause your music.
- Press and hold the button for 1.5 seconds, it will go to next track.
- Volume control is only through your smart phone or wireless device.

- Press and hold the button to reject a call.

# TRUE WIRELESS STEREO EARBUDS TRUE WIRELESS STEREO EARBUDS

### CONNECTION LOST?

- If only one earbud works, turn off the earbud and reconnect earbuds as a pair.
- If paired two earbuds don't work, turn off the earbud and reconnect earbuds as a pair.
- Make sure your earbuds are within range of vour smart device.
- If you hear a long beep, you need to recharge your earbuds. Connection may be lost due to low battery.

# FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio

or television reception, which can be determined by

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet

general RF exposure requirement. The device can be used in portable exposure condition without restriction.

### WARNING

Keep away from water and moisture. Keep away from heat sources. Do not disassemble.





# **USING YOUR EARBUDS FOR CALLS**

- Press the button once to answer or end call.
- Press the button twice to dial the last call.

NOTE: When answering calls, the call can be heard and controlled by both earbuds,