 


VILINICE

OFFER YOU A VERY NICE VISION EXPERIENCE

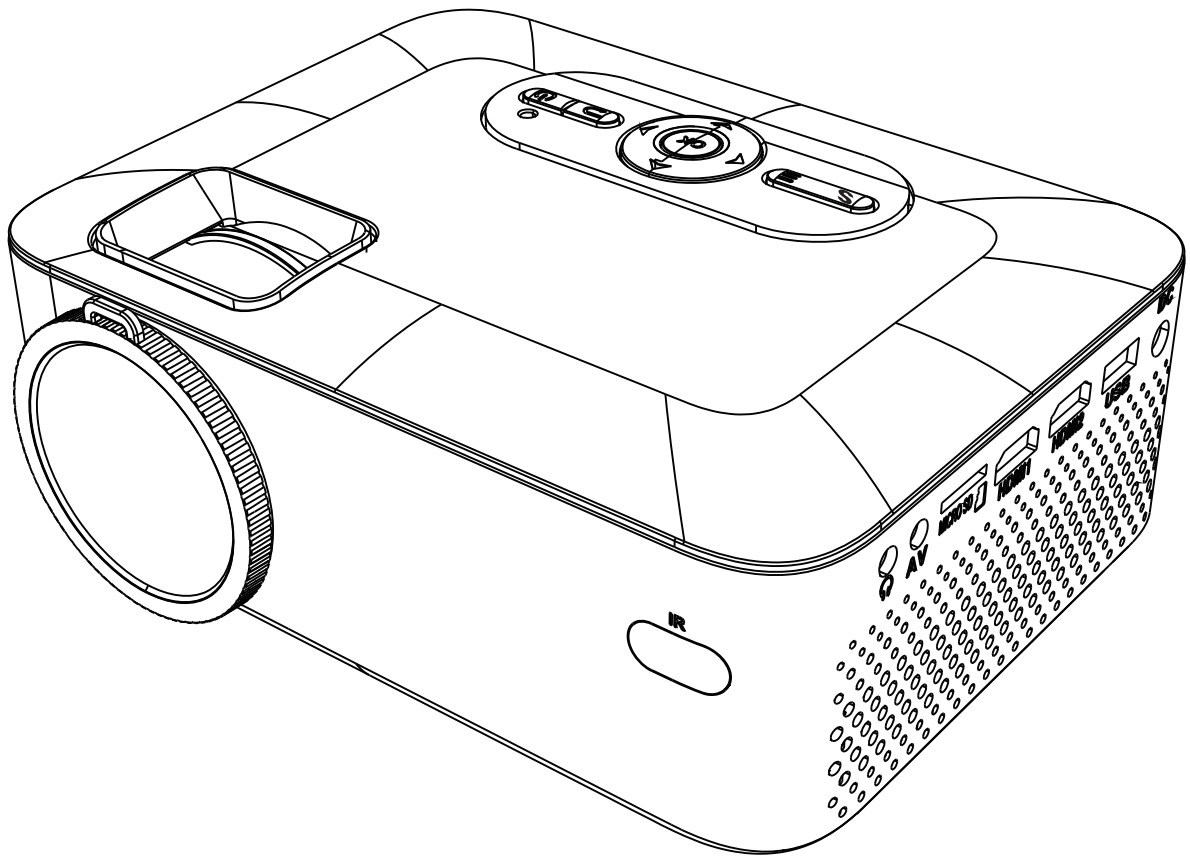

User Manual



Register the 24-month Warranty Online and
Claim a Free Prize

Scan QR Code



or visit

vilinicelife.com/warranty

to know more



We hope you never have the need, but if you do,
please do not hesitate to contact us! Our service
is friendly and hassle-free.



@VILINICE



1-888-965-5888



service@vilinicelife.com

ADDITIONAL WARNINGS AND PRECAUTIONS

1. Do not look directly into the projector light.
2. Don't touch the project lens
3. Mains adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
4. Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
5. Changes or modified to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
6. Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
7. Shock hazard - Do Not Open.
8. Caution and marking information is located at the rear or bottom of the apparatus.
9. To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
10. Objects filled with liquids, such as vases, shall not be placed on the apparatus.

FCC WARNING

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
 
 
 
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:






- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

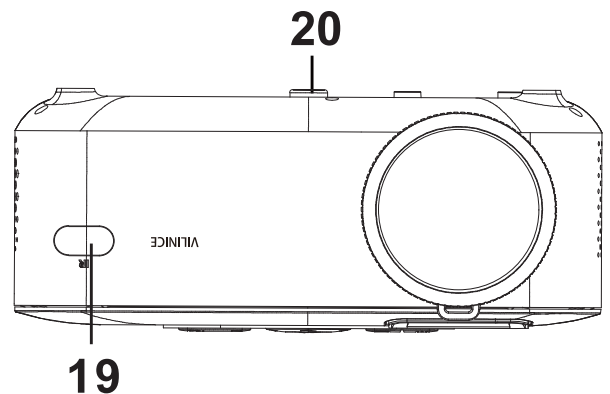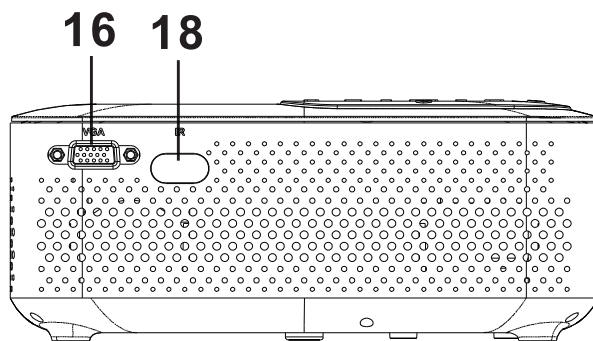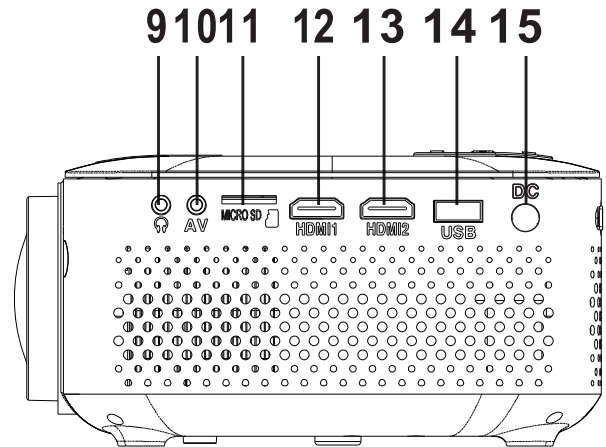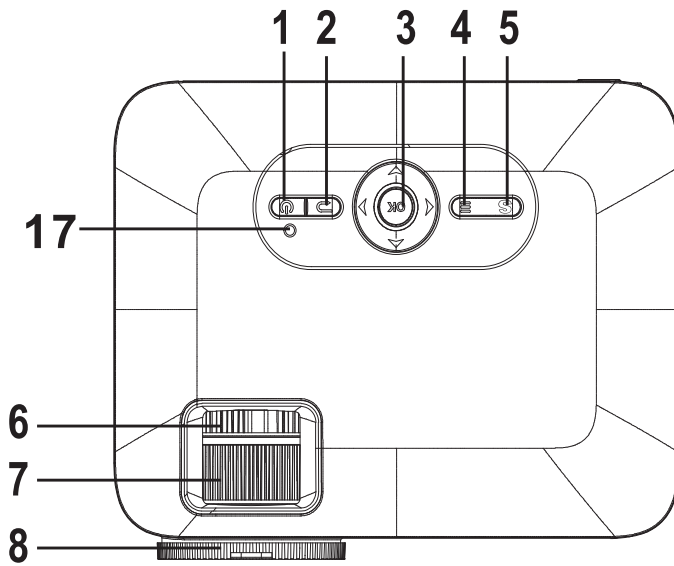To comply with FCC RF exposure compliance requirements, this grant is applicable to only mobile configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

 
PRODUCT OVERVIEW



1. POWER  Button
2. RETURN  Button
3. NAVIGATION  Button
4. MENU  Button
5. SOURCE  Button
6. Keystone Correction
7. Focusing Ring
8. LENS
9. Headphone Jack
10. AV


11. Micro SD Card
12. HDMI Port 1
13. HDMI Port 2
14. USB Port
15. DC
16. VGA Port
17. POWER on Indicator
18. IR Window (Rear Side)
19. IR Window (Front Side)
20. Adjusting Knob

CONTROL

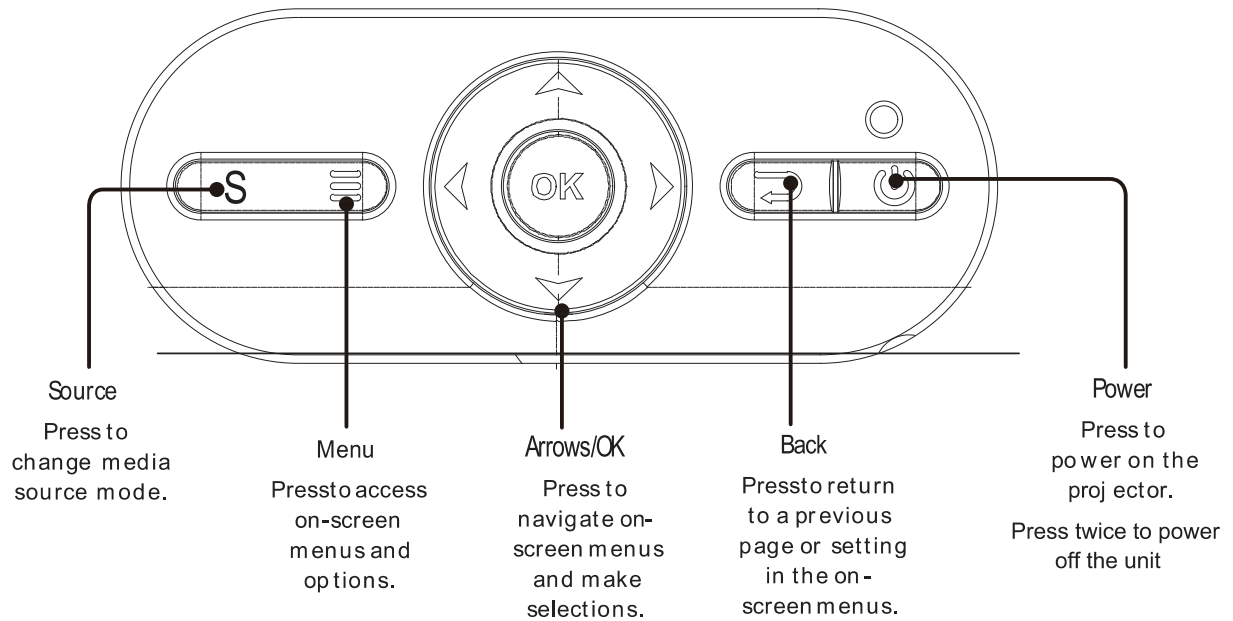


Install Power Adapter

Follow below picture to connect power adapter Connect small end of adapter first. Plug the adapter body to power outlet.

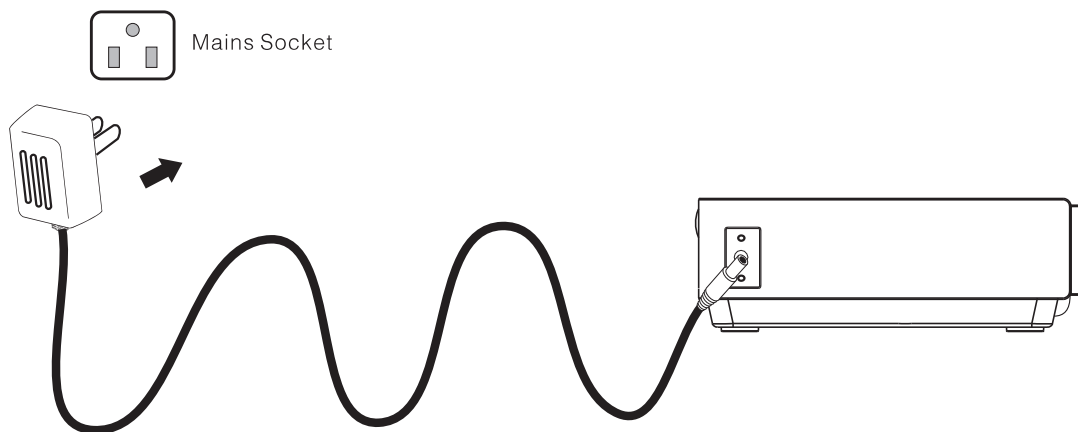 


CONTROLS OF REMOTE

- Power**
Press to power ON.
Press twice to power OFF.
- ◀◀ Previous / Next ▶▶**
Press to skip between chapters or tracks.
- Flip**
Press to flip display image 180°.
- ▶|| Play/Pause**
Press to play or pause an individual chapter or track.
- Arrows/OK**
Press to navigate and confirm selections in Settings and other menus.
- Menu**
Press to access projector Settings.
- Go To/Number Keypad**
Press to enter specific chapter or track numbers. Use Play button to begin playing.
- PIC**
Press to access picture settings.

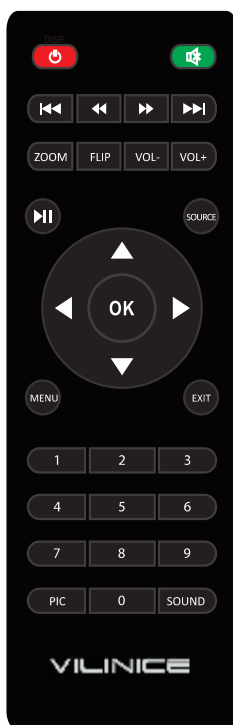 

- Mute**
Press to mute volume.
- ◀◀ Back / Fwd ▶▶**
Press to search through an individual chapter or track.
- VOL+ / VOL-**
Press to adjust audio level.
- Source**
Press to select media source (AV, PC, HDMI, MEDIA).
- Exit**
Press to exit menus.
- Zoom**
Press to zoom display image in or out.
- SOUND**
Press to access sound settings.

 Install / Remove Battery Of Remote

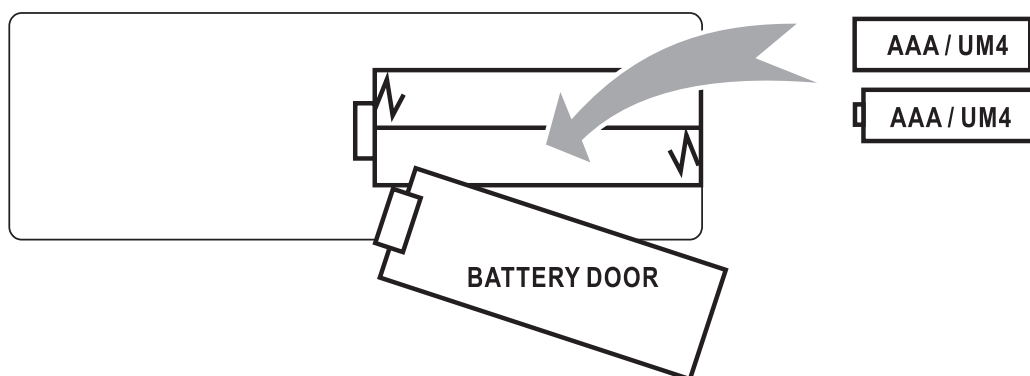

Remove the battery compartment cover on the back of your remote by carefully sliding to open. The battery cover can then be lifted away. Fit the correct batteries (2 X AAA batteries not included), referring to the polarity markings. Finally, replace the cover.

NOTES:


- Batteries shall not be exposed to excessive heat such as sunshine, fire
- Be sure that the batteries are installed polarity correctly.
- Only same or equivalent type batteries as recommend are to be used.
- Do not dispose of batteries in fire, battery may explode or leak. Do not try to recharge a battery
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries

SPECIFICATIONS


Light Source Type	LED
Display Native Resolution	1280 x 720
HDMI Input Supported Video Resolution.	1080p , 1080i , 720p, 576i , 480p, and 480i
Power Consumption	Operating 48W; Standby 1W
Power Input Connect Included Adapter	DC 12V , 4A
Included Adapter Connect DC input of unit	Input AC100-240V,50/60Hz Output DC12V , 4 A
Display Color	7000-8000K
Signal Port	Video / VGA / HDMI
USB Port	Support USB device up to 1TB Support format mpeg1, Mpeg2 ,mpeg4, mp3 , Jpeg
SD Card	Support SD card up to 32GB Support format mpeg1, Mpeg2 ,mpeg4, mp3 , Jpeg
Weight	0.9 KG
Dimension	203 x 150 x 82 mm

REMOVE & CLOSE THE LENS COVER

 Remove the lens cover before using

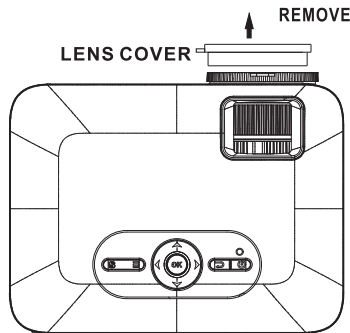

 Close the lens cover when unit not using

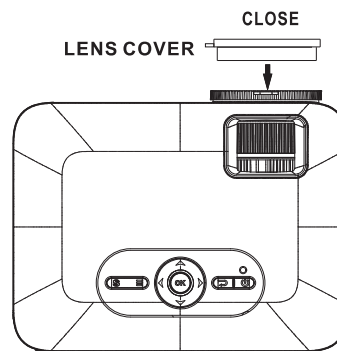

Placing Your Projector

Your projector can be installed in four different configurations (see picture below):

Front Table:

Select this location with the projector placed near the floor in front of the screen. This is the most common way to position the projector for quick setup and portability.

 


FRONT TABLE

Front Ceiling:

Select this location with the projector suspended upside-down from the ceiling in front of the screen.

NOTE: A projector mount is required to install the projector in a ceiling.

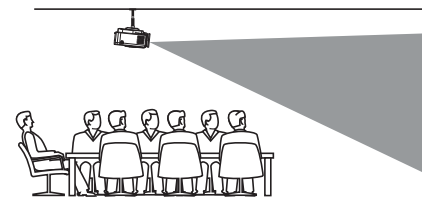


FRONT CEILING

Rear Table:

Select this location with the projector placed near the floor behind the screen.

 NOTE: That a special rear projection screen is required.

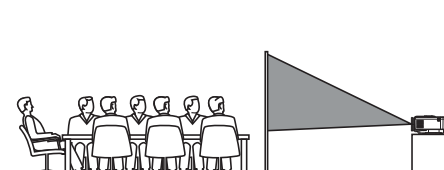

REAR TABLE

 
Rear Ceiling:

Select this location with the projector suspended upside-down from the ceiling behind the screen.

NOTE:

A projector mount is required to install the projector in a ceiling.

A special rear projection screen is required.

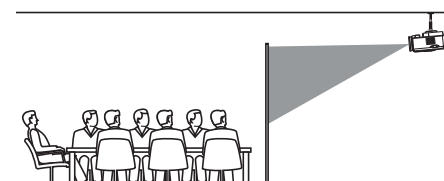


REAR CEILING

TO REDUCE IMAGE DISTORTION

It is recommended to move the projector as close to center of screen.

 Square /Rectangle

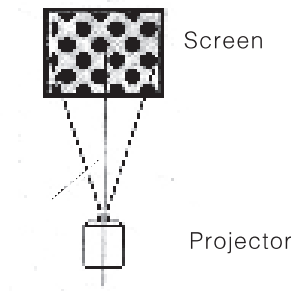


PLACING YOUR PROJECTOR ON CEILING


When installing the projector in the ceiling, please purchase a projector mount recommended by an installation professional and follow the instructions that come with the mount.

Before installing the projector in the ceiling, please check to make sure the ceiling structure can support the weight of the projector and the mount. If in doubt, please ask the advice from an installation professional.

 NOTE: Projector mount and screw(s) not included

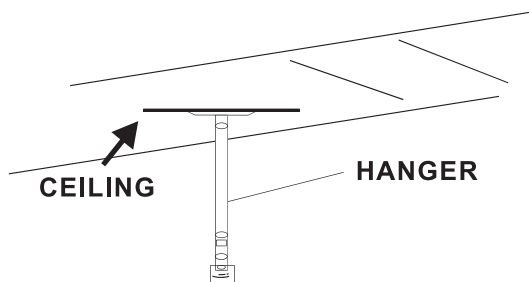


FIXED HANGER HOLE

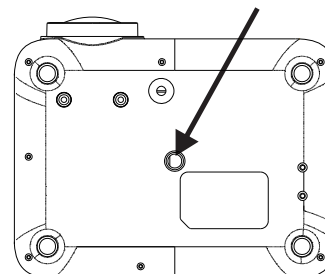 

ADJUST THE VERTICAL LOCATION

 Follow below picture to adjust the vertical location.

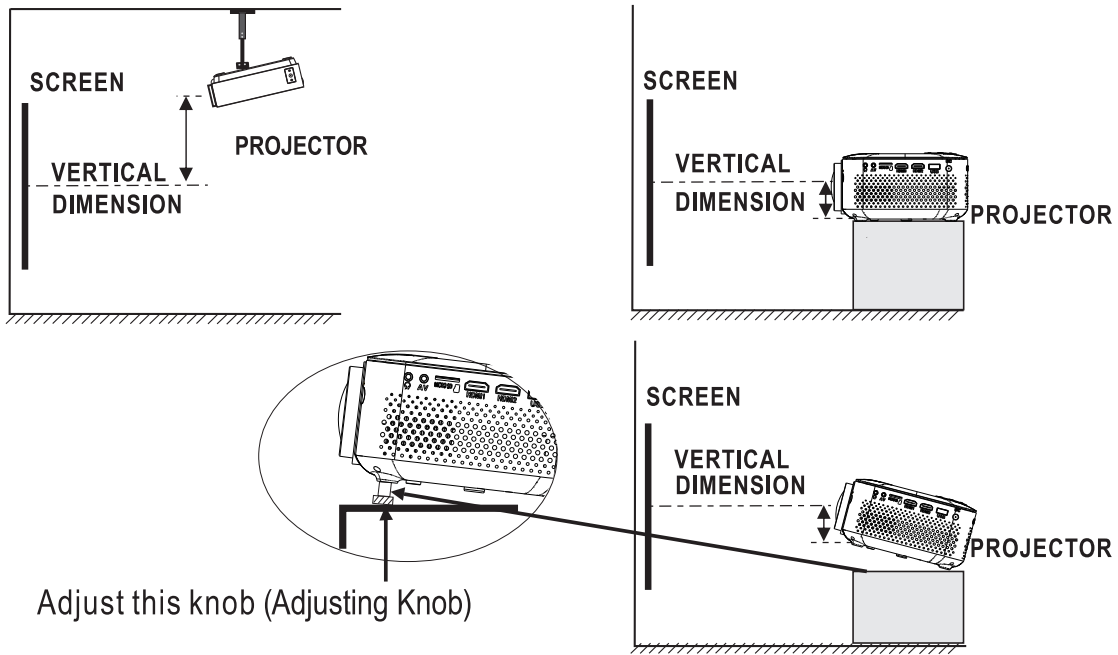


TO REDUCE IMAGE DISTORTION

It is recommended to move the projector as close to center of screen.


Adjust the focus by turning the knob while observing the image pixels near the center of the screen. Optimal focus is obtained when the pixels are clearly visible. Depending on the projected screen size, the focus near the screen edges may be less sharp than the screen center.

FOCUSING RING

 Then sharpen the image by rotating focus knob.

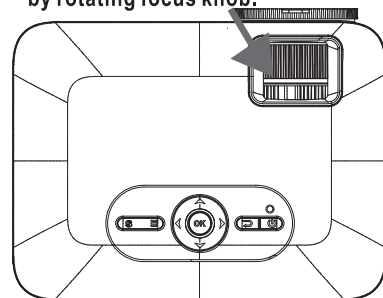

KEystone CORRECTION

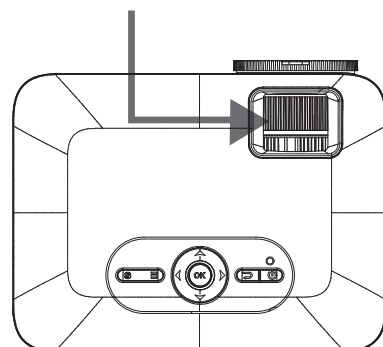 

Keystone image is created when the projector beam is projected to the screen in an angle. Keystone correction will restore the distorted image to a rectangular or square shape.

CONNECTING

Wired Screen Mirroring Connection

Connect an iPhone/iPad

- 1, Press the signal source key "S" of the projector or the remote control and select "Miracast".
- 2, Plug an original USB charging cable into the USB port of this projector.
- 3, Please select "Trust this device" when the iPhone asks "Trust" or "Don't trust", and enter the Your iPhone password to connect.

Connect an Android Phone/Tablet

- 1, Press the signal source key "S" of the projector or the remote control and select "Miracast".
- 2, Keep the mobile phone awake and connect the USB charging cable.
When the mobile phone is connected to the projector for the first time, it will prompt the installation of "MiraPlug" APK through the network. Please choose "Transfer files" and allow install this App.
- 3, After downloading the APK, unplug the cable and plug it back in, Please choose "Transfer files" and the screen will show your device is connected.
- 4, At this time, the voice is still played via the mobile phone. If you need the sound to play on the projection, please click the Bluetooth icon in the central of the APK. This will bring up a Bluetooth search window, choose allow Miraplug to enable bluetooth. Then you can select the named "ProjectorBT" device to connect.

CONNECTING

Wireless Screen Mirroring Connection--Requires Cellular Data Traffic Transfer

Connect an iPhone/Pad

- 1, Press the signal source key "S" of the projector or the remote control and select "Miracast".
- 2, Open the wifi in the Phone settings, search and select projector hotspot Dualcast-***, enter password to connect (Note: The hotspot name is on the screen "SSID: Dualcast-****", the password is "PSK: *****").
- 3, Slide the phone interface from the bottom up to enter the control central (Full-screen phones slide down from above, those with home button slide up from below), then open "Screen Mirroring ". Then Search and select the projector device (Note: The name of the projector device is Dualcast-***), click to connect.

Connect an Android Phone/Tablet

- 1, Press the signal source key "S" of the projector or the remote control and select "Miracast".
- 2, Since different brands of Android phones have different settings, find the screen share and connect the projector. Samsung phones find "Smart View", Huawei phones find "Multi-screen". Then Search and select the projector device (Note: The name of the projector device is Dualcast-***), click to connect.

Connect a Windows Device

- 1, Press the signal source key "S" of the projector or the remote control and select "Miracast".
- 2, Open the windows device settings interface and find the "Connections" icon.
- 3, Search and select the projector device: Dualcast-*** and click Connect.

CONNECTING

Wireless WIFI Connection -- Wifi Transfer

Connect an iPhone/Pad

- 1, Press the signal source key "S" of the projector or the remote control and select "Miracast".
- 2, Open the wifi in the Phone settings, search and select projector hotspot Dualcast-***, enter password to connect (Note: The hotspot name is on the screen "SSID: Dualcast-***", the password is "PSK: *****"). After successful connection, scan the QR code on the interface to log in to the projector setup interface.
- 3, Click "Wifi Setup ", then select your home wireless network in the iPhone display interface, enter the password of the wireless network and connect.(If the phone is disconnected from the projector wifi at this point, reconnect the phone to the projector hotspot)
- 4, Slide the phone interface from the bottom up to enter the control central (Full-screen phones slide down from above, those with home button slide up from below), then open "Screen Mirroring ". Then Search and select the projector device (Note: The name of the projector device is Dualcast-***), click to connect.

Connect an Android Phone/Tablet

- 1, Press the signal source key "S" of the projector or the remote control and select "Miracast".
- 2, Open the wifi in the Phone settings, then select your home wireless network in the Phone display interface, enter the password of the wireless network and connect.
- 3, Since different brands of Android phones have different settings, find the screen share and connect the projector. Samsung phones find "Smart View", Huawei phones find "Multi-screen". Then Search and select the projector device (Note: The name of the projector device is Dualcast-***), click to connect.

PROJECTOR SETTING INTERFACE, AS FOLLOWING:

×

Websetting

...

Setting

Internet	杰奇数码6666	Set up a projector or Dongle to connect to the router
iOS Docking	影片以串流播放	Set the playback mode when IOS devices are wired to the same screen.
Device Name	Dualcast-267A616D	Set up the device name
WiFi Password	38744438	Set up the device password
Display	game	Set up the device mode
Resolution	1920x1080_60P	Set up the device output resolution
Scaler	100%	Set up the device input the phone/tablet screen scale size
Language	English	Set up the device language
EZAir mode	Auto	Set up IOS device wireless screen mirroring playback mode
Upgrade	19582000	Set up the device OTA upgrade
Reset to default		
Reboot		

MAC:30:4A:26:7A:61:6D

<

>

CONNECTING

More Tips about Netflix, Prime video, Hulu, etc

It works with youtube, chrome, safari, facetime when you connect it to a smartphone directly.



And it doesn't support play protected video when you connect it to your smartphone directly. (Netflix, Prime video, Hulu, etc) Due to these video have an encryption protocol, the projector has no right to recognized when it is connected directly to the phone via the USB interface.

But it works with Netflix, Amazon prime video or any other copyright videos when connecting this projector to a laptop, fire tv stick, Roku or Chrome cast. The reason why the fire stick or other HDMI device can play Netflix is because the HDMI interface encryption protocol includes Netflix's.

If you do not have Roku or Fire Stick, you can send a e-mail to service@vilinice.life.com apply for one for free.

 
Connect HDMI Show The Image On Projector Screen

Follow below picture to connect HDMI cable and device.

1. Turn off the unit before connect HDMI cable.
2. After connect, press the  button to turn on unit and power indicator will light GREEN
3. Press the “S” / **SOURCE** button to HDMI mode and the video of HDMI device will show on projector screen. There are 2 HDMI input, HDMI1 interface corresponds to HDMI 1 in SOURCE mode , and HDMI2 interface corresponds to HDMI 2 in SOURCE mode.
4. Press the  button twice to turn off unit power.



CONNECTING

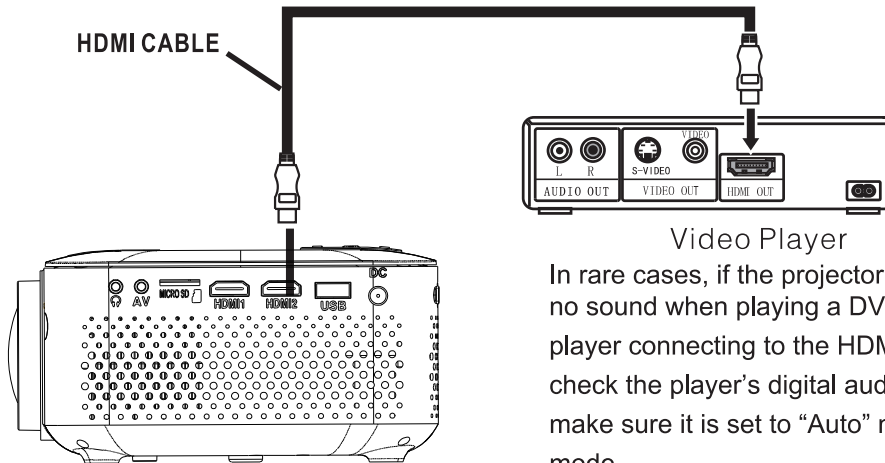
HDMI HD Signal Input : This Interface Can Be Input With HD Player HDMI Output At The Connection



Connect AV Show The Image On Projector Screen

 Follow below picture to connect AV cable and device.



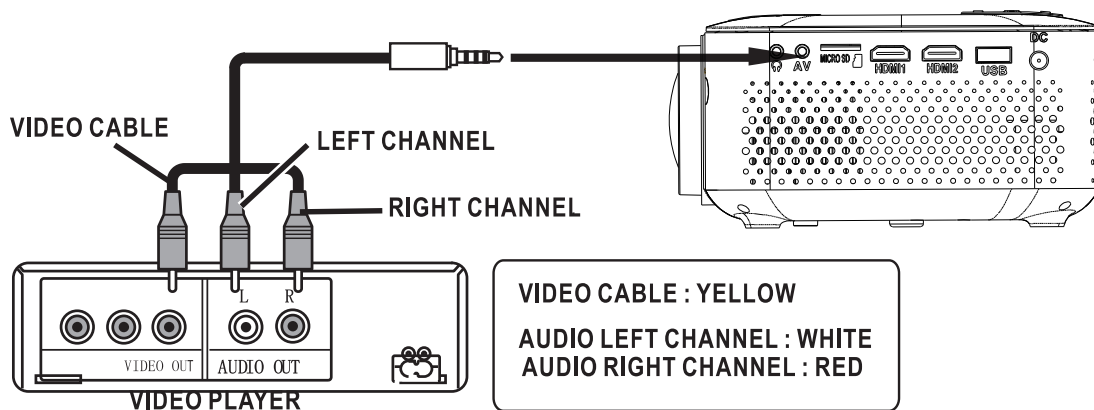

1. Turn off the unit before connect AV cable.
2. Use AV cable to connect follow below figure
3. After connect, press the  button to turn on unit and power indicator will light GREEN
4. Press the "S"/ **SOURCE** button to AV mode and the video of AV device will show on projector screen
5. Press the  button twice to turn off unit power.

 


CONNECTING

Connect VGA Show The Image On Projector Screen

Follow below picture to connect VGA cable and device.

1. Turn off the unit before connect VGA cable.
2. Press the  button twice to turn off power of your projector before connection.
3. After connect, press the  button to turn on unit and power indicator will light GREEN
4. Press the “” / **SOURCE** button to VGA mode and the video of VGA device will show on projector screen.
5. Press the  button twice to turn off unit power.

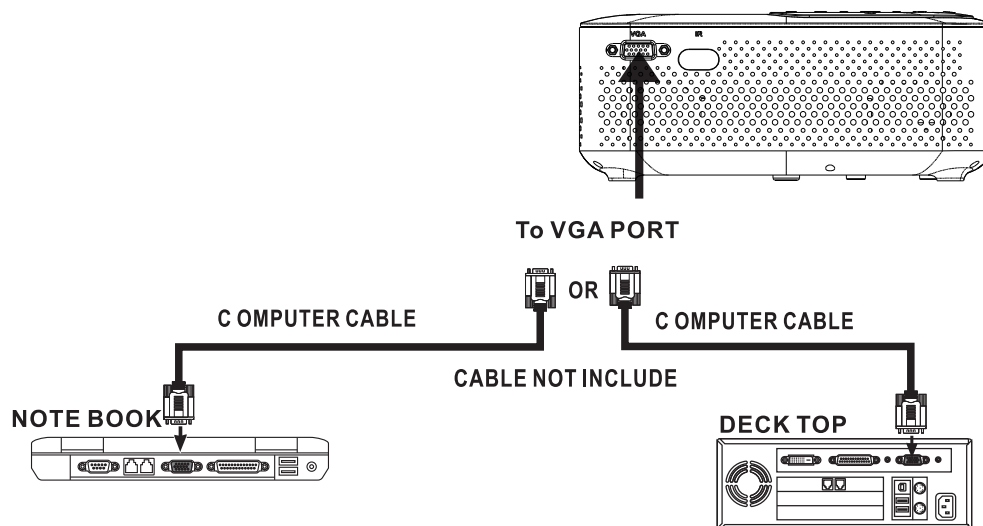


Please refer to the following table to adjust the output signal from computer

Type	Resolution		Frequency	Field Frequency
PC	VGA	640x480	31.5	60
			34.7	70
			37.9	72
			37.5	75
	SVGA	800x600	31.4	50
			35.1	56
			37.9	60
			46.6	70
			48.1	72
			46.9	75
	XGA	1024x768	40.3	50
			48.4	60
			56.5	70

 
CONNECTING

Connect Audio Output (Aux Out / Line Out / Earphones)

Follow below picture to connect audio cable and device.

1. Press the  button twice to turn off power of your projector before connection.
2. Use audio cable to connect follow below figure.
3. After connect and turn on both units. Your projector sound from external device now.
4. After using , turn off both unit


Station Amplifier

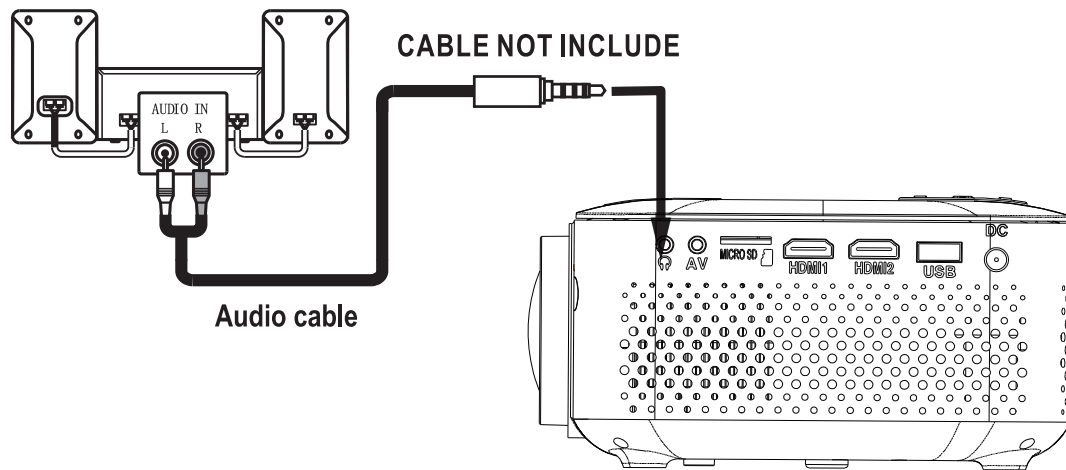

Install USB Device And Micro SD Card

 Follow below picture to install USB and microSD Card.



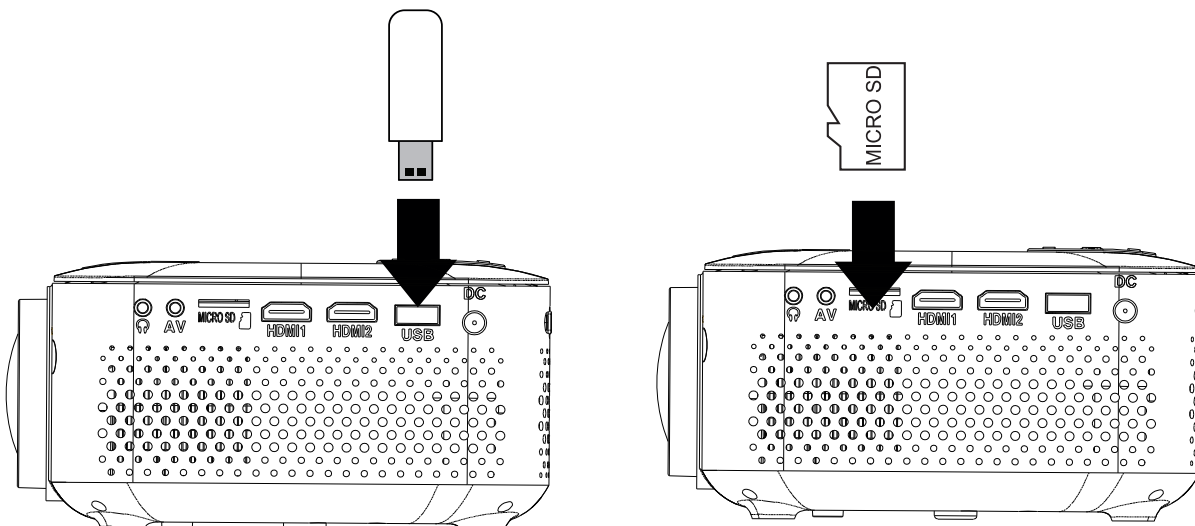










Turn off the unit before install USB / microSD Card.




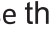

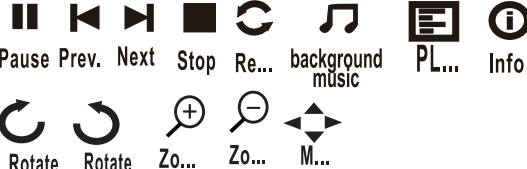

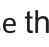



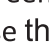

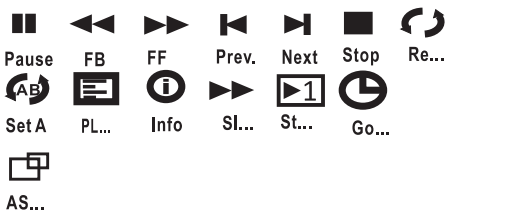
CONNECTING

Using microSD Card And USB Playback (Media Player)

Install USB / Micro SD device:

1. Turn off the unit before install USB / microSD Card.
2. Install the USB device into USB port.
3. After connect, press the  button to turn on unit and the power indicator light GREEN.
4. Press the "S" / **SOURCE** button to enter and use  buttons to search the MEDIAPLAYER mode.
5. After selection, use  buttons to search the MUSIC / PHOTO / MOVIE icon and press the  button to enter. If necessary, use the  button to select microSD card or USB and press the  button to enter.
6. Use  buttons to search the correct file and press the  button to preview playback file and press the  button of unit or  button of remote to start playback.
7. Press  button to fast search forward and rewind.
8. Press  button to search next or previous file.
9. During playback, press the  button to pause and press again to resume.

NOTE: Remove USB / microSD device, press the  button twice to turn power **FIRST**.

Sub-Menu on Photo screen	
<ol style="list-style-type: none"> 1. When photo playback, press the  button and more function screen show on lower (figure 1). 2. Use the  button to select icon and press the  button to play special function. 	<p>Figure 1.</p> 
Sub-Menu on Music screen	
<ol style="list-style-type: none"> 3. When music playback, press the  button and more function screen show on lower (figure 2). 4. Use the  button to select icon and press the  button to play special function. 	<p>Figure 2</p> 
Sub-Menu on Movie screen	
<ol style="list-style-type: none"> 5. When movie playback, press the  button and more function screen show on lower (figure 3). 6. Use the  button to select icon and press the  button to play special function. 	<p>Figure 3</p> 


PROJECTOR SETTING

1. Click "Menu" of the projector remote control or "M" of the projector, enter the setting menu.
2. "PICTURE"/" SOUND"/" OPTION"/" TIME" can be set manually. After you select the properties (PICTURE/SOUND/TIME/OPTION) you want to set, please press "<" or ">" on the operation panel to select the setting range of the properties.



PROJECTOR SETTING

Options Related to "PICTURE" are set on this screen

Use  buttons to select manual page. This manual showed on right upper of screen.




1. **Picture Mode**
Select Vivid, User (custom), Soft ,or Standard
2. **Contrast ,Brightness, etc**
Set Picture Mode to "User" to adjust these settings
3. **Color Temperature**
Select Warm ,Cool, or Medium.
4. **Aspect Ratio**
Select 16:9, 4:3 , or Auto
5. **Noise Reduction**
Select Off, Low , Middle , High or Default
6. **Screen**

Color temper... (temperature)	
Customer define	Parameter
red	0-100
blue	0-100
green	0-100

Aspect Ratio	
4:3	The signal in a 4:3 aspect ratio projection image
16:9	The signal in a 16:9 aspect ratio projection image

PROJECTOR SETTING

Options Related to "SOUND" are set on this screen

Use  buttons to select manual page. This manual showed on right upper of screen.




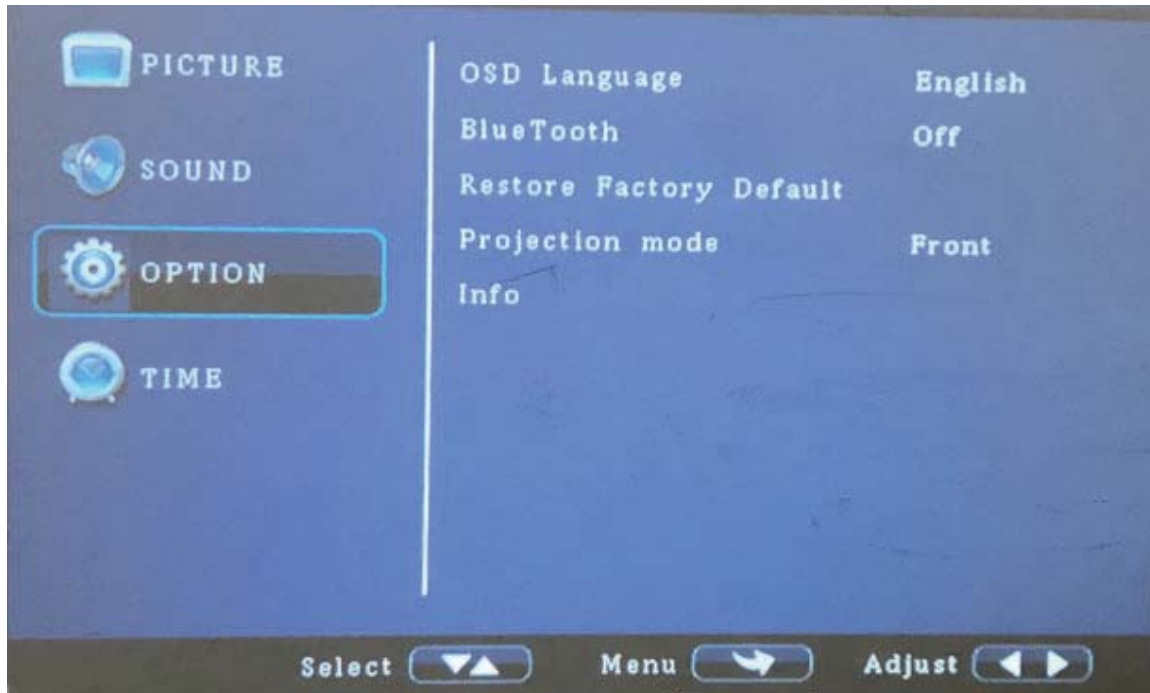 
1. **Sound Mode**
Select Music, Movie, User (custom), Sports ,or Standard
2. **Treble, Bass**
Set Sound Mode to "User" to adjust these settings
3. **Balance**
Adjust the audio balance.
4. **Surround Sound**
Turn Surround Sound ON or OFF.

Sound Mode - User	Parameter
Treble	0-100
Bass	0-100

PROJECTOR SETTING

Options Related to "SETTING" are set on this screen

Use  buttons to select manual page. This manual showed on right upper of viewing screen.



1. OSD Language

Select different language, Follow below figure.

English	Hrvatski	Nederlands	Chinese
Franais	Deutech	Slovenina	Slovak
Espanol	Italiano	Norsk	
Portugues	Magyar	Srpski	
Esky	Polski	Svenska	
Dansk	Romnete	Suomi	

2. Bluetooth

Turn Bluetooth ON or OFF

3. Restore Factory Default

Select Y or N.

4. Panel Rotate


Select rotate 0, rotate 1, rotate 2, rotate 3..

5. INFO

Display the unit information as below.

PROJECTOR SETTING

Options Related to "TIME" are set on this screen

Use  buttons to select manual page. This manual showed on right upper of viewing screen.



1. **Clock**
Select clock to Day, Month, Year, Hour, and Minutes.
2. **Off Timer**
Select turn off timer to Day, Hour, and Minutes.
3. **On Timer**
Select turn on timer to Day, Hour, and Minutes.
4. **Sleep Timer**
Select sleep timer to Off, 10min, 20min, 30 min, 60min, 90min, 120min, 180min, 240min
5. **Auto Sleep**
Select auto sleep function to Never, 4 hour, 6 hour, 8 hour.

TROUBLESHOOTING

Before resorting the maintenance service, please kindly check by yourself with the following chart.

No Image is Projected or a "No Signal" message is displayed	<ol style="list-style-type: none"> 1.Is the power light on? If it is not on, check the projector is plugged into the mains, that the socket is switched on, and then press the power button on the projector. 2.Check the lens cover has been removed. 3.Check the cables are securely attached and installed as per the User Manual. 4.The image source may not be set correctly. Press the Source button on the Control Panel or the Remote, to select the correct setting. 5.Check in the Menu section under Video input signal to make sure that has been set correctly.
The Lamp (Bulb) switches off after a period of time	<ol style="list-style-type: none"> 1.Leave the projector to cool for a few moments. 2.Once cooled, check if anything is blocking the ventilation vents. 3.Turn on the projector. <p>If the issue persists please contact your support provider for further assistance.</p>
The Image is wider at the top/bottom of the screen	<p>This is called keystone and is due to the projection angle not being perpendicular to the screen. To correct use the projectors inbuilt keystone function to adjust the image.</p>
Spots on the screen	<p>Using a vacuum cleaner to clean the lens. If cleaning doesn't resolve things, please contact your support provider for further assistance.</p>
The image brightness has faded	<p>This could possible be caused by the ambient light in the room. If not ,the chances are that you need to replace the lamp (bulb).</p>