

# Safety instructions



· Presence of live parts inside the device! Do not open. Risk of electricshock!

No parts should be repaired by users.

Place the device on a flat, firm and stable surface. Do not put it on acarpet or rug.

· Place the device in a well-ventilated location to prevent the accumulation of internal heat.

- Protect the device from high temperatures, humidity, water and dust.
- · Do not place any objects near your device that may damage it (e.g.liquid-filled objects or candles).
- Do not mix old and new batteries and Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cab,ni-mh,etc.) batteries.

## Accessory List

Please open the package and check the following accessories:














# User Manual

## Hardware Structure


Product Interface Introduction




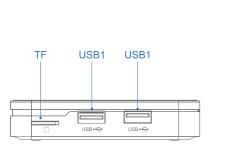

## Remote Control

for what you want.

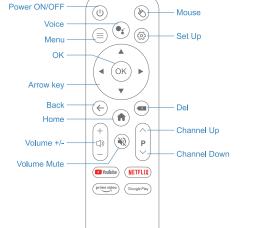

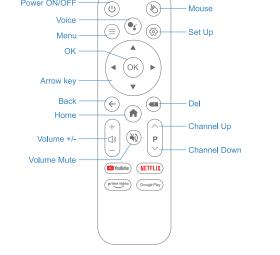

Note: Press the Google Assistant button to start voice searching

## **System Connection**

Please refer to the below instructions to connect TV, Power, Network and other devices



Note: Please turn off all equipment before connecting.





## Bluetooth Pairing Method

- 01 For the first pairing, please place the remote control near the box. Press and hold the [LEFT] and [RIGHT] buttons on the remote control for about 10 seconds at the same time, and you will see the red light on the remote control constantly fashing, then release it to automatically enter pairing mode.
- 02 Second pairing (Bluetooth reconnection), press any button on the remote control to reconnect.



- 01 Infrared status: When infrared is emitted, the LED blinks 2 times continuously when the key is pressed; the LED goes out when the key is
- 02 Bluetooth status: When sending Bluetooth, the LED will be on when the button is pressed; the LED will be off when the button is pushed up.

Remote Indicator Status

### Troubleshooting

· No display after power on?

Confirm your device is connected to the TV well and set the correct HD Input from your TV configuration.

TV has images but no sound?

Make sure your TV is not in mute and low volume.

 Fail to connect to the network? Make sure the Ethernet cable is properly connected. Make sure Wi-Fi is

functional and your box has a strong enough signal from your router.

Remote control failure?

- Replace the battery of the remote control with a new one, and make sure it is placed in the correct polarity.
- Make sure the remote control is within the range of the TV box.
- Go to the Setting menu to unpair and re-pair the remote control.
- · Please use our accessories to avoid any risk.

the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is
- Consult the dealer or an experienced radio/TV technician for help. Caution: Any changes or modifications to this device not explicitly approved by manufacturer

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable

protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with

- could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two
- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.



83.04 mm