

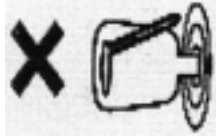
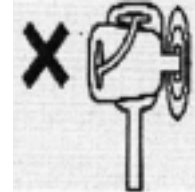
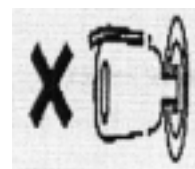
Operations manual

This system is an anti-self-running and anti-theft system. This system allows the engine to start by performing encryption communications with each connection device.

Therefore, use of a key duplicate or direct connection to the engine does not lead to starting.

< Caution >

Under the following conditions, the immobilizer unit cannot receive signals from the key correctly and the engine may not start.

	A metal ring is put on the key grip.
	The metal part of another key is in contact with the key grip.
	The key is on another vehicle's immobilizer system key (incorporated in the signal generator).
	Metal is in contact with the key grip.