

 
尺寸：111x134mm

材质：128g铜版纸



need to setup a second 2.4GHz network. See your router manufacturer documentation. There are also many videos on YouTube.com on how to perform this setup.

Enter the Wi-Fi network password and click “Connect” to finalize the connection.

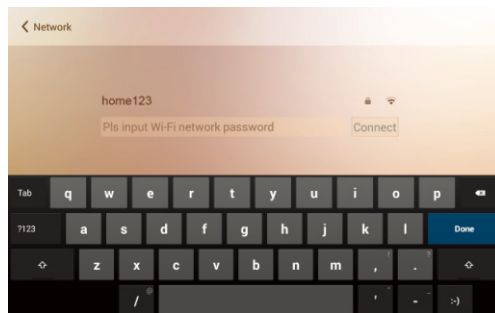

*Note: A check mark will appear next to the chosen Wi-Fi network if connection was successful. If it doesn't appear, the password has not been entered correctly. You must re-enter the correct password.*

Once connected tap the back arrow in the upper left corner to return to the home screen where a secure 6-digit code will be displayed.




## STEP 2: Application Setup

 Connecting Your Mobile Device

1. Download the App from the Apple App Store or Google Play store.
2. Search for “Polaroid Wi-Fi Photo Frame 2.0”

## Slideshow Settings

1. Change the way the frame transitions from one photo to the next. Choose from: (a) Still photo, (b) Random transition; (c) Fade; (d) Slide from Right; (e) Slide from Bottom Right; (f) Spin from Center.
2. Adjust the amount of time each photo is shown by adjusting the time on the preview screen, then tap “Apply” to save settings.
3. You can also choose to show the date and time on the slideshow. After selecting the clock icon you can drag the time on the preview screen to change the position of the date and time on the display.

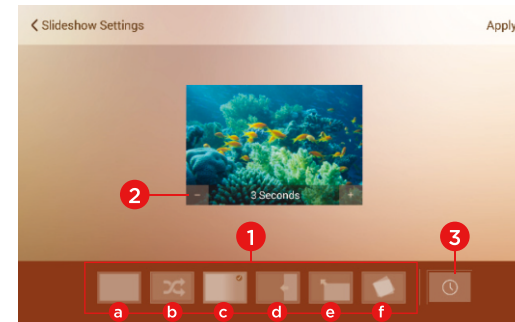

## Storage Path

Select where photos sent to the frame via Wi-Fi are stored: Choose from the frame's internal memory, USB (frame supports up to 64GB) or SD card (frame supports up to 32GB). Storage space (remaining memory) is displayed below each storage path. (Note: The digital photo frame operating system and the sample photos utilize a portion of the 4GB total internal memory, so available memory will always be less than 4GB even if all sample photos are deleted from the frame.)

 
 
尺寸：111x134mm

材质：128g铜版纸




## SETTINGS / OPTIONS


Other features and settings can be found in the “Settings” option on the main menu. To access the main menu from the slideshow, tap anywhere on the display, then tap the back arrow ◀

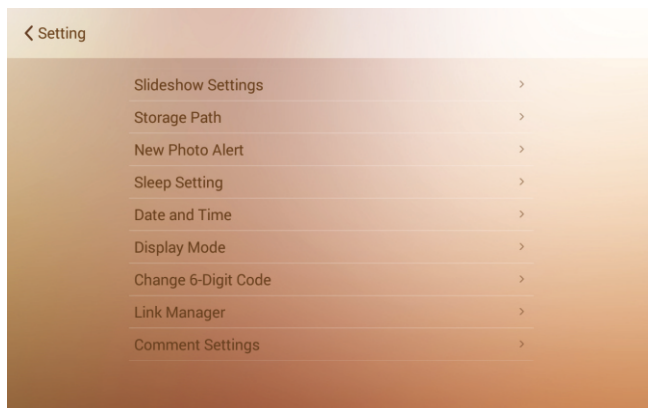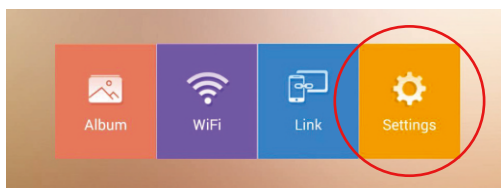


## Apple

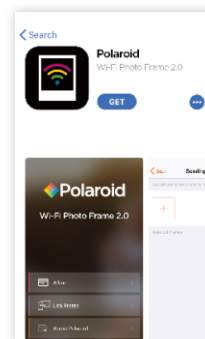 

## Android

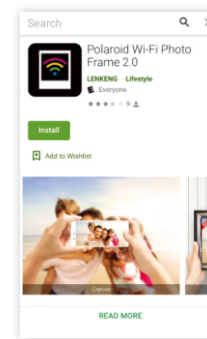 

 3. Click the “Get” icon to install the App on your Apple device, or the “Install” icon on your Android device.
4. Once the installation is complete, open the App.
5. Next, tap “Link Frames” in the App.

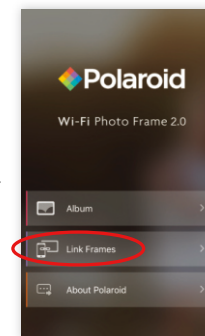


尺寸：111x134mm


材质：128g铜版纸



 6. Enter the frame ID number from the home screen of the Wi-Fi photo frame and tap "Link"

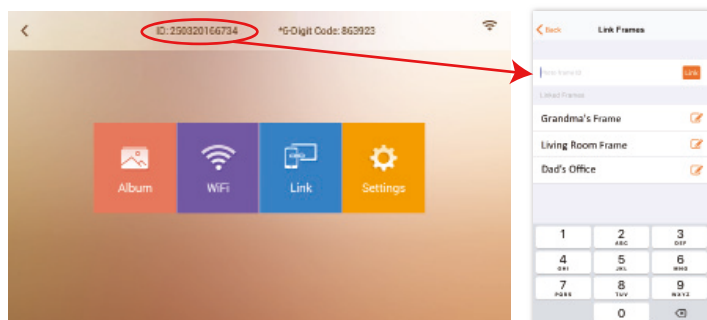

 7. You will be prompted to enter the secure 6-digit code from the frame. Enter the code and tap "OK".

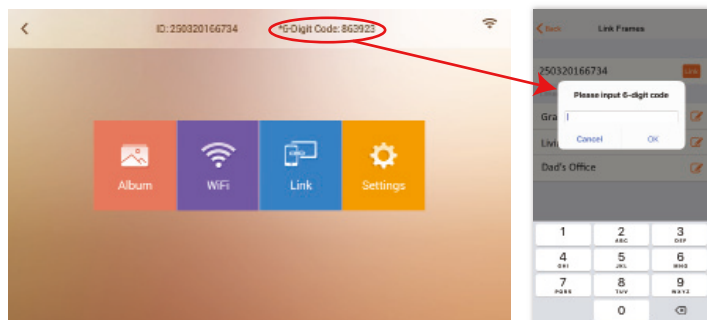

NOTE:

- Do not force the memory card into the slot. If you are not able to insert the memory card easily, you may have inserted it incorrectly; turn the card over and try again.
- Do not remove a memory card immediately after inserting it or when the frame is processing files. Wait until the screen is stable.
- Maximum SD/MMC card size is 32GB

尺寸：111x134mm

材质：128g铜版纸



## WALL MOUNTING

1. Insert a nail, screw, or hook into the wall in a location that will support the frame's weight.
2. Leave at least ½" (about 12mm) of the nail or screw exposed.
3. Hang the Wi-Fi Digital Photo Frame onto the nail, screw, or hook.

 


## CONNECTING A USB DRIVE

To view photos from a USB flash drive, insert it into the USB port on the side of the frame.

NOTE:

- Not all USB storage devices are compatible with this digital photo frame.
- USB drive must be formatted using the FAT32 file system. Drives formatted as NTFS or exFAT will not be recognized.
- The maximum USB flash drive size is 64GB




## INSERTING A MEMORY CARD


To view the pictures from a Secure Digital (SD) or Multimedia Card (MMC), insert it into the memory card slot on the side of the Digital Photo Frame with the metal contacts of the card facing the LCD Display.



 8. The App will respond with the following notice after a successful secured connection with the frame: "Link Successful".

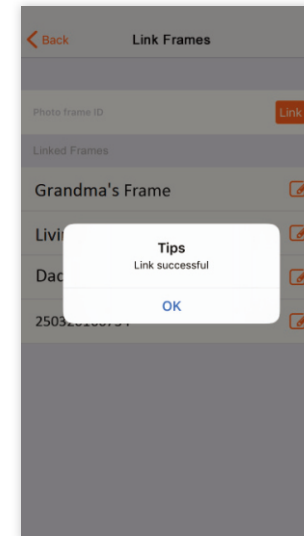

 9. Tap "OK" and then the back arrow to return to the main menu.



尺寸：111x134mm

材质：128g铜版纸




## SENDING AND VIEWING PHOTOS
 
### STEP 1: Sending Photos to the Wi-Fi Photo Frame


Once Setup is complete you may send photos from your mobile device to the frame.

1. From the App main menu, tap the "Album" menu item.

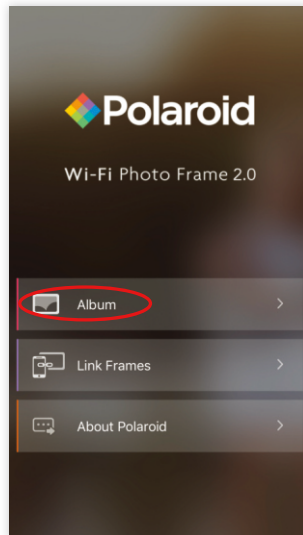

### For Android devices:

 Access the photo album on the device and select the photos to transfer. Then tap the "Share" icon.

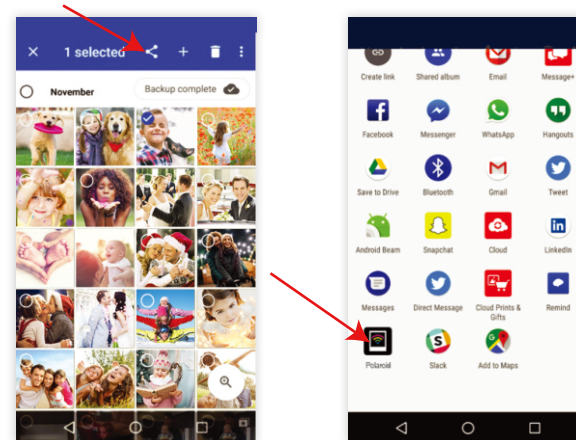

Tap the Polaroid App icon and then tap "Send".  
The Polaroid Wi-Fi Photo Frame 2.0 App will open the Sending Picture screen to select the frame and send the photo.

尺寸：111x134mm

材质：128g铜版纸




### STEP3: Sending Photos Directly from a Photo Album

 If you choose to send a photo directly from your device's photo album, iOS phones and iPad are limited to sending one photo at a time. Android phones may send more than one photo directly from the photo album (max 9 images at one time).

#### For iOS devices:

Display the camera roll and tap the "Send" icon.

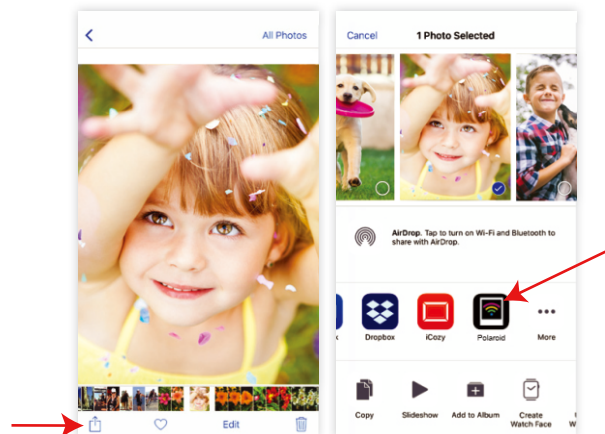


Select the photo(s) for transfer, then tap the Polaroid App icon and then tap "Send".

The Polaroid Wi-Fi Photo Frame 2.0 App will open the "Sending Pictures" screen to select the frame and send the photo.

If the Polaroid App icon does not initially show, press the "More" icon to add it.

 - Next, select the frame(s) you want to send the photos to by checking the circle next to the frame name or ID number. If multiple frames have been linked to the App you can select additional frames by checking the circle next to each frame.

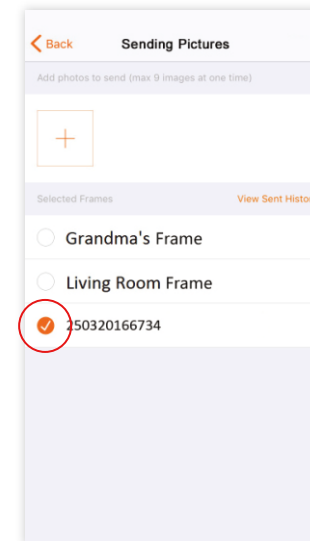


\*See the Tips section to learn how to personalize your frame's name in the App.

尺寸：111x134mm


材质：128g铜版纸



 3. Tap the “+” icon to choose the photo(s) you want to send.

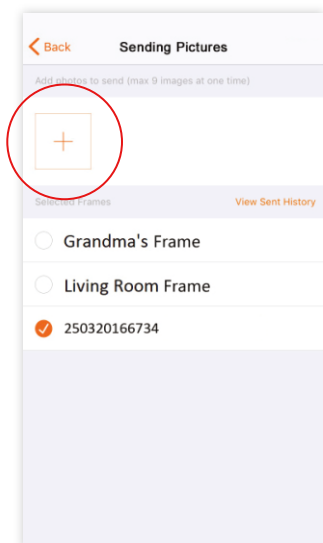

 There is an option to either take a new photo or choose photos from your device's album.

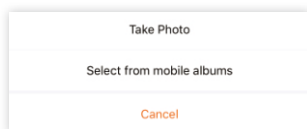

18

## STEP 2: View Photos on the Wi-Fi Photo Frame

Once the frame receives the photos, you will see a notification on the display that new photos were received. The new photos will be inserted at the beginning of the slide show and be displayed in sequence.



 
27


尺寸：111x134mm

材质：128g铜版纸




8. To view your sending history, tap “View Sent History” from the “Sending Pictures” screen.

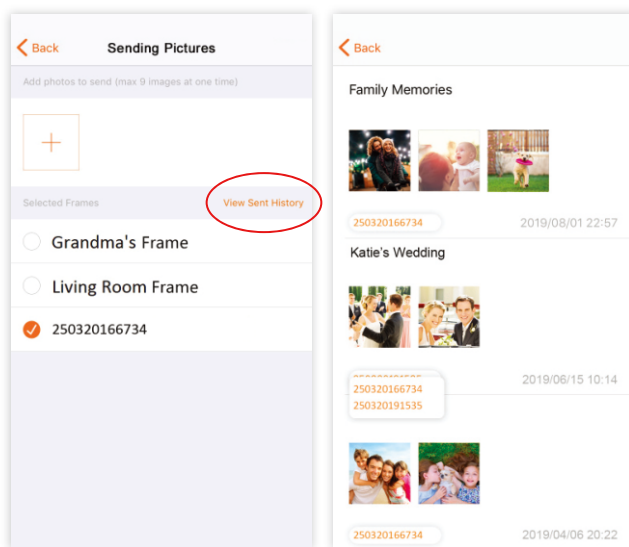

- a. To take a new photo, tap on “Take Photo”. Tap the circle on the screen to capture an image. (For selfies, tap the camera reverse icon ) Then tap the check mark to add your new photo.

 *NOTE: Photos look best on the Wi-Fi photo frame when taken in landscape orientation when your frame is displayed horizontally.*

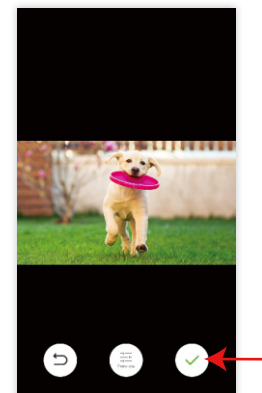

尺寸：111x134mm

材质：128g铜版纸

 


- b. To add photos from your device's album, tap "Select from mobile albums". Select the photo(s) by tapping each desired photo. A highlighted check mark will appear for each photo selected. Tap "Complete" at the top right corner of the app to complete your selection.



*NOTE: You can transfer up to 9 photos to the frame(s) each time you send. The transfer speed will vary on the strength of the Wi-Fi connection.*

7. To add comments (captions) to your photos, tap in the comment box from the "Sending Pictures" screen. Use the keyboard to add your personal comments to the photos you want to send. Tap "Send". Comments will appear along the bottom of the image displayed on your photo frame.

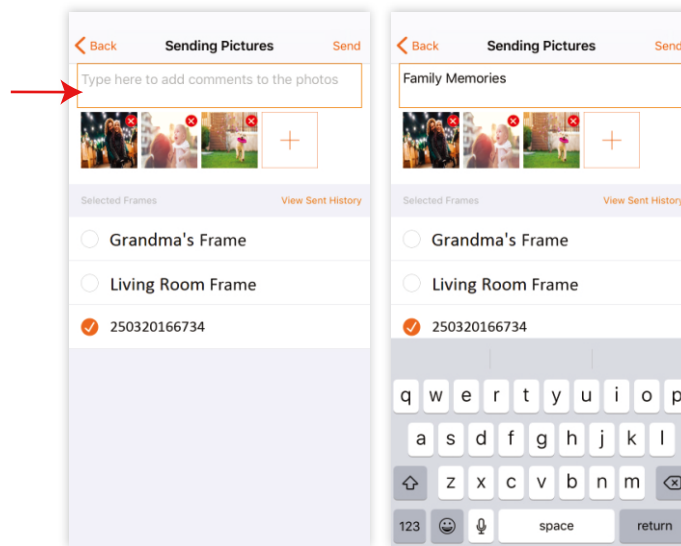


\*See the Settings/Options section to learn how to customize the comments settings on your frame.

尺寸：111x134mm


材质：128g铜版纸



 
- b. Tap the crop icon below the selected image.

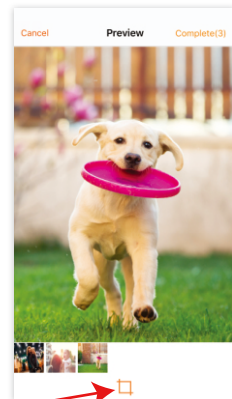

 - c. Drag the image so the important area is centered in the highlighted area. Then tap "OK".  
(For multiple images added from your device's album, you can swipe to the desired image or select it from the thumbnails along the bottom.)  
*NOTE: This step is important when viewing photos in full screen mode on the frame, ensuring that the important area of the photo is not cut off (for example, photos that were shot in portrait orientation).*

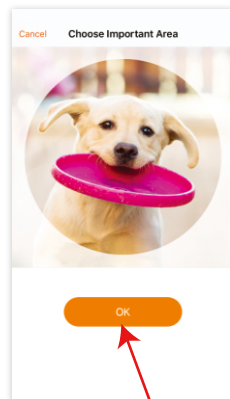

 4. The App will return to the "Sending Pictures" screen as shown. Tap "Send" at the top right of the App to send the photos.

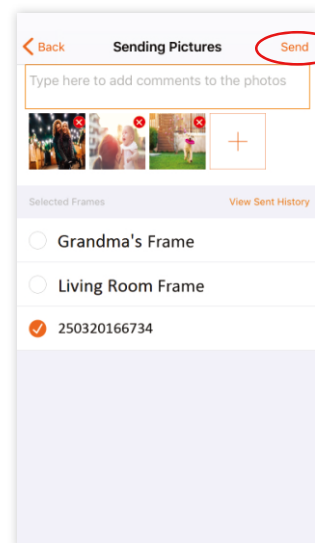


尺寸：111x134mm

材质：128g铜版纸




 5. The App will display the following messages indicating the photos were sent to the frame.

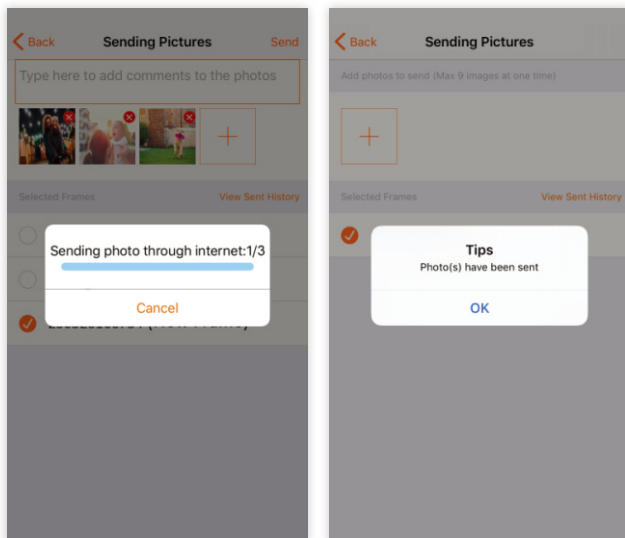

22

 6. To preview and adjust photos before sending:  
a. Tap "Preview".

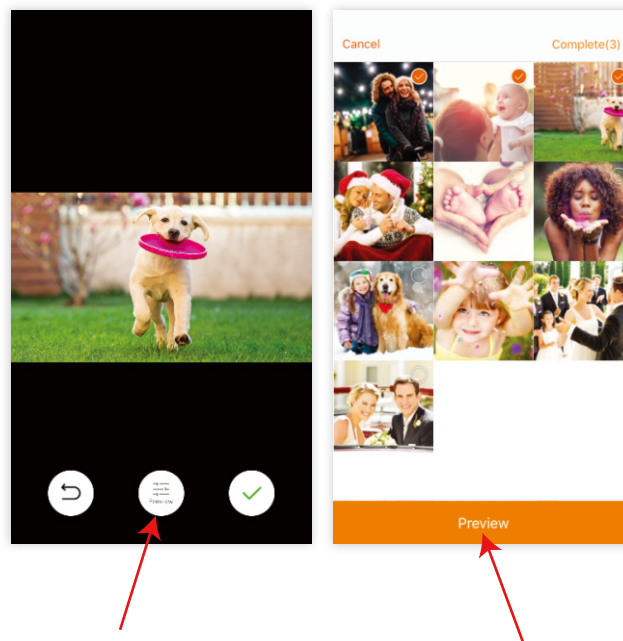

23