


RF3402




Recessed Wireless Window or Door Magnetic Contact Installation Instructions


Parts List

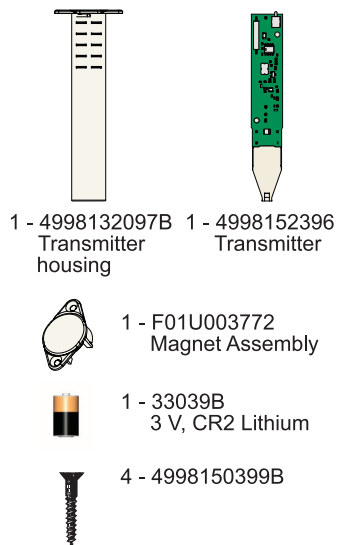

Mounting Locations

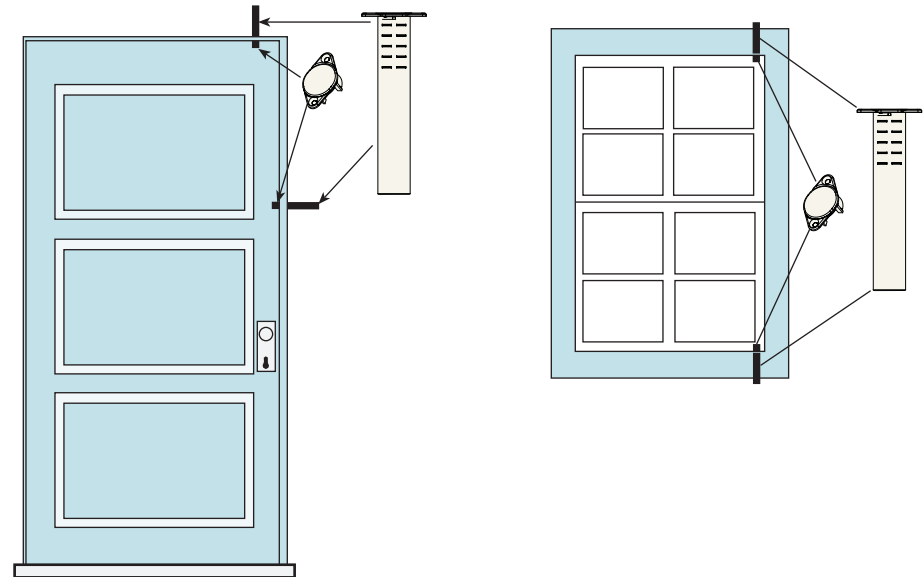

Tools Needed

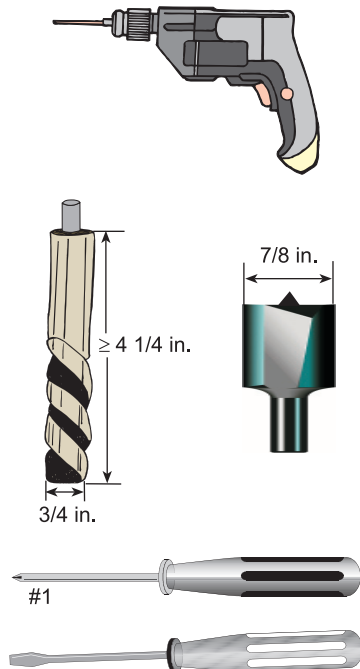

Compliance

UL


FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesirable operation.

Changes or modifications not expressly approved by Bosch Security Systems can void the user's authority to operate the equipment.

Specifications

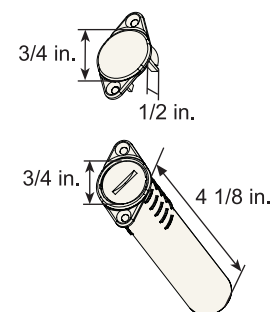

-20 °C to +65°C (-4°F to +149°F)
For UL Listed installations, the temperature range is 0°C to +40°C (+32°F to +104°F)

Battery Life:	5 years
Frequency:	304.00 MHz
Compatible Receiver:	RF3224
Humidity:	95° non-condensing

www.boschsecuritysystems.com

© 2004 Bosch Security Systems
F01U000844B



Security Systems


BOSCH

Installation


1




2

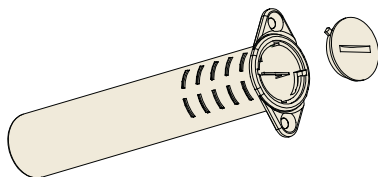

3

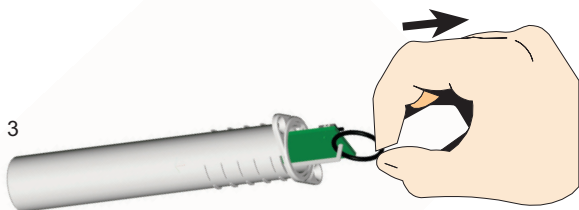


4 Control Panel Programming

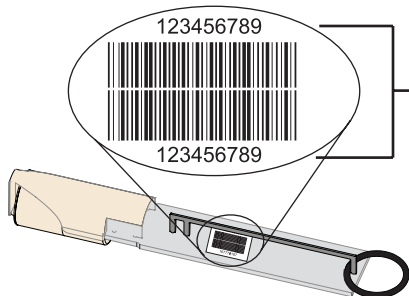

Use the number on your RF3402 to program the point transmitter into the control panel.

5 Battery Installation

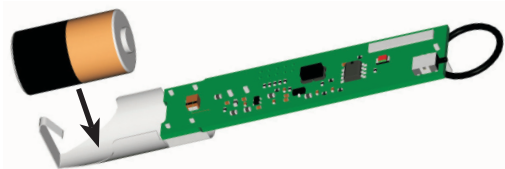

Recommended batteries:

Duracell DLCR2
Eveready EL1CR2
Sanyo CR2

6




7




2

Note: Install the magnet assembly on the the moving part of the door or window and the transmitter housing on the fixed part.

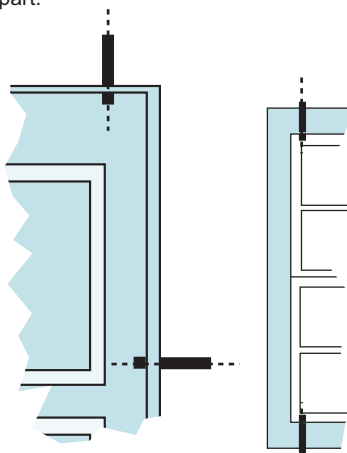


3

3 Flush Mount Only - Countersink

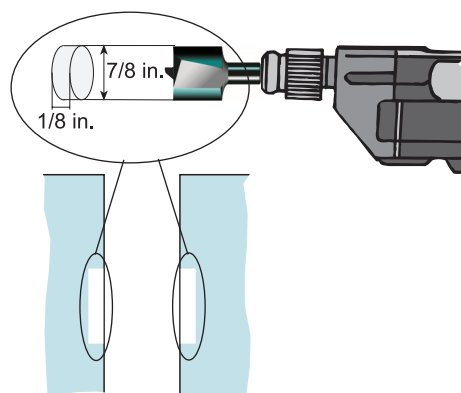



4

4 Surface and Flush Mount

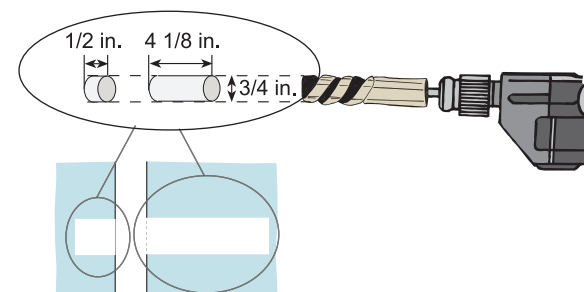


5

 5 Flush Mount

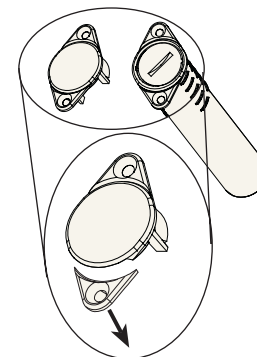

Surface Mount

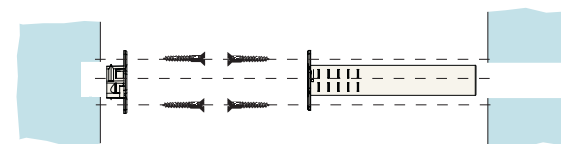

© 2004 Bosch Security Systems
F01U000844B

