

Figure 29
Inside Configuration of the EUT

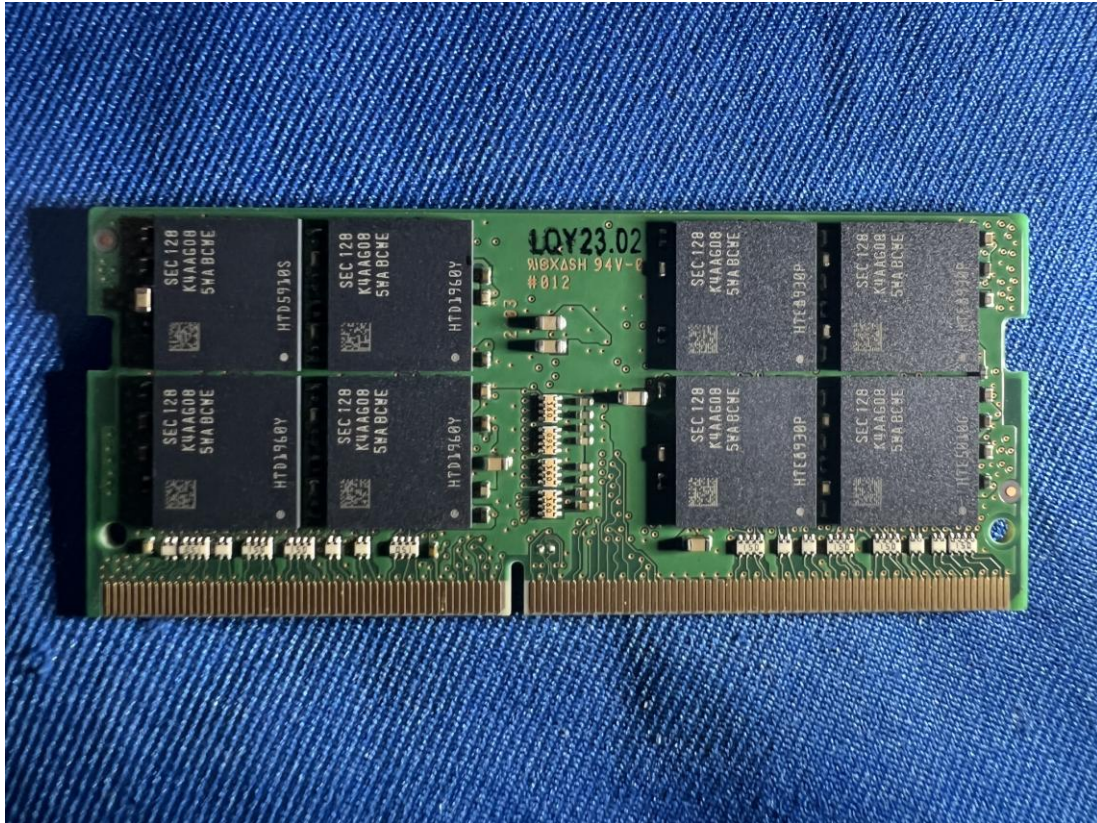


Figure 30
Inside Configuration of the EUT

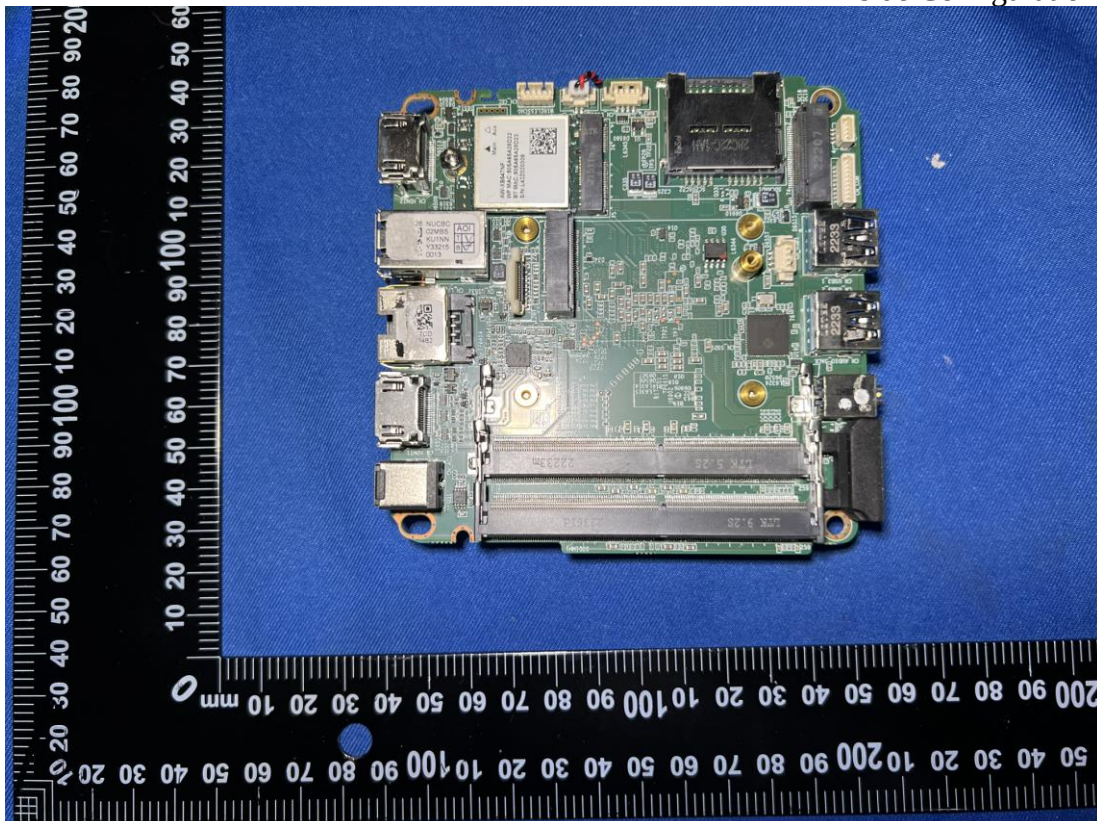


Figure 31
Inside Configuration of the EUT

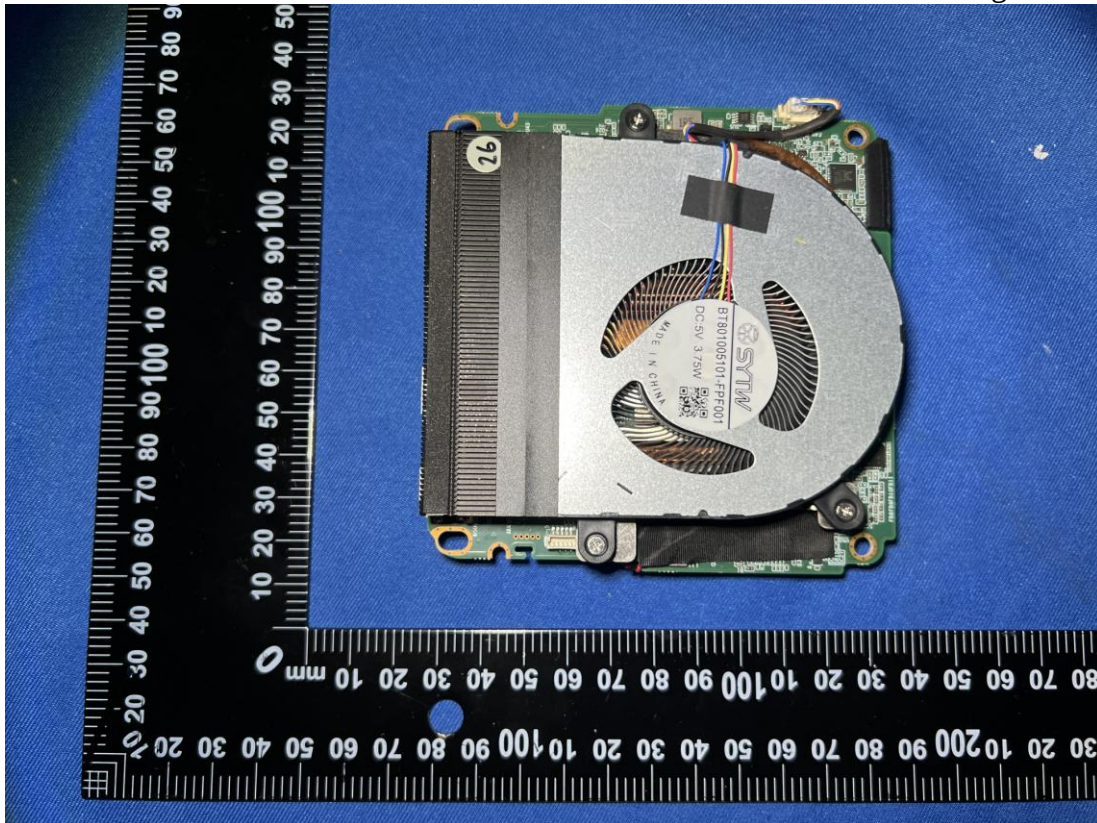


Figure 32
Inside Configuration of the EUT



Figure 33
Inside Configuration of the EUT



Figure 34
Inside Configuration of the EUT



Figure 35
Inside Configuration of the EUT

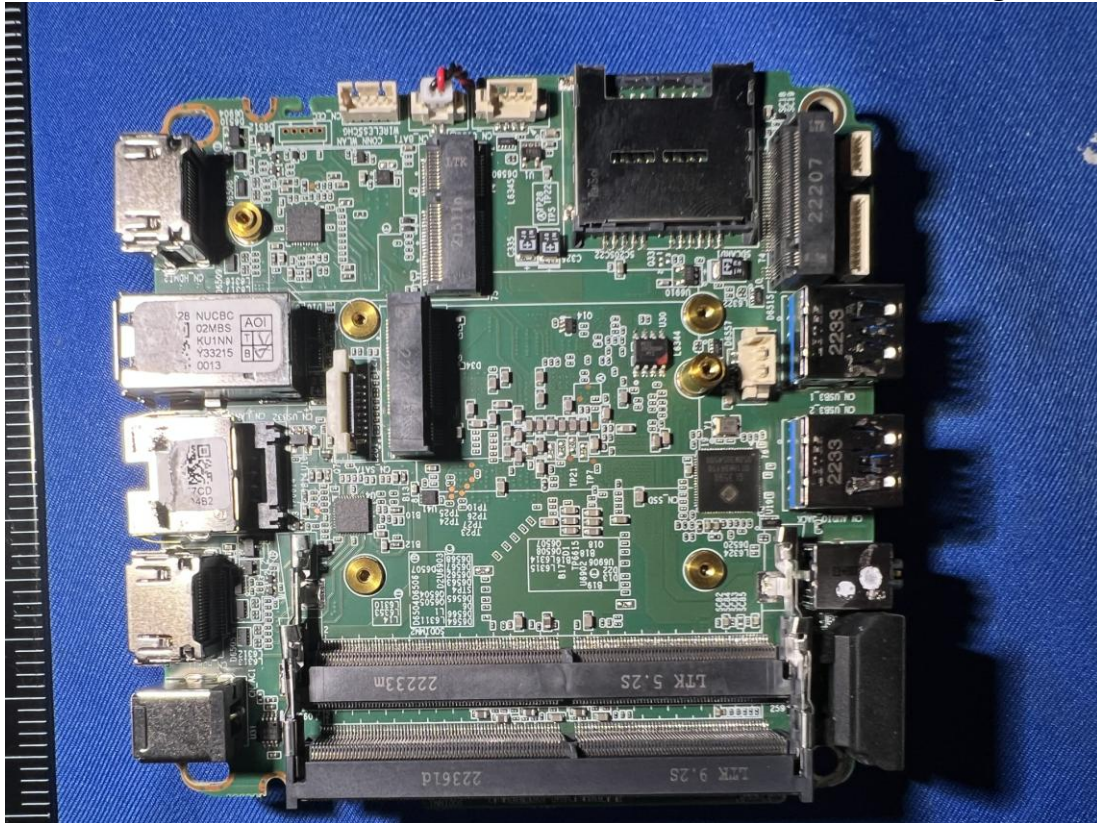


Figure 36
Inside Configuration of the EUT



Figure 37
Inside Configuration of the EUT


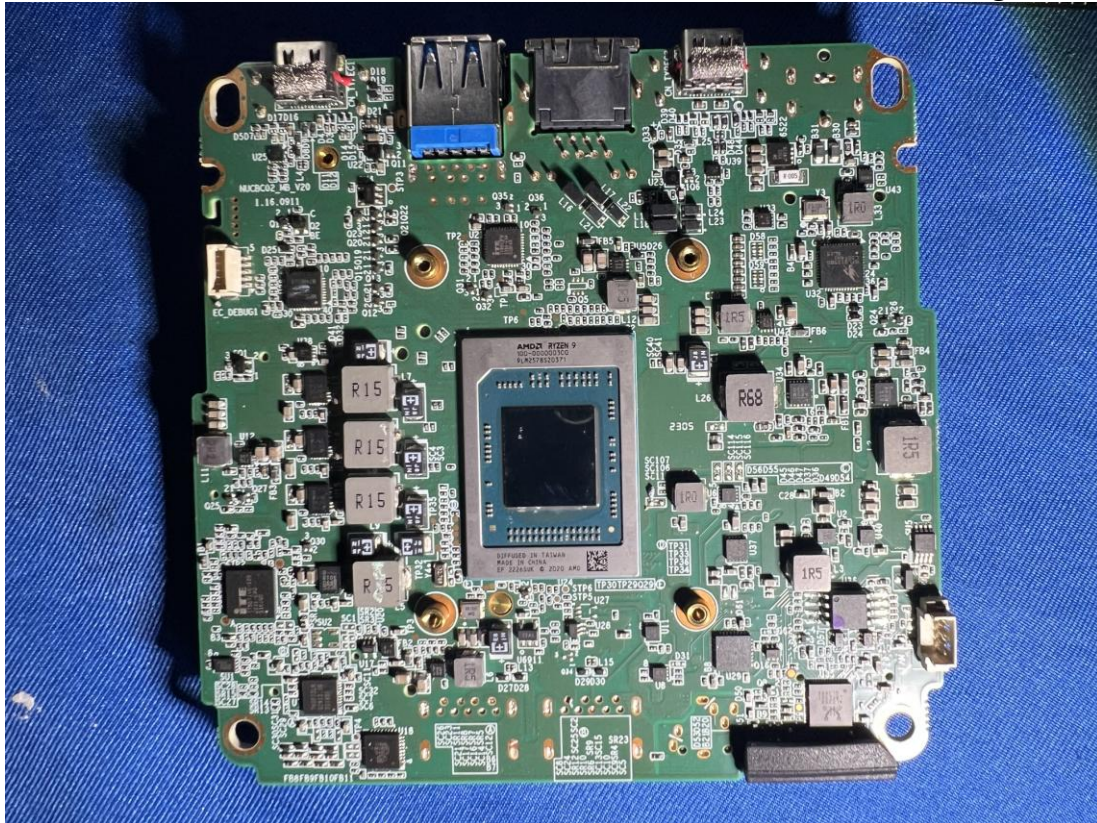


Figure 38
Inside Configuration of the EUT

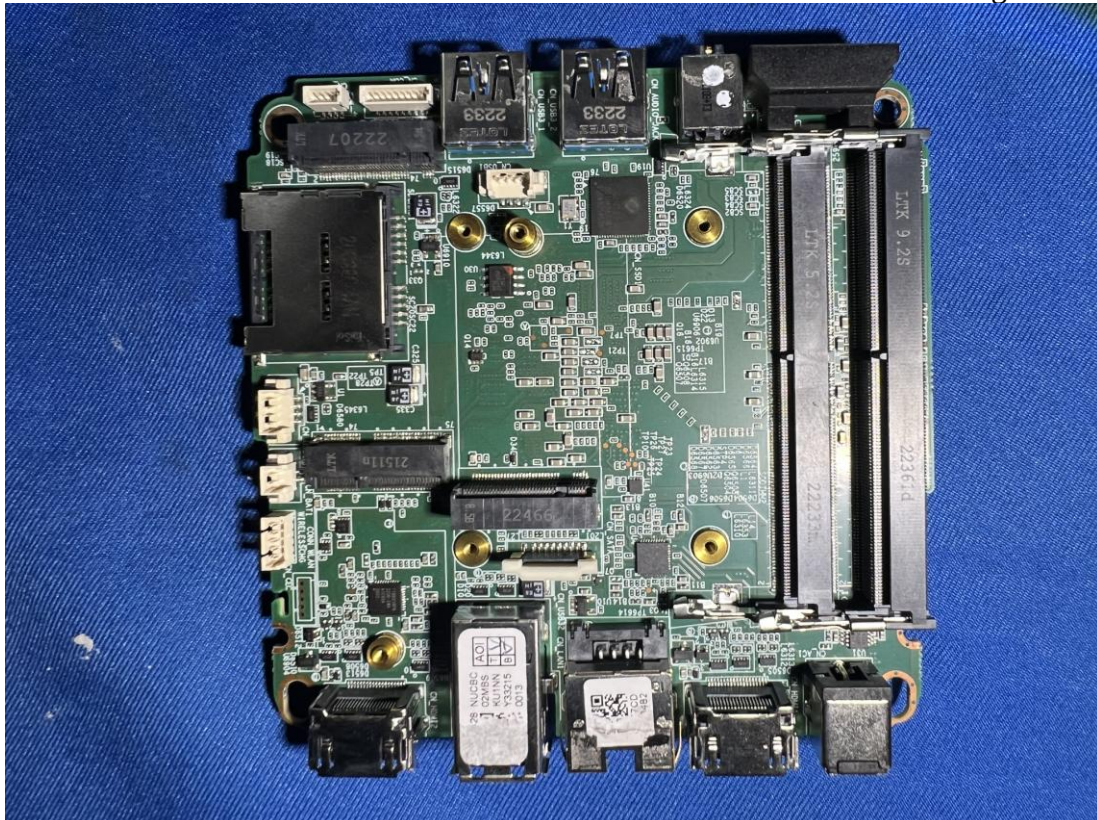

M/N: A1001-1904740DI

Figure 39
Power Supply

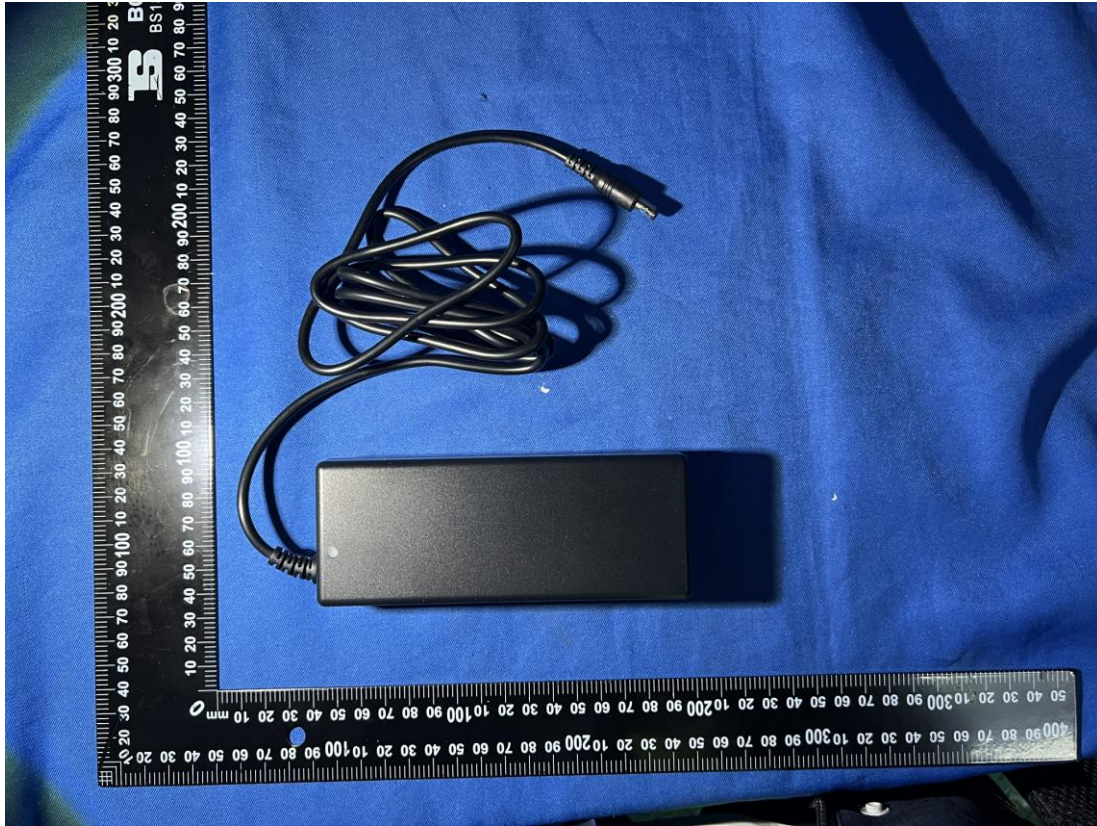


Figure 40
Power Supply



M/N: MS-Z6320R190-120D0-E

Figure 41
Power Supply



Figure 42
Power Supply



M/N: ADS-110CL-19-3 190090G

Figure 43
Power Supply



Figure 44
Power Supply



Figure 45
Power Cable



..... **THE END**