

# BTA100(英语+西班牙语)说明书:35.5x21cm



BTA100

## NOISE CANCELLING BLUETOOTH EARPHONES

English

English

English

English



## NOISE CANCELLING BLUETOOTH EARPHONES

## 1 Using your True Wireless Earphones

Charge the earbuds and case first. Make sure charging case and earbuds are fully charged.

STEP 1 Turn off the Bluetooth function from your music device. E.g., Mobile phone or music player.

STEP 2 Take out the earbuds from the charging case after they have been charged. The earphones will automatically turn on. You will hear "Power On" Wait 5 seconds so that both earbuds can connect to each other. After the dual earbuds have connected to each other, you will hear the Bluetooth device is ready to pair to suggest that both earbuds are paired successfully, and the status of the Right earbud will have blue light and red light flashing alternatively but Left earbud will have flashing blue light.

STEP 3 You can now turn on the Bluetooth function of your mobile phone or audio device. Search and select BTA100 on your device and connect. When the earbuds are connected with the device successfully, you will hear "Device connected" and earbuds will have very quickly linking blue light.

If you turn off the Bluetooth function on your mobile phone, you will hear "Bluetooth off" the Bluetooth device is ready to pair and the status of the right earbud will have blue light and red light flashing alternatively but Left earbud will have flashing blue light. The pairing mode between both earbuds and device will remain for about 5 minutes. After that earbuds will turn auto-off if there is no device connection in 5 minutes, and you will hear "power off".

Fig 1 (earbuds are in the image).  
After the initial settings, both earphones will auto-pair with your device directly and you can skip Step 1 and 2.

**Turn on/off ANC mode:** There are 3 modes: Spatial Awareness mode and ANC mode. Spatial Mode has no noise cancellations. Awareness mode shows some outside noise to warn you of noise cancellation, and ANC mode turns off the noise cancellation. Once connected to the device, step 1-2, you can long press the top of left ear or right earbud (see Fig 1 on the product image) for about 5 seconds to switch between each of the modes. Using press the earbuds for about 3 seconds, you will hear a prompt and voice prompt "Awareness mode on" and long press again for 3 seconds, and you will hear a prompt and voice "ANC mode on". Repeat again to cycle between each mode.

**2-Sensor Button Function:** (see Fig 3 (shown on the image)).

**On/Off:**  
Press and hold left and right earphones (see Fig 1) for 2 seconds to turn on earphones.

Long press left or right earphone top button (see Fig 1) for about 5 seconds, to turn off earphones. The earbuds can be turned off synchronously. You can only turn off the left and right earphones separately.

**Answer / Hang Up:**  
When there is an incoming call, short press the top button (Fig 1) on the left or right earphone to answer the phone (see Fig 1 on the image).

During the call, the earphones will slowly flashing blue light.  
short press the top button (Fig 1) on the left or right earphone to end the call.

When playing music, and there is an incoming call, music will be auto-paused and auto-play when end the call.

**Reject / Call Back:**  
When calling call, long press left or right earphones about 2 seconds to refuse the call. (Fig 1)

Three-click the right earphone to resume back to the last call, three-click the left earphone to open the voice assistant.

**Play / Pause Music:**

To pause playing music, short press either the left or right earbud (Fig 1) to pause. To continue playback, short press either the left or right earbud (Fig 1) to continue playback.

If one of the earbuds have run out of battery, the other one will continue to work until it runs out of power.

**Last / Next Song Control:**

When playing music, double-press the left earphone (Fig 1) to switch to the Last song. Double-press the right earbud to switch to the next song.

## Changing the case and earbuds.

Charge the charging case (Fig 2)

The charging case (Fig 2) charges the earbuds. It is important that the charging case is recharged. If so this, insert the provided USB charging cable to charge the charging case (Fig 2) with a USB power adapter.

The LED light near the charging port on the case will keep on flashing when it is charging; the LED light will keep on and off. Charging the case will take 5 hours to fully charge the case but charging without time may vary depending on battery status.

Note: When there is no charge left on the charging case, the case will start to flash to announce low battery, and then turn off automatically.

## Charge the earphones (Fig 3).

The charging case should be fully charged and have sufficient power before it can charge the earbuds. Put the earphones into the correct position on the charging case (Fig 2) for charging. Turn off the earbuds by long pressing the top button of both earbuds (Fig 1) for 8 seconds before placing them into the case.

If the earbuds are not placed securely into the case, it may not charge. Please take out the earbuds and re-insert them in the case. Also make sure the fit is properly closed so that changing the earbuds can start. Using large earpads could also obstruct the closure of the case, and so may need to be reviewed.

When the earphones are changing (outputs), the red led light on the earphones will turn on and off to confirm that charging has started. When the earphones are fully charged, the red led light on the earphones will turn blue and not be on/off about 12 seconds later.

When earphones are on low battery, you will hear a tone to announce low battery and the earphones' led will start to flash slowly. When the earphones run out of battery, you will hear "power off", and the earphones will be auto-off.

Note: When the charging case runs out of the battery, it is important to Turn off both earphones before charging them in the charging case. Turn off by pressing both earbuds (see Fig 1) for 8 seconds. If there is no power on the charging case, the earbuds will not auto-turn off when they are put back into the charging case. Therefore, the earbuds need to be manually turned off by pressing both the earbuds for 8 seconds simultaneously before putting back to the charging case. Charge the charging case (Fig 2) so that the earbuds can be recharged as well.

## 3 Frequently asked questions:

**Bluetooth earbuds cannot turn on?**

If you check if earbuds is with power or not? If not, please fully charge both earbuds before turning on. (Also charge the charging case as well to make sure there is enough power to charge the earbuds.)

2) Make sure the earbuds are properly charged by placing them securely into the charging case (Fig 2).

3) Turn on the earbuds please long pressing both earbuds for 8 seconds (Fig 1).

## Bluetooth earbuds signed is unavailable?

1)Please turn the Bluetooth earbuds by turning them off and then on. To do this long press (Fig 1) for 6 seconds to turn off and long press 4 seconds to turn on again.

2)Please kindly check the compatibility and signal communication quality of the mobile phone. The playing device should be no more than 1.5 meters (4 feet) from the earbuds.

3)The distance between both earbuds should be no more than 0.5 meter (2feet) apart.

4)Interference from other devices or areas (overloaded areas) may cause some signal instability. Move to another area to see if it improves.

## Why can't I hear voice / playback?

1)Please kindly check if your listening device volume is on or its mute status.  
2)Please kindly check if Bluetooth, earbuds and phone are connected well. Resetting the earbuds may be necessary (earbuds on how to reset).

3)Check the distance between earbuds and phone is fine.

**Reset :** If the earbuds are not pairing correctly or continue to have issues, please delete the earbuds from your phone by going to the phone's Bluetooth settings and removing it. Then follow steps 1-3 on the first page of this manual to re-pair your earbuds to your phone device.

**Pairing :** If earbuds are not pairing, then reset the earbuds by long pressing both earbuds (Fig 1) for about 8 seconds. Then follow steps 1-3 on the first page of this manual to re-pair the earbuds to your phone device.

**Charging :** After some time, the earbuds stop charging, try to use a dry cotton cloth to clean the bottom charging ports on the earbuds, and the inductive pins on the charging case to remove any static and avoid.

## Specifications:

Model: BTA100

Bluetooth Version: 5.3

Power: 5V

Charging Working Time: About 4 hours at 50% volume

Charging Battery capacity: 40mAh+40mAh=80mAh

Charging Current: Very quickly (100mA)

Charging Type: USB-C

Power: 5V

Notes: Playback and charge times are approximate and are based on 80% volume and earbuds and case being fully charged and ANC is off. Playback and charge times may be affected by several factors including battery age, temperature, dimensions, and distance used. These playback times are for charge already in the ear and a fully charged case.

**Limited 10-Day Warranty:** Sentry warrants this product to be free from defects in materials and workmanship for 10 days from the date of original purchase. This warranty does not extend to damage resulting from accident, abnormal use, misuse or neglect. Any defective product will be replaced if returned to an authorized Sentry dealer or to Sentry directly at P.O. Box 288, One Bridge Street, Haledon, NY 10521. Please enclose a \$3 check for return shipping.

The Bluetooth word mark and logo are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sentry Industries Inc. is under license. Other trademarks and trade names are those of their respective owners.

Sentry Industries Inc. declares that this equipment BTA100 is in compliance with Directive 2014/53/EU. The EU Declaration of conformity is available at <http://www.sentryindustries.com/eu-conformity-declaration-of-conformity/>.

**Confidentiality with Directive:**

This product is CE marked in accordance with Directives 73/23/EEC (low voltage) and 89/336/EEC (Electromagnetic Compatibility), as amended.

## Environmental Protection:

These electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



Supplier's Declaration of Conformity 47 CFR 47 CFR Part 10.21, 13.1030 Compliance  
Sentry Industries Inc. Responsible Party

- SENTRY INDUSTRIES INC.  
101 BRIDGE STREET, MILLBURN,  
NEW JERSEY, USA  
TEL: +1 973 633 9116

## FCC Compliance Statement

**FCC:** This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2ABPC/BTA100 Model #BTA100

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different than that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

USB Type-C™ and USB-C® are registered trademarks of USB Implementers Forum.

## Charging your device

Only use a power adapter with applicable country regulations and international and regional safety standards. Other power adapters may not meet applicable safety standards, and using such adapters could pose a risk of death or injury.

Avoid prolonged skin contact with the charging cables and connector when the charging cable is connected to a power source because it may cause discomfort or injury. Cleaning or sitting on the charging cable or connector should be avoided.

**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods. For traffic safety, do not use headphones while driving or cycling.

If you have a pacemaker or other electrical medical devices, you should consult your physician before using the product.

**Choking hazard:** The product, packaging and some of the included accessories may present a choking hazard to small children, keep these accessories away from small children. The bags themselves or the many small parts they contain may cause choking if ingested.

**Danger:** Improper battery replacement may cause an explosion and injury.