

## QUICK START HOW TO GUIDE

### How to use without remote:

1. Activate the toy by quickly pressing the on/off button once. The toy will buzz then stop.
2. Quickly press the on/off button again to find desired vibration modes.
3. Quickly press the on/off button to change vibration modes.

### How to use with remote:

1. Activate the toy first by quickly pressing the on/off button on the toy once. The toy will buzz then stop.
3. Quickly press the on/off button on the remote to start vibration modes.
4. Quickly press the on/off button on the remote to find desired vibration mode.
5. To change intensity levels, press the +/- button on the remote.



### How to charge:

1. Insert the USB port, red light indicates charging, solid green light indicates toy is fully charged.

niki



SCAN TO ACCESS  
FULL PRODUCT GUIDE  
AND USE INSTRUCTIONS

VēDO

follow us @vedo.toys



#### **FCC STATEMENT**

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver.  
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.

#### **RF warning statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.