



CHCNAV iBase GNSS User Guide



Make your work more efficient

Revision 2.0

Feb 27, 2023

Table of Content

Table of Content.....	3
Preface	6
Copyright	6
Safety Warnings.....	6
1 Introduction	6
1.1 Safety Information	7
1.1.1 Warnings and Cautions.....	7
1.2 Regulations and Safety	7
1.2.1 Use and Care.....	7
1.3 Technical Support	7
1.4 Disclaimer	8
1.5 Your Comments	8
2 Getting Started with iBase	9
2.1 About the Receiver	9
2.2 Parts of the Receiver.....	9
2.2.1 Front Panel.....	9
2.2.2 Lower Housing	11
2.2.3 Receiver Ports.....	11
2.3 Batteries and Power	12
2.3.1 Internal Batteries	12
2.3.2 Charging the Battery.....	12
2.3.3 Battery Safe	13
2.4 Inserting Battery and SIM Card.....	14
2.5 Product Basic Supply Accessories.....	15
2.6 Connecting to a Controller	16
2.6.1 Connecting via Wi-Fi with LandStar 7 Software	16
2.6.2 Connecting via Bluetooth with LandStar 7 Software.....	18
2.7 Downloading Logged Data.....	20
2.7.1 FTP Download.....	20
2.7.2 Web Server Download.....	22
3 Front Panel Operation	23
3.1 Main Operation Menus	23
3.2 Configure the Working Mode	25
4 Equipment Setup and Operation	29
4.1 Post-processing Base Station Setup.....	29
4.2 Real-Time Base Station Setup.....	30
4.2.1 Internal Cellular or UHF	30

4.2.2 External UHF	31
4.3 Real-Time Rover Station Setup	33
5 Configuring Through a Web Browser	34
5.1 Status Menu.....	36
5.1.1 Position Submenu.....	36
5.1.2 Activity Submenu.....	36
5.1.3 Google Map Submenu	37
5.2 Satellites Menu	37
5.2.1 Tracking Table Submenu	38
5.2.2 Tracking Info. Table Submenu.....	38
5.2.3 Tracking Skyplot Submenu.....	39
5.2.4 Satellite Activation Submenu.....	39
5.3 Receiver Configuration Menu.....	40
5.3.1 Description	40
5.3.2 Antenna Configuration Submenu	40
5.3.3 Reference Station Settings Submenu	41
5.3.4 Receiver Reset Submenu	43
5.3.5 Languages Submenu.....	43
5.3.6 User Management Submenu.....	43
5.3.7 HCPPP Settings Submenu	44
5.4 Data Recording Menu	44
5.4.1 Log Settings Submenu	44
5.4.2 FTP Push Settings Submenu	46
5.4.3 FTP Push Log Submenu.....	47
5.4.4 Data Download Submenu.....	48
5.5 IO Settings Menu	49
5.5.1 IO Settings Submenu	49
5.6 Network Setting Menu	56
5.6.1 Description Submenu	56
5.6.2 Mobile Network Setting Submenu	57
5.6.3 Email Alarm Submenu	57
5.6.4 HTTP Submenu	58
5.6.5 HTTPS Submenu	59
5.6.6 FTP Service Submenu	59
5.7 Module Setting Menu.....	59
5.7.1 Description Submenu	60
5.7.2 WiFi Submenu	60
5.7.3 Bluetooth Settings Submenu.....	60
5.7.4 Radio Settings Submenu.....	61
5.8 Firmware Menu	62
5.8.1 Firmware Info Submenu	62

5.8.2 Hardware Version Submenu	62
5.8.3 Config File Submenu	63
5.8.4 System Log Download Submenu	63
5.8.5 User Log Submenu	63
5.8.6 Firmware Update Submenu	64
5.8.7 GNSS Board Upgrade Submenu	65
5.8.8 Upgrade Online Submenu	65
5.8.9 GNSS Registration Submenu	65
5.9 Cloud Service Setting Menu	66
5.9.1 Cloud Service Setting Submenu	66

Preface

Copyright

Copyright 2016-2017

CHC | Shanghai Huace Navigation Technology Ltd. All rights reserved. The CHC are trademark of Shanghai Huace Navigation Technology Limited. All other trademarks are the property of their respective owners.

Trademarks

All product and brand names mentioned in this publication are trademarks of their respective holders.

Safety Warnings

The Global Positioning System (GPS) is operated by the U.S. Government, which is solely responsible for the accuracy and maintenance of the GPS network. Accuracy can also be affected by poor satellite geometry and obstructions, like buildings and heavy canopy.

1 Introduction

The iBase GNSS Receiver User Guide describes how to set up and use the CHC® iBase GNSS receiver. In this manual, “the receiver” refers to the iBase GNSS receiver unless otherwise stated. Even if you have used other Global Navigation Satellite Systems (GNSS) products before, CHC recommends that you spend some time reading this manual to learn about the special features of this product. If you are not familiar with GNSS, go to www.chcnav.com for an interactive look at CHC and GNSS.

1.1 Safety Information

1.1.1 Warnings and Cautions

An absence of specific alerts does not mean that there are no safety risks involved.

A Warning or Caution information is intended to minimize the risk of personal injury and/or damage to the equipment.



WARNING - A Warning alerts you to a potential misused or wrong setting of the equipment.



CAUTION - A Caution alerts you to a possible risk of serious injury to your person and/or damage to the equipment.

1.2 Regulations and Safety

The receivers contain a built-in wireless modem for signal communication through Bluetooth® wireless technology or through external communication datalink. Regulations regarding the use of the wireless modem vary greatly from country to country. In some countries, the unit can be used without obtaining an end-user license. However, in some countries, the administrative permissions are required. For license information, consult your local dealer. Bluetooth® operates in license-free bands.

Before operating a iBase GNSS receiver, determine if authorization or a license to operate the unit is required in your country. It is the responsibility of the end-user to obtain an operator's permit or license for the receiver for the location or country of use.

1.2.1 Use and Care

This receiver is designed to withstand the rough environment that typically occurs in the field. However, the receiver is high-precision electronic equipment and should be treated with reasonable care.



CAUTION - Operating or storing the receiver outside the specified temperature range will cause irreversible damage.

1.3 Technical Support

If you have a problem and cannot find the information you need in this manual or CHC website

(www.chcnav.com), contact your local CHC dealer from which you purchased the receiver(s).

If you need to contact CHC technical support, please contact us by email (support@chcnav.com) or Skype (chc_support).

1.4 Disclaimer

Before using the receiver, please make sure that you have read and understood this User Guide, as well as the safety information. CHC holds no responsibility for the wrong operation by users and for the losses incurred by the wrong understanding about this User Guide. However, CHC reserves the rights to update and optimize the contents in this guide regularly. Please contact your local CHC dealer for new information.

1.5 Your Comments

Your feedback about this user guide will help us to improve it in future revision. Please email your comments to support@chcnav.com.

2 Getting Started with iBase

2.1 About the Receiver

The iBase GNSS receiver is a professional GNSS base station. The working performance is close to GNSS receiver with external radio, but user no need to carry heavy external battery, external radio and radio antenna. 5W internal radio ensures that the end user can reach 8km work range. It supports the radio interference checking technology, judge the radio signal real time, make sure user can select the most suitable channel to use.

The LCD panel enables user to check satellite-tracking status, internal battery status, Wi-Fi status, working mode, data logging status and basic receiver information. Bluetooth and Wi-Fi technology provides cable-free communication between the receiver and controller.

The receiver can be used as the part of an RTK GNSS system with CHC LandStar 7 software.

To configure the receiver for performing a wide variety of functions, you can use the web interface by connecting the receiver with PC or smartphone through Wi-Fi.

2.2 Parts of the Receiver

The operating controls are all located on the front panel. Battery compartment and SIM card slot are on the bottom. Serial port is located on the bottom of the unit. The radio antenna port is located on the top of the unit.

2.2.1 Front Panel

The following figure shows a front view of the receiver.



The front panel contains four indicator LEDs and two buttons.



Name	Description
Correction LED (Orange)	<ul style="list-style-type: none"> Indicates whether the receiver is transmitting differential data. The green LED flashes once per second when <ul style="list-style-type: none"> As a Base station: successfully transmitting differential data. As a Rover station: successfully receiving differential data from Base station.
Satellite LED (Blue)	<ul style="list-style-type: none"> Shows the number of satellites that the receiver has tracked. When the receiver is searching satellites, the blue LED flashes once every 5 seconds. When the receiver has tracked N satellites, the blue LED will flash N times every 5 seconds.
Fn button	<ul style="list-style-type: none"> Move to next line of the menus or options. Move to next character of the value that you want to make change. Cancel the change you make on a function.
Power button	<ul style="list-style-type: none"> Works as a Power button: Press and hold this button for 3 seconds to turn on or turn off the receiver. Works as a Confirm button Hold Fn button and press this button for 5 times continuously to reset the mainboard.



2.2.2 Lower Housing

The lower housing contains one SIM card slot, two battery compartments, one TNC radio antenna connector, two communication and power ports, one 5/8-11 threaded insert, and two nameplates.



2.2.3 Receiver Ports



Port	Name	Description
	IO port	<ul style="list-style-type: none">This port is a 7-pin LEMO connector that supports RS-232 communications and external power input.Users can use a 7-pin cable to transmit differential data to an external radio.
	Radio antenna connector	<ul style="list-style-type: none">Connect a radio antenna to internal radio of the receiver. And this connector is not used if you are using an external radio.

2.3 Batteries and Power

2.3.1 Internal Batteries

The receiver has two rechargeable Lithium-ion batteries, which can be removed for charging.



2.3.2 Charging the Battery

The rechargeable Lithium-ion battery is supplied partially charged. Charge the battery completely before using it for the first time. To charge the battery, first remove the battery from the receiver, and then place it in the battery charger which is connected to AC power.



WARNING – Charge and use the rechargeable Lithium-ion battery only in strict accordance with the instructions. Charging or using the battery in unauthorized equipment

can cause an explosion or fire and can result in personal injury and/or equipment damage.

To prevent injury or damage:

- Do not charge or use the battery if it appears to be damaged or leaking.
- Charge the Lithium-ion battery only in a CHC product that is specified to charge it. Be sure to follow all instructions that are provided with the battery charger.
- Discontinue charging a battery that gives off extreme heat or a burning odor.
- Use the battery only in CHC equipment that is specified to use it.
- Use the battery only for its intended use and according to the instructions in the product documentation.

2.3.3 Battery Safe



WARNING – Do not damage the rechargeable Lithium-ion battery. A damaged battery can cause an explosion or fire and can result in personal injury and/or property damage.

To prevent injury or damage:

- Do not use or charge the battery if it appears to be damaged. Signs of damage include, but are not limited to discoloration, warping, and leaking battery fluid.
- Do not expose the battery to fire, high temperature, or direct sunlight.
- Do not immerse the battery in water.
- Do not use or store the battery inside a vehicle under hot weather condition.
- Do not drop or puncture the battery.
- Do not open the battery or short-circuit its contacts.



WARNING – Avoid contact with the rechargeable Lithium-ion battery if it appears to be leaking. Battery fluid is corrosive and contact with it can result in personal injury and/or property damage.

To prevent injury or damage:


- If the battery leaks, avoid with the battery fluid.
- If battery fluid gets into your eyes, immediately rinses your eyes with clean water and seek medical attention. Please do not rub your eyes!
- If battery fluid gets onto your skin or clothing, immediately use clean water to wash off the

battery fluid.

2.4 Inserting Battery and SIM Card

(1) Inserting battery:

- (a) Push down the spring-loaded button on the battery cover to open the cover.
- (b) Put the battery into the iBase slot, lock the battery as the picture shows like below.

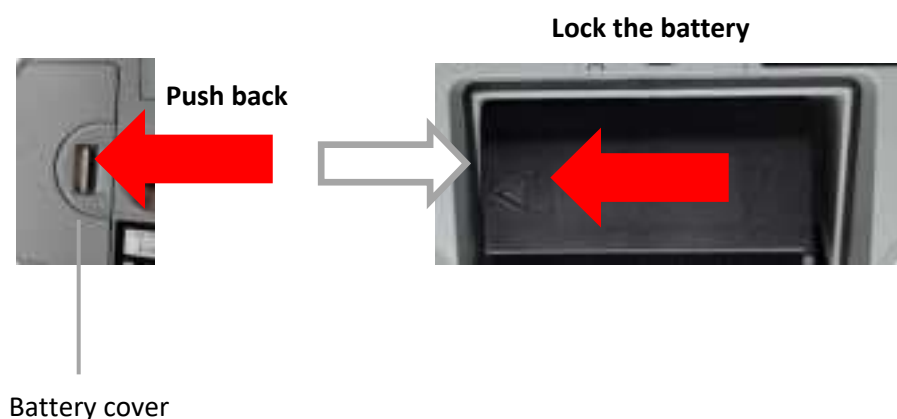

- (c) Close the battery cover to prevent water immersion.
- (d) To remove the battery, unlock the battery from the slot first.

(2) Inserting SIM card:

- (a) Push down the spring-loaded button on the battery cover to open the cover.
- (b) Insert the SIM card with the contacts facing downward, as indicated by the SIM card icon on the battery slot.



SIM slot

(c) Close the battery cover to prevent water immersion.

(d) To eject the SIM card, slightly push it in to trigger the spring-loaded release mechanism

Insert the SIM card with the contacts facing upward, as indicated by the SIM card icon next to the SIM card slot.

To eject the SIM card, slightly push it in to trigger the spring-loaded release mechanism.

Tip – The SIM card is provided by your cellular network service provider.

2.5 Product Basic Supply Accessories

Item	Picture
iBase GNSS Receiver	
UHF Bar Antenna (450-470 MHz)	
Lithium Battery	
H.I. Tape	
Extension pole	

C300 Pedestal charger	
C300 Power Adapter with Cord	
Tribrach adaptor	
Tribrach with optical plummet	
Auxiliary H.I. Tool	
Transport Hard Case	

2.6 Connecting to a Controller


2.6.1 Connecting via Wi-Fi with LandStar 7 Software

Turn on the controller → run LandStar 7 → go to **Config** main menu → tap **Connect**.

In the *Connect* screen, select **CHC** for the *Manufacture* field, **iBase** for *Device Type* field, **WIFI** for *Connection Type* field.



Tap the Wireless Lan icon on the right side to select the hot spot → Switch on the WiFi module by the top switch → select the target device in the list.

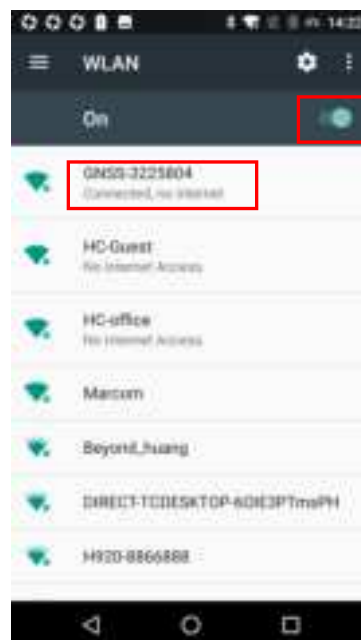


Tap **Connect** to link to the hot spot. If the first-time connection to this hot spot, user may type in the password.



Tip – The Wi-Fi key of the receiver is 12345678 by default.


Tap the **Connect** button to build the connection.

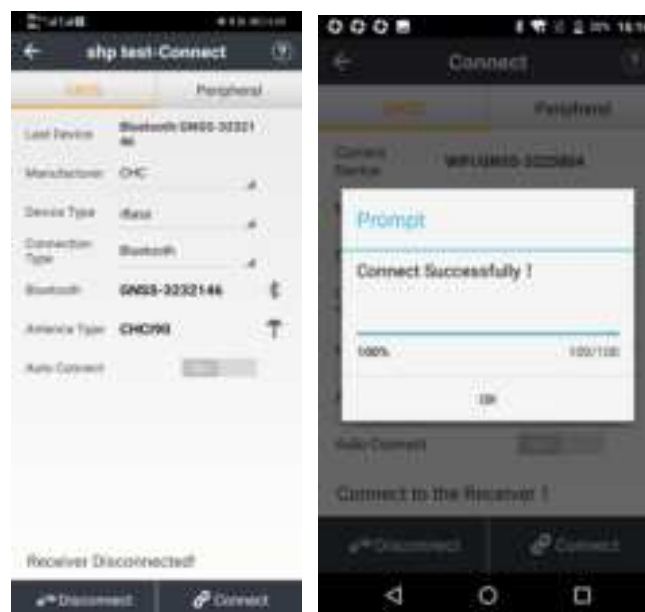


2.6.2 Connecting via Bluetooth with LandStar 7 Software

Turn on the controller → run LandStar 7 → go to **Config** main menu → tap **Connect**.


In the *Connect* screen, select **CHC** for the *Manufacture* field, **iBase** for *Device Type* field, **Bluetooth** for *Connection Type* field.

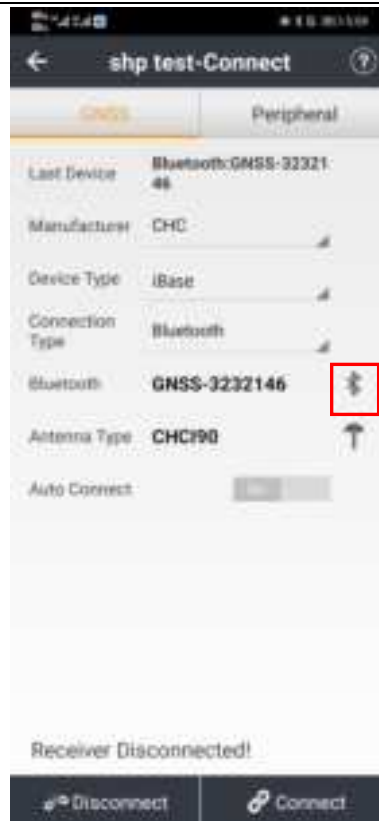

Tap the **Bluetooth Manager** and turn on the **Bluetooth** function to search Bluetooth device around → select the target device in the list → Tap back button → select the target device in the Bluetooth manager list.

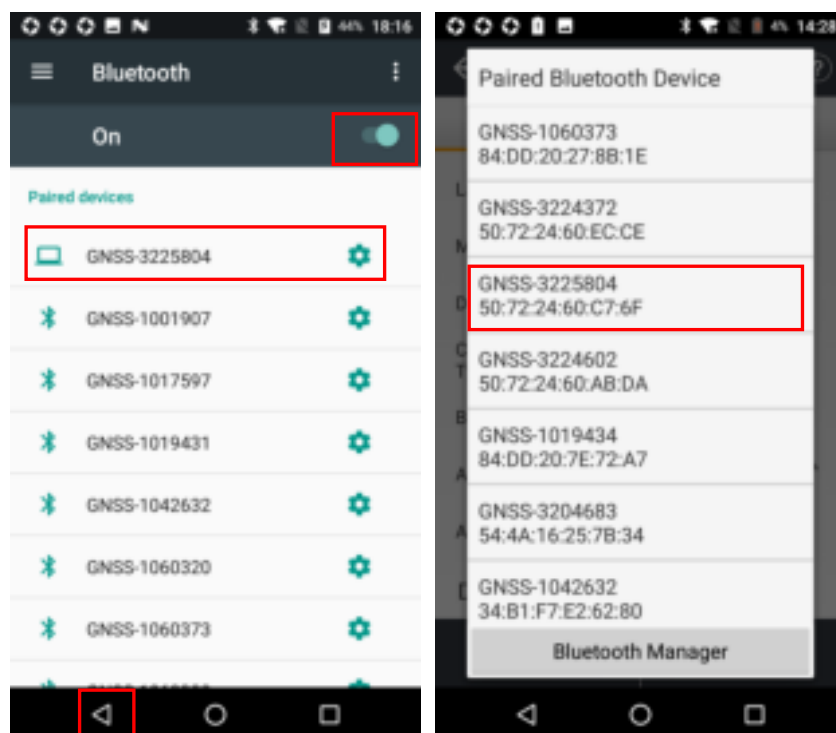

Tap the **Connect** button to build the connection.

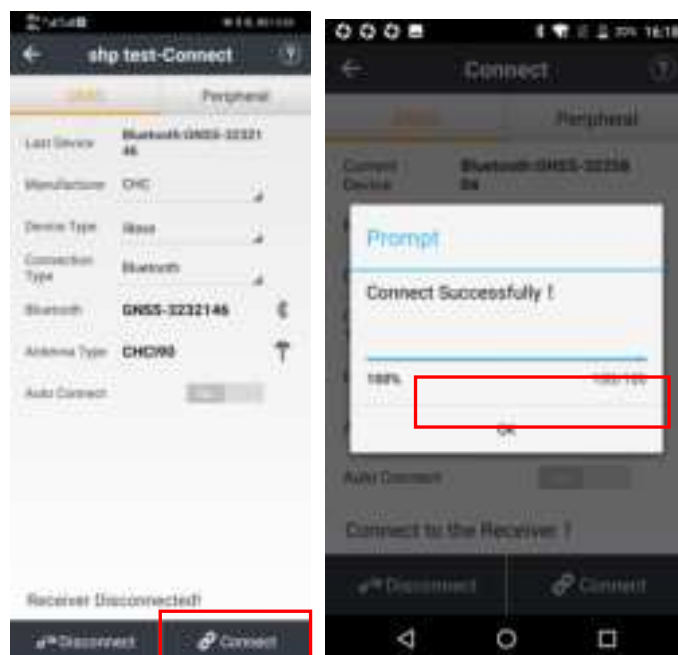


2.7 Downloading Logged Data

Data logging involves the collection of GNSS measurement data over a period at a static point or points, and subsequent post-processing of the information to accurately compute baseline information. Data logging using receivers requires access to suitable GNSS post-processing software such as the CHC Geomatics Office (CGO) Software.


2.7.1 FTP Download

The procedures of downloading logged data through FTP are as follows:


- (1) Switch on the receiver, search its Wi-Fi in the computer and connect.
- (2) After the successful connection, open the file manager in the computer and input "ftp:\\192.168.1.1" in the address box.

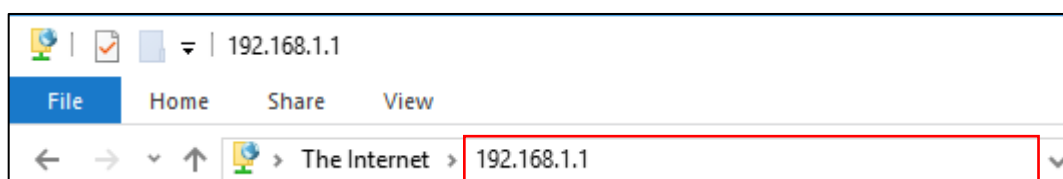


- (3) Input user name and password, the default user name and password are "ftp".

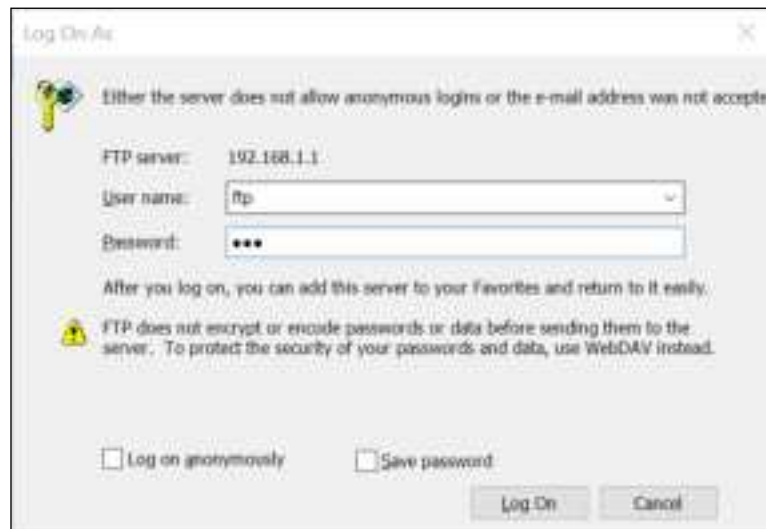


(4) Double click the folder “repo_receiver SN” (take 3225804 as example), you will see 9 folders. The “push_log” folder is used to save the log files, and the other 8 folders represent different logging sessions and are used for store static data.

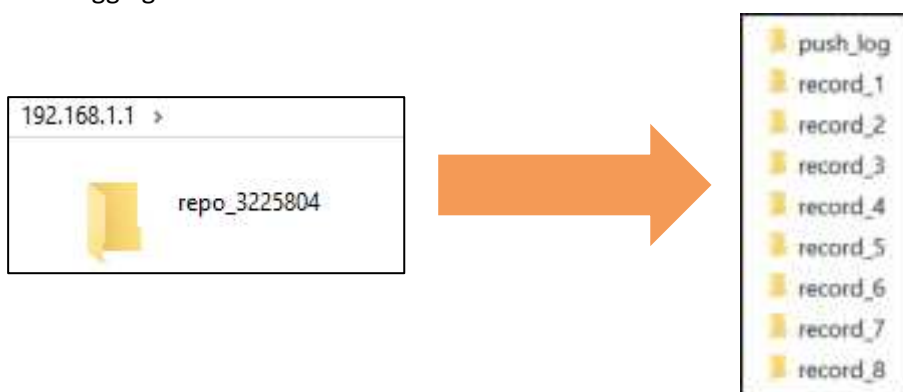

(5) Double click the folder that you have configured to store the static data, you will see the folder(s) created by the iBase system automatically and named by the date which is decide by GPS time when you start to log data.

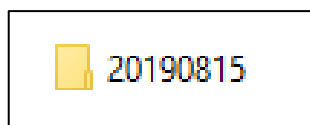


(6) Select the destination folder and double click it, two folders named as different data format (hcn and rinex) will be displayed.

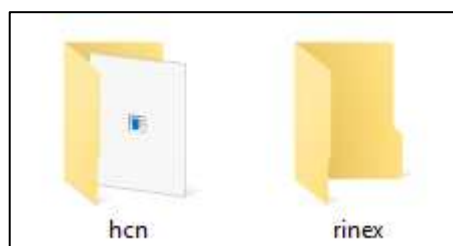

(7) Select the data format that you configured to save the static data, you will find the static

 raw data.



Notes: For hcn files, the name of the file is represented as XXXXXXDDDNN, where XXXXXX is the SN of the receiver, DDD is day of year, and NN is the recording session.



WARNING – The static data will be saved in the first logging session, the “record_1” folder, by default. Old files will be deleted if the storage space is full. If you configure not to auto delete old files when the memory is low, the receiver will stop data logging.

2.7.2 Web Server Download

The procedures of downloading logged data through web server refer to [5.4.4 Data Download Submenu](#).

3 Front Panel Operation

The front panel contains one LCD screen, two indicator LEDs, and two buttons. The operating controls are all located on the front panel.

3.1 Main Operation Menus

The top-level menu of the front panel includes 6 parts: Status, mode, static and info. Status shows satellites, receiver solution and the power percentage. Mode is the important part which illustrate the work mode and users can select the mode according to their needs. Static is used to set static mode. Info is the basic information of firmware such as SN, PN and etc.

The details of main operation are as follows and they are concluded two tables. The first table includes 5 parts: Info, SV, Power, Data and Set and the second table displays details of Data.

Top-level Menu	Second-level Menu	Description
Status	36=G07 R03....	Indicate the total number of satellites that have been tracked and the number of satellites tracked of each constellation, where G represents GPS, R represents GLONASS, C represents BeiDou, S represents SBAS and E represents Galileo.
	Power	Indicates the remaining power of the battery inserted in the left (B) and right (A) battery compartment.
	WIFI ON/OFF	Press Enter to turn on or turn off WIFI
	Network status	displays the if a sim card inserts the RTK
	Back	Press Enter to back to last page

Mode	Ultra Base Base External UHF Base Internal UHF Base APIS Base External UHF & APIS Rover APIS Rover UHF Rover NTRIP Back		<ul style="list-style-type: none"> • Press Enter button to enter the configuration screen of the selected working mode. • More operation information, see 3.2 Configure the Working Mode.
Static	Set on/off		Press Enter button to switch static measurement on or off.
	Recording 00:00		Display the time of recording
	Advanced	Sample	Press Enter to change sample interval (1s, 2s, 5s, 10s, 15s, 30s, 1m)
		Elev Mask 10 degree	Press Enter button to change the mask degree from 0 degree to 90 degrees.
		Duration 1440min	<ul style="list-style-type: none"> • Press Enter button to enter Duration Time Setting screen. • In the Duration Time Setting screen, press Fn button to move to the character of the duration time value user want to make change, and then press Enter button to change from 0 to 9. After the change has been done, user can press Fn button to move to OK field, and then Press Enter button to save the change and back to the second-level menu; or press Fn button to move to Cancel field and press Enter button to cancel the change and back to the second-level menu.
		Measurement phase Center	Press Enter button and switch height between oblique, vertical, phase center.
		Antenna Height 0.0000m	Press Enter button and input the measured antenna height.

		Back	Press Enter button to back to the last menu.
		OK	Press Enter to complete settings.
		Back	Press Enter button to back to the top-level menu.
Info	SN 322584 PN 118032 -015701 -020104 Register 2020-09-16 Sleep Time 1min Version 2.0.7 IMEI 861529049455435 Language English Back		Describe the main information of this machine. SN displays the Serial Number of the receiver. PN displays the Part Number of the receiver. Register displays the expiry date of registration code. Press Enter to select sleep time including 5s, 10s, 30s, 1min, 30min. Version displays the firmware version. IMEI is International Mobile Equipment Identity which is used to identify the RTK. Press Enter to change languages. Press back to go back to the previous menu.

3.2 Configure the Working Mode

7 working modes are provided for quickly setting up an RTK base station or rover station. Users can configure each working mode through the front panel as follows:

Top-level Menu	Second-level Menu	Description
Ultra Base		Reserved for the Ultra Base mode.
Base External UHF	Mode Base External UHF	The title of this configuration screen.
	Format CMR	Press Enter to select correction format (RTD, CMR, RTCMv2.3, RTCMv3 and RTCMv3.2).
	OK	Press Enter button to save the settings and back to the top-level menu, and then this working mode can take effect.
	Cancel	Press Enter button to cancel the settings and back to the second-level menu.

Base Internal UHF	Mode Base External UHF	The title of this configuration screen.
	Protocol CHC	Press Enter to select current protocol (CHC, Transparent, TT450s)
	Channel 1 456.0500	Press Enter to change the channel from 0 to 9
	Baud 9600	Press Enter to select Baud (4800, 9600 and 19200)
	Power 1w	Press Enter button to change the transmitting power (0.5w to 5w).
	Format CMR	Press Enter to select correction format (RTD, CMR, RTCMv2.3, RTCMv3 and RTCMv3.2).
	OK	Press Enter button to save the settings and back to the top-level menu, and then this working mode can take effect.
	Cancel	Press Enter button to cancel the settings and back to the second-level menu.
Base APIS	Mode Base APIS	The title of this configuration screen.
	Format CMR	Press Enter to select correction format (RTD, CMR, RTCMv2.3, RTCMv3 and RTCMv3.2).
	IP 111.111.111.1	Press Enter to enter third-level menu to select IP (APIS1.huace.cn, APIS2.huace.cn, 211.144.120.97, 101.251.112.206) or press Customized IP to customize your own IP
	Port 9901	Press Enter button to change the port from 9901 to 9920.
	OK	Press Enter button to save the settings and back to the top-level menu, and then this working mode can take effect.
	Cancel	Press Enter button to cancel the settings and back to the second-level menu.

Base External UHF & APIS	Mode Base External UHF & APIS	The title of this configuration screen.
	Way External UHF+APIS	Display the way of base station combination.
	Format CMR	Press Enter to select correction format (RTD, CMR, RTCMv2.3, RTCMv3 and RTCMv3.2).
	IP 111.111.111.1	Press Enter to enter third-level menu to select IP (APIS1.huace.cn, APIS2.huace.cn, 211.144.120.97, 101.251.112.206) or press Customized IP to customize your own IP
	Port 9901	Press Enter button to change the port from 9901 to 9920.
	OK	Press Enter button to save the settings and back to the top-level menu, and then this working mode can take effect.
	Cancel	Press Enter button to cancel the settings and back to the second-level menu.
Rover APIS	Mode Rover APIS	The title of this configuration screen.
	Base ID 1234567	Press Enter to enter third-level menu to change Base ID
	IP 210.14.66.58	Press Enter to enter third-level menu to select IP (APIS1.huace.cn, APIS2.huace.cn, 211.144.120.97, 101.251.112.206) or press Customized IP to customize your own IP
	Port 9902	Press Enter button to change the port from 9901 to 9920.
	OK	Press Enter button to save the settings and back to the top-level menu, and then this working mode can take effect.
	Cancel	Press Enter button to cancel the settings and back to the second-level menu.


Rover UHF	Mode Rover UHF	The title of this configuration screen.
	Protocol CHC	Press Enter to select current protocol (CHC, Transparent, TT450s)
	Channel 1 456.0500	Press Enter to change the channel from 0 to 9
	Baud 9600	Press Enter to select Baud (4800, 9600 and 19200)
	OK	Press Enter button to save the settings and back to the top-level menu, and then this working mode can take effect.
	Cancel	Press Enter button to cancel the settings and back to the second-level menu.
Rover NTRIP	Mode Rover NTRIP	The title of this configuration screen.
	Status Not Login in in	Indicates the login status.
	OK	Press Enter button to save the settings and back to the top-level menu, and then this working mode can take effect.
	Cancel	Press Enter button to cancel the settings and back to the second-level menu.
Back		Press Enter button to back to the top-level menu.

4 Equipment Setup and Operation

4.1 Post-processing Base Station Setup

For good performance, the following base station setup guidelines are recommended:

Components:

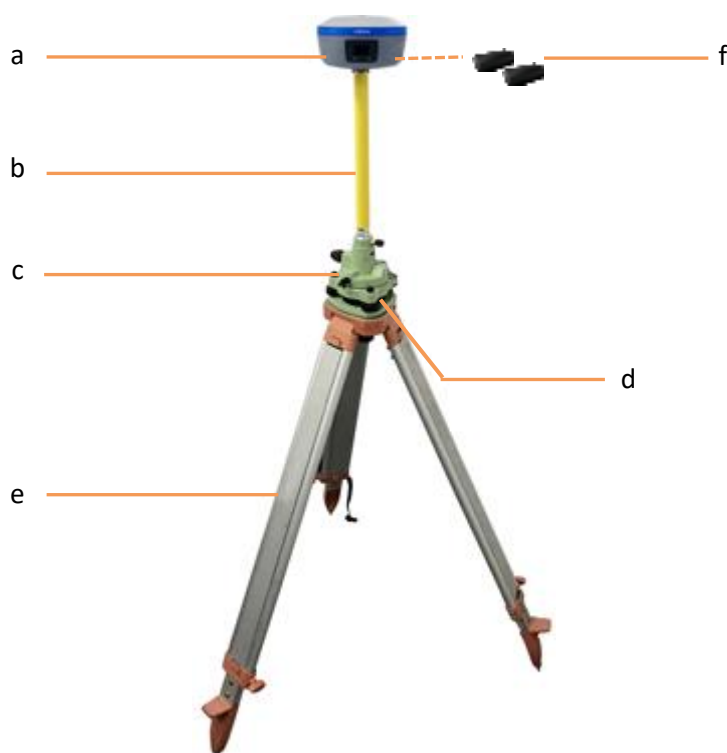

No.	Name
a	iBase GNSS receiver
b	Extension pole (30 cm)
c	Tribrach adaptor
d	Tribrach w/ Opti
e	Aluminum tripod
f	Lithium battery

Steps:

- (1) Put tripod in the target position, center and level it roughly.
- (2) Place and lock the tribrach in the tripod.
- (3) Insert the batteries into the receiver.
- (4) Screw the receiver onto the tribrach.
- (5) Center and level the receiver more precisely.
- (6) Connect the receiver to external battery by using external power cable if necessary.
- (7) Connect the receiver to external storage disk by using USB cable if necessary.
- (8) Turn on the receiver by pressing the power button for 3 s.
- (9) Measure the antenna height by using H.I. tape and auxiliary H.I. tool.
- (10) Press the function button to select Data to start recording static raw.

If work with a data controller:

- (11) Switch on the data controller and connect it to the receiver.
- (12) Use software to configure the receiver as static mode.

4.2 Real-Time Base Station Setup

4.2.1 Internal Cellular or UHF

For good rover operation, the following base station setup guidelines are recommended:

Components:

No.	Name
a	UHF whip antenna
b	iBase GNSS receiver
c	Extension pole (30 cm)
d	Tribrach adaptor
e	Tribrach w/ Opti
f	Aluminum tripod
g	Nino SIM card (12 mm x 9 mm)
h	Lithium battery

Steps:

- (1) Put tripod in the target position, center and level it roughly.
- (2) Place and lock the tribrach in the tripod.
- (3) Insert the batteries into the receiver.

If work as a cellular base station, the SIM card need to be inserted before the batteries.


- (4) Screw the receiver onto the tribrach.
- (5) Center and level the receiver more precisely.

If work as a UHF base station, the UHF whip antenna need to be connected to the receiver.

- (6) Connect the receiver to external battery by using external power cable if necessary.
- (7) Connect the receiver to external storage disk by using USB cable if necessary.
- (8) Turn on the receiver by pressing the power button for 3 s.
- (9) Measure the antenna height by using H.I. tape and auxiliary H.I. tool.
- (10) Switch on the data controller and connect it to the receiver.
- (11) Use software to configure the receiver as cellular base or UHF base mode.

4.2.2 External UHF

For good performance, the following base station setup guidelines are recommended:

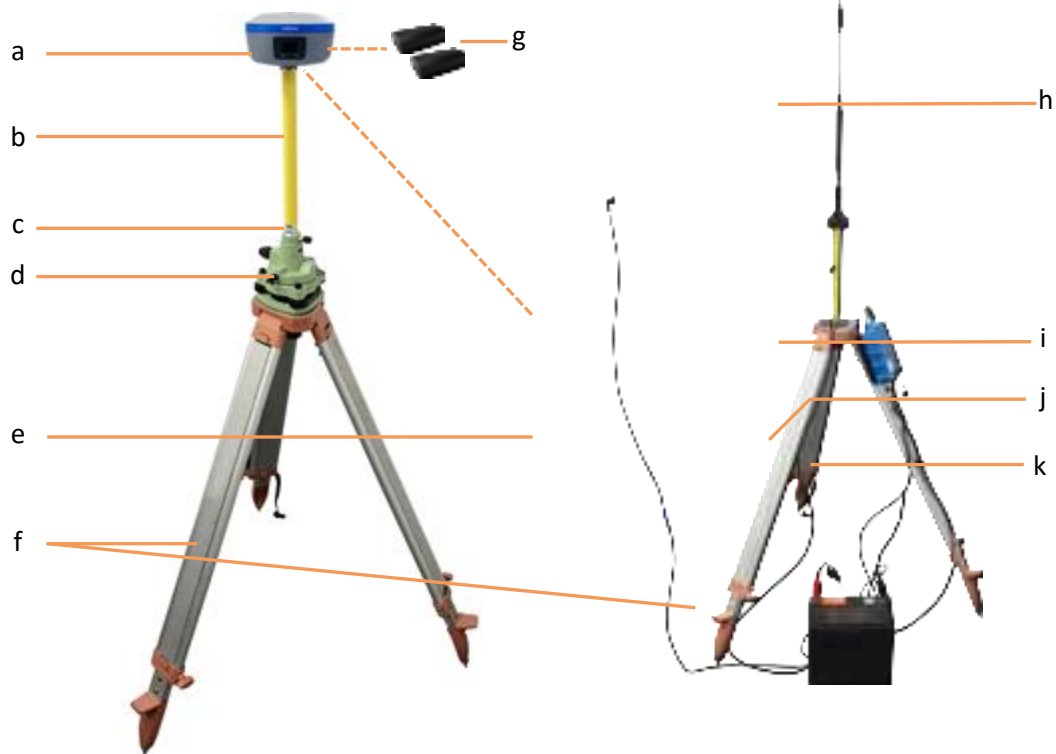Components:

No.	Name
a	iBase GNSS receiver
b	Extension pole (30 cm)
c	Tribrach adaptor
d	Tribrach w/ Opti
e	GPS to datalink cable (power cable)
f	Aluminum tripod
g	Lithium battery
h	Whip antenna
i	3 m cable for datalink antenna 3m
j	Pole mounting
k	External 410-470 datalink

Steps:


- (1) Put tripod in the target position, center and level it roughly.
- (2) Place and lock the tribrach in the tripod.
- (3) Insert the batteries into the receiver.
- (4) Screw the receiver onto the tribrach.
- (5) Center and level the receiver more precisely.
- (6) Connect the receiver to external datalink by using GPS to datalink cable.
- (7) Hang the external datalink on the tripod leg.
- (8) Connect the receiver to external battery by using external power cable if necessary.
- (9) Connect the receiver to external storage disk by using USB cable if necessary.
- (10) Turn on the receiver by pressing the power button for 3 s.
- (11) Measure the antenna height by using H.I. tape and auxiliary H.I. tool.
- (12) Turn on the external datalink and configure it as need.

If work with a data controller:

- (13) Switch on the data controller and connect it to the receiver.
- (14) Use software to configure the receiver as cellular base or UHF base mode.

4.3 Real-Time Rover Station Setup

For good performance, the following rover station setup guidelines are recommended:

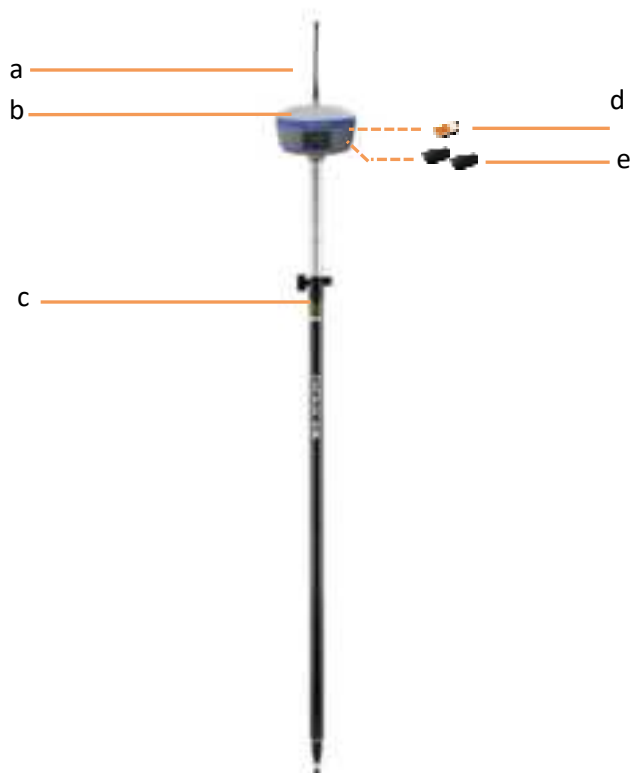Components:

No.	Name
a	whip antenna
b	iBase GNSS receiver
c	2M range pole w/bag
d	Micro SIM card (12 mm x 15 mm)
e	Lithium battery

Steps:

(1) Insert the batteries into the receiver.

If work as a cellular rover station, the SIM card need to be inserted before the batteries.

(2) Screw the receiver onto the pole.

If work as a UHF rover station, the UHF whip antenna need to be connected to the receiver.

(3) Turn on the receiver by pressing the power button for 3 s.

(4) Switch on the data controller and connect it to the receiver.

(5) Use software to configure the receiver as cellular rover or UHF rover mode.

(6) Center and level the receiver more precisely.

(7) Use software to start survey.

 
5 Configuring Through a Web Browser

Supported browsers:

- Google Chrome
- Microsoft Internet Explorer® version 10, or higher

To connect to the receiver through a web browser:

1. Turn on the Wi-Fi of the receiver.
2. Search the wireless network named as GNSS-XXXXXXX (the SN of your receiver) on your computer, and then establish the connection.
3. After the successful connection between your computer and the receiver, enter the IP address (192.168.1.1) of the receiver into the address bar of the web browser on your computer:



4. The web browser prompts you to enter a login account and password:



The default login account for the receiver is:

- Login Account: admin
- Password: password

Note – Tick **remember me** option, and then the browser will remember the Login Account and Password you entered.

5. Once you log in, the web page appears as follows:




This web page shows the configuration menus on the left of the browser window, and the setting on the right. Each configuration menu contains the related submenus to configure the receiver and monitor receiver performance.

This chapter describes each configuration menu.

To view the web page in another language, select the corresponding language name from the dropdown list on the upper right corner of the web page.

Currently, two languages are available:

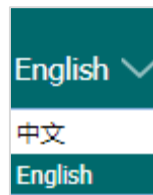

5.1 Status Menu

This menu provides a quick link to review the receiver's position information, satellites tracked, runtime, current data log status, current outputs, available memory, and more.

5.1.1 Position Submenu

This page shows the relevant position information about the receiver's position solution which including the position, DOP values, satellites used and tracked, and the receiver clock information.



5.1.2 Activity Submenu

Lists several important items to help you understand how the receiver is being used and its current operating condition. Items include the identities of currently tracked satellites, internal and external storage usage rate, how long the receiver has been operational, state of the

internal battery, power source state. With this information, it is easy to tell exactly what functions the receiver is performing:




5.1.3 Google Map Submenu

Tap this submenu to show the location of the receiver on Google map.




5.2 Satellites Menu

Use the Satellites menu to view satellite tracking details and enable/disable GPS, GLONASS, BDS and Galileo constellations. These menus include tabular and graphical displays to provide all required information on satellite tracking status.

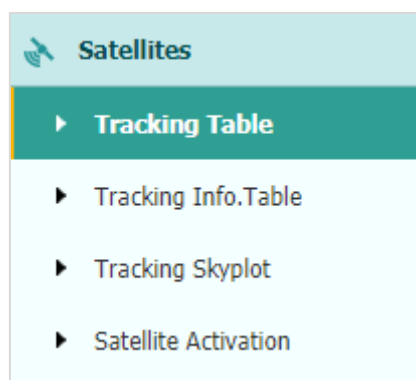

5.2.1 Tracking Table Submenu

Provides the status of satellites tracked in general, such as the satellite ID, satellite type, attitude angle, azimuth angle, L1 SNR, L2 SNR, L5 SNR and enable/disable status of each one.

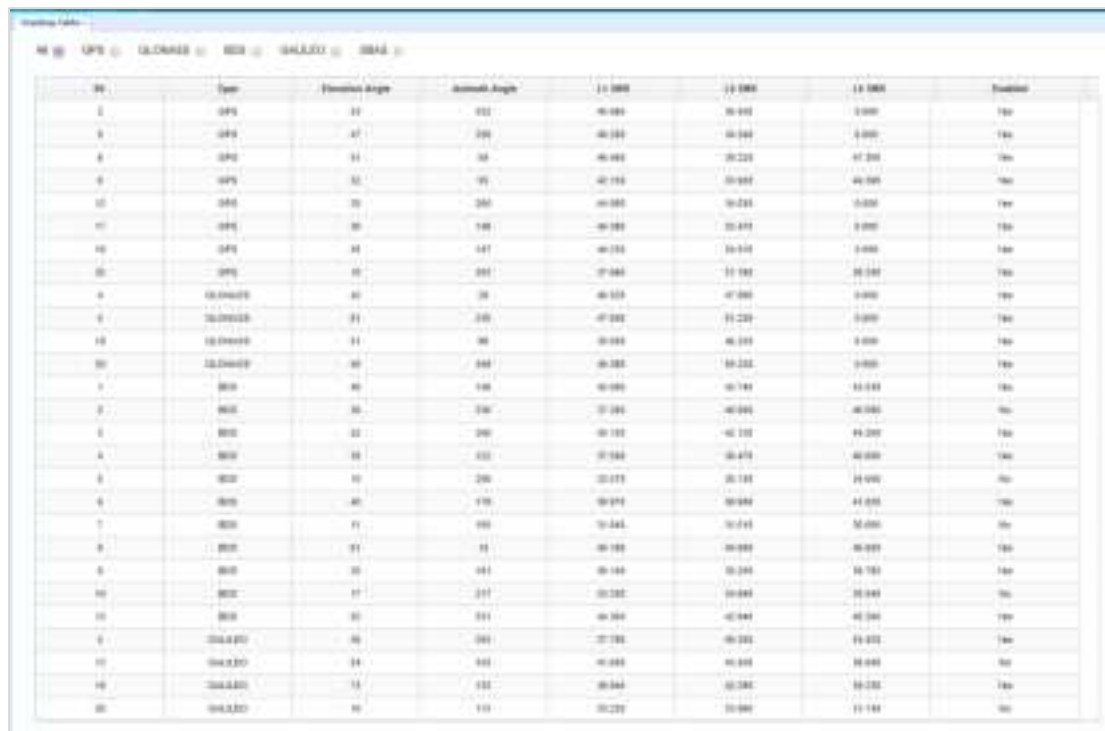

ID	Type	Elevation Angle	Azimuth Angle	L1 SNR	L2 SNR	L5 SNR	Status
1	GPS	11	111	46.880	46.880	0.000	100
2	GPS	17	100	46.100	46.100	0.000	100
3	GPS	11	10	46.400	46.220	47.300	100
4	GPS	11	10	47.100	47.000	46.000	100
11	GPS	10	100	46.100	46.220	0.000	100
11	GPS	10	100	46.100	46.100	0.000	100
12	GPS	14	107	46.100	46.100	0.000	100
13	GPS	10	100	47.000	47.100	46.000	100
4	GLONASS	10	10	46.100	47.000	0.000	100
5	GLONASS	11	100	47.000	47.220	0.000	100
10	GLONASS	11	10	46.100	46.100	0.000	100
10	GLONASS	10	100	46.100	46.220	0.000	100
7	BEI	10	100	46.100	47.100	46.100	100
8	BEI	10	100	47.000	46.000	46.000	100
9	BEI	11	100	46.100	46.100	46.200	100
4	BEI	10	100	47.000	46.470	46.000	100
5	BEI	10	100	47.170	47.100	46.000	100
6	BEI	10	100	46.000	46.000	46.000	100
7	BEI	11	100	47.000	47.000	46.000	100
8	BEI	11	100	46.100	46.000	46.000	100
9	BEI	10	100	46.100	46.200	46.100	100
10	BEI	11	100	47.000	46.000	46.000	100
11	BEI	10	100	46.100	46.100	46.100	100
12	BEI	10	100	47.000	46.100	46.000	100
13	BEI	10	100	46.100	46.100	46.100	100
14	BEI	10	100	46.100	46.100	46.100	100
15	BEI	10	100	46.100	46.100	46.100	100
16	BEI	10	100	46.100	46.100	46.100	100
17	BEI	10	100	46.100	46.100	46.100	100
18	BEI	10	100	46.100	46.100	46.100	100
19	BEI	10	100	46.100	46.100	46.100	100
20	BEI	10	100	46.100	46.100	46.100	100
21	BEI	10	100	46.100	46.100	46.100	100
22	BEI	10	100	46.100	46.100	46.100	100
23	BEI	10	100	46.100	46.100	46.100	100
24	BEI	10	100	46.100	46.100	46.100	100
25	BEI	10	100	46.100	46.100	46.100	100
26	BEI	10	100	46.100	46.100	46.100	100
27	BEI	10	100	46.100	46.100	46.100	100
28	BEI	10	100	46.100	46.100	46.100	100
29	BEI	10	100	46.100	46.100	46.100	100
30	BEI	10	100	46.100	46.100	46.100	100
31	BEI	10	100	46.100	46.100	46.100	100
32	BEI	10	100	46.100	46.100	46.100	100
33	BEI	10	100	46.100	46.100	46.100	100
34	BEI	10	100	46.100	46.100	46.100	100
35	BEI	10	100	46.100	46.100	46.100	100
36	BEI	10	100	46.100	46.100	46.100	100
37	BEI	10	100	46.100	46.100	46.100	100
38	BEI	10	100	46.100	46.100	46.100	100
39	BEI	10	100	46.100	46.100	46.100	100
40	BEI	10	100	46.100	46.100	46.100	100
41	BEI	10	100	46.100	46.100	46.100	100
42	BEI	10	100	46.100	46.100	46.100	100
43	BEI	10	100	46.100	46.100	46.100	100
44	BEI	10	100	46.100	46.100	46.100	100
45	BEI	10	100	46.100	46.100	46.100	100
46	BEI	10	100	46.100	46.100	46.100	100
47	BEI	10	100	46.100	46.100	46.100	100
48	BEI	10	100	46.100	46.100	46.100	100
49	BEI	10	100	46.100	46.100	46.100	100
50	BEI	10	100	46.100	46.100	46.100	100


5.2.2 Tracking Info. Table Submenu

The following figure is an example of satellite track diagram page. Users can determine the satellite types and the corresponding SNR of L-band carriers to be displayed in any combination.



5.2.3 Tracking Skyplot Submenu

The following figure is an example of Skyplot page.

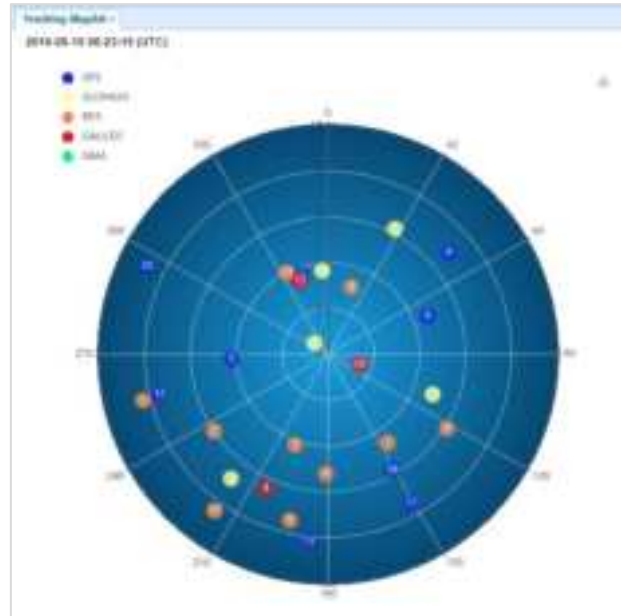


5.2.4 Satellite Activation Submenu

Use this menu to enable or disable satellites.

Satellite ID	Enable
1	<input checked="" type="checkbox"/>
2	<input checked="" type="checkbox"/>
3	<input checked="" type="checkbox"/>
4	<input checked="" type="checkbox"/>
5	<input checked="" type="checkbox"/>
6	<input checked="" type="checkbox"/>
7	<input checked="" type="checkbox"/>
8	<input checked="" type="checkbox"/>
9	<input checked="" type="checkbox"/>
10	<input checked="" type="checkbox"/>
11	<input checked="" type="checkbox"/>
12	<input checked="" type="checkbox"/>
13	<input checked="" type="checkbox"/>
14	<input checked="" type="checkbox"/>
15	<input checked="" type="checkbox"/>
16	<input checked="" type="checkbox"/>
17	<input checked="" type="checkbox"/>
18	<input checked="" type="checkbox"/>
19	<input checked="" type="checkbox"/>
20	<input checked="" type="checkbox"/>
21	<input checked="" type="checkbox"/>
22	<input checked="" type="checkbox"/>
23	<input checked="" type="checkbox"/>
24	<input checked="" type="checkbox"/>
25	<input checked="" type="checkbox"/>
26	<input checked="" type="checkbox"/>
27	<input checked="" type="checkbox"/>
28	<input checked="" type="checkbox"/>
29	<input checked="" type="checkbox"/>
30	<input checked="" type="checkbox"/>
31	<input checked="" type="checkbox"/>
32	<input checked="" type="checkbox"/>

5.3 Receiver Configuration Menu

Use this menu to configure settings such as the antenna type and height, elevation mask and PDOP setting, the reference station coordinates, receiver resetting and web interface language:

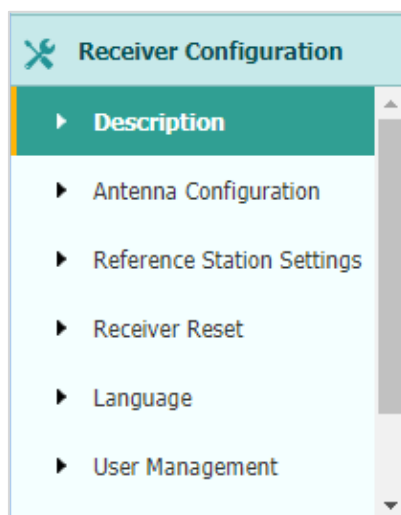

5.3.1 Description

This submenu shows the receiver information and reference station information, including antenna related information, elevation mask angle, reference station work mode and position, etc.



5.3.2 Antenna Configuration Submenu

Use this screen to configure all the items related to the GNSS antenna. You must enter the correct values for all antenna-related fields, because the choices you make affect the accuracy for logged data and broadcast correction data significantly:

Antenna Configuration

Measure Way: Antenna Phase Center

Antenna manufacturer: CHCNav

Antenna Type: CHCE01

Antenna SN: 328C163

Antenna Height: 2.0000 (Meter)

Elevation Mask: 10

PDOP Mask: 5

Save

5.3.3 Reference Station Settings Submenu

Use this screen to configure settings such as the station coordinates and the broadcast station identifiers. You must enter accurate information in these fields, as this data affects the accuracy of logged data files and broadcast correction data significantly:

For **Reference Station Mode**:

There are three modes available:

- a) **Auto Rover**: The receiver will serve as a rover after this mode is enabled, and then receive correction data through the working mode set last time.

Reference Station Settings

Reference Station Name: New Name

Date: 2023-01-01

Time: 12:00:00

Station ID: 100

Reference Latitude: 10.000000

Reference Longitude: 10.000000

Reference Height: 0.0000

Save

Sample for Average

Positioning Distribution: ☐ Single Position Coordinates ☐ Four Position Coordinates

Sampling Interval: 100

Save

Coordinate System: WGS84

Save

ID	Name	Latitude	Longitude	Height
1	CHCNAV	10.000000	10.000000	0.0000
2	CHCNAV	10.000000	10.000000	0.0000
3	CHCNAV	10.000000	10.000000	0.0000
4	CHCNAV	10.000000	10.000000	0.0000
5	CHCNAV	10.000000	10.000000	0.0000
6	CHCNAV	10.000000	10.000000	0.0000
7	CHCNAV	10.000000	10.000000	0.0000

- b) **Auto Base**: The receiver will serve as a base after this mode is enabled, and then

broadcast correction data based on coordinate inputted by user or obtained through autonomous positioning automatically.

- c) **Manual Base:** The receiver will serve neither as a base nor a rover after this mode is enabled. Users need to configure the receiver manually.

For **Reference Latitude** and **Reference Longitude**:


There are mainly three methods to enter the reference coordinates and shown as follows:

- Acquire Current Position:** Click this button to acquire current position obtained through autonomous positioning automatically.
- Manual Input:** Manually input the coordinate of a control point.
- From CORS:** After the receiver logging in CORS, the software can record the coordinate of current position based on fix solution.

For **Sample for Average**:

Users can determine the positioning limit and sampling amount. The positioning limit falls into two types:


- a) **Single Solution Coordinates:** Collect the coordinates of receiver obtained through autonomous positioning.
- b) **Fixed Solution Coordinates:** Only collect coordinates of receiver with a fixed solution.

After the configuration of positioning limit and sampling amount, click  to carry out sampling and averaging → the progress bar will show the progress → the result will be served as the coordinate of current position.

If users need to save the changes, please tap  button.

5.3.4 Receiver Reset Submenu

Use this screen to completely or partially reset the receiver:

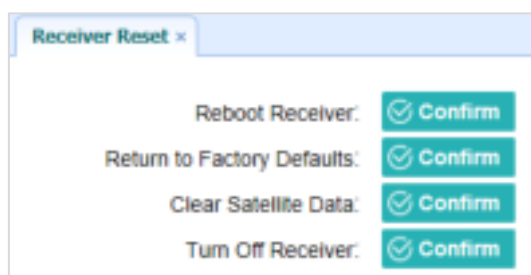

5.3.5 Languages Submenu

Use this screen to select the web interface language:




5.3.6 User Management Submenu

Use this menu to add, delete and modify the login user name and password.




5.3.7 HCPPP Settings Submenu

Reserved menu.

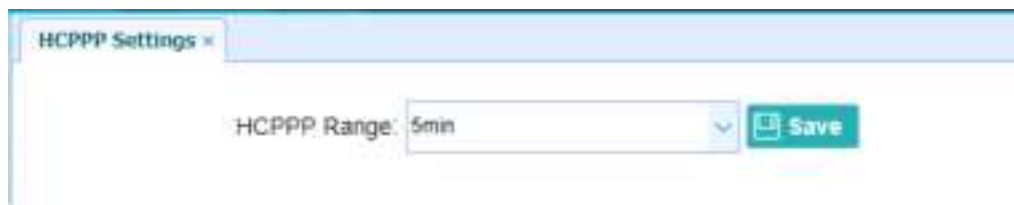

5.4 Data Recording Menu

Use the Data Logging menu to set up the receiver to log static GNSS data and to view the logging settings. You can configure settings such as observable rate, recording rate, continuous logging limit, and whether to auto delete old files when memory is low. This menu also provides the controls for the FTP push feature:

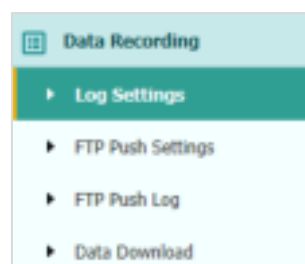


5.4.1 Log Settings Submenu


Here shows the data logging status, including internal and external storage usage and data logging status. Also, users can configure the data logging settings, including recording name, store location, storage limit, store formats, start time, etc.



To edit the settings of each session, click the **Modify** button to the right of the required session, and then the *Recording Edit* screen appears:

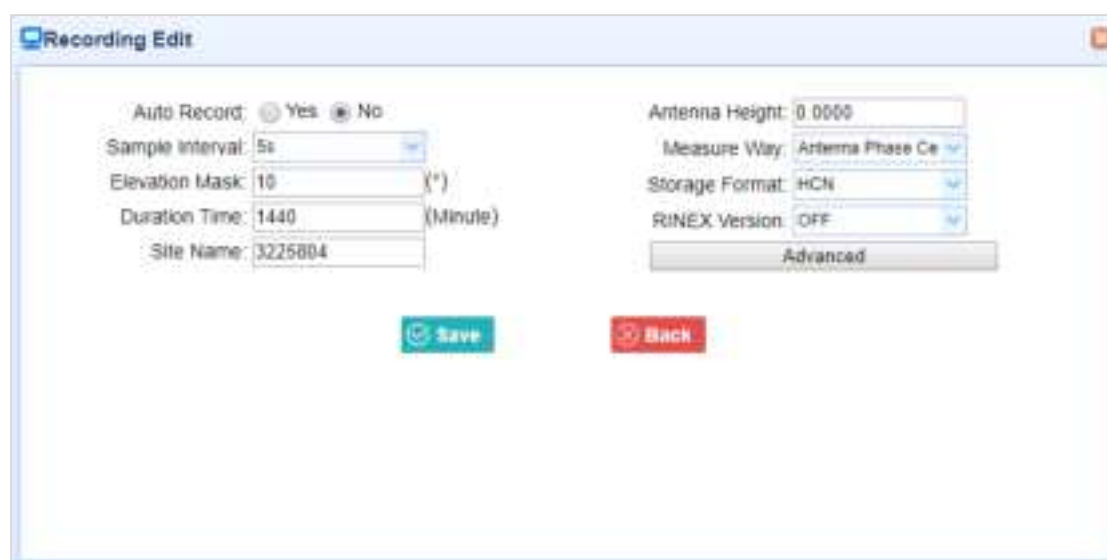

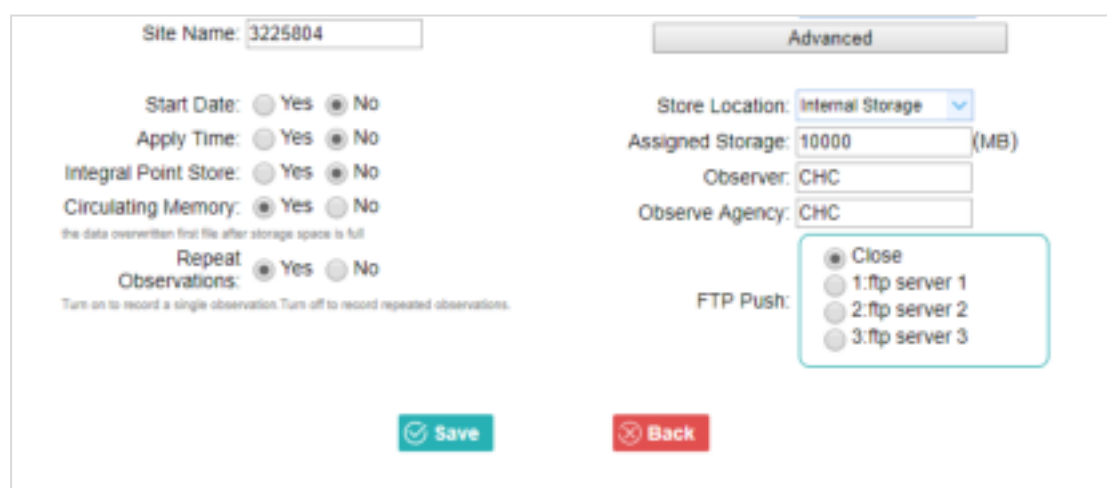

Click advanced to see more settings.



In this screen, you can configure all the data logging parameters, and determine whether the recording files will be affected by the FTP Push. The parameters are mainly as follows:

- **Auto Record:** on or off.

- **Sample Interval:** Select the observable rate from the dropdown list.
- **Elevation Mask:** Enter the elevation mask.
- **Duration Time:** Set the duration of data logging.
- **Site Name:** Enter the name of the site.
- **Antenna Height:** the measured height value.
- **Measure way:** Antenna Phase Center, Vertical Height, Slant Height
- **Storage Format:** Select the format of the data store.
- **RINEX Version:** OFF, 3.02, 2.11
- **Start Date:** Select **Yes** or **No** option to determine whether to auto record start date.
- **Apply Time:** Select **Yes** or **No** option to determine whether to auto record apply time.
- **Integral Point Store:** Select **Yes** or **No** option to determine whether to allow receiver to save data every hour.
- **Circulating Memory:** Select **Yes** or **No** option to determine whether to auto delete old files if the storage space is full.
- **Repeat Observations:** Select **Yes** or **No** option to determine whether to turn on to record a single observation.
- **Store Location:** Internal Storage, External Storage.
- **Assigned Storage:** The assigned memory size of current thread(for example, Record 1) is 10000MB
- **Observer:** Enter the name of observer.
- **Observer Agency:** Enter the name of observer agency.
- **FTP Push:** Decide whether to push the stored files to the FTP server of your choice.

Tap  button to save the settings and back to the *Log Settings* screen. Also, users can click  to abandon the changed settings and back to *Log Settings* screen.

Note – To modify data logging parameters, make sure the data logging session is switched off.

To switch on or off data logging, tap the **ON** or **OFF** button on the right of the required session.

To delete the recorded files of **ANY** data logging session, tap the **Clear** button on the right of the required session.

To delete the recorded files of **ALL** data logging sessions, tap the **Clear ALL Accounts** button.

5.4.2 FTP Push Settings Submenu

Use this screen to configure the receiver to push stored files to the FTP server of your choice. Only files that are configured to use FTP push are transmitted.

FTP Push Settings

Record Info				
Server ID	Server IP	Remote Directory	Server Description	Modify
1	192.168.3.72	/repo/first	ftp server 1	Modify
2	192.168.3.72	/repo/second	ftp server 2	Modify
3	192.168.3.72	/repo/third	ftp server 3	Modify

Tap **Modify** button on the right of the required FTP server and the *FTP Push Settings* screen appears:

FTP Push Settings

Server IP: 192.168.3.72

Port: 21

Remote Directory: /repo/first

Local directory: /mnt/repo_3225804

Server Description: ftp server 1

User Name: ftpuser1

Password:

5.4.3 FTP Push Log Submenu

Shows the related information about the recorded files that be pushed. And users can tap **Clear Ftp Send Log** button in the upper right corner to clear the log of FTP Push operations.

FTP Push Log

Record Info				
Server ID	Push File	File Size	Push Time	Push Successful Or Not
20				

Page 1 of 1

Displaying 1 to 1 of 1 items

5.4.4 Data Download Submenu

In this submenu, users can download the data files that recorded in the internal storage through the internal FTP site.

1. Click this submenu, and then the log on dialogue box will prompt you to enter a user name and password:



Sign in

ftp://192.168.1.1

Your connection to this site is not private

Username

Password

The default logon account for the internal FTP site is:

- User name: ftp
 - Password: ftp
2. Click the directory named as “repo” to view and download the files currently stored on the receiver:




Index of /		
Name	Size	Date Modified
 System Volume Information/		8/9/19, 10:28:00 PM
 repo_3225804/		7/16/19, 1:17:00 PM

3. To find the file need to be downloaded, click the name of data logging session → the date of file that be recorded → the format of the file → the name of the target file.



4. To download a file, left-click the name of the target file → download the file according to the prompts.

5.5 IO Settings Menu

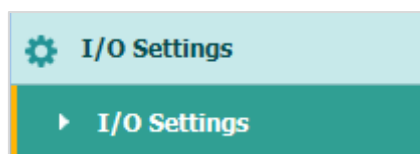

Use the IO Settings menu to set up all receiver outputs and inputs. The receiver can output CMR, RTCM, Raw data, Ephemeris data, GPGLGA, GPGLSV, on TCP/IP, UDP, serial port, or Bluetooth ports.

5.5.1 IO Settings Submenu

The following figure shows an example of the screen that appears when you select this submenu.

	Type	Description	Output	Connection Status	Modify
1	RTK Client	211.144.110.2102	---	Unconnected	Connect Disconnect Delete
2	TCPIPClientNTRIP Server1	192.168.1.10.8880	---	Unconnected	Connect Disconnect Delete
3	TCPIPClientNTRIP Server2	192.168.1.10.8881	---	Unconnected	Connect Disconnect Delete
4	TCPIPClientNTRIP Server3	192.168.1.10.8882	---	Unconnected	Connect Disconnect Delete
5	TCPIPClientNTRIP Server4	192.168.1.10.8883	---	Unconnected	Connect Disconnect Delete
6	TCPIPClientNTRIP Server5	192.168.1.10.8884	---	Unconnected	Connect Disconnect Delete
7	TCPIPClientNTRIP Server6	192.168.1.10.8885	---	Unconnected	Connect Disconnect Delete
8	TCP ServerNTRIP Center1	8801	---	Disconnected	Connect Disconnect Delete
9	TCP ServerNTRIP Center2	8802	---	Disconnected	Connect Disconnect Delete
10	TCP ServerNTRIP Center3	8803	---	Disconnected	Connect Disconnect Delete
11	TCP ServerNTRIP Center4	8804	---	Disconnected	Connect Disconnect Delete
12	Serial Port	115200	---	---	Delete
13	Bluetooth	UP555-82233333	UP555-82	---	Delete
14	Radio	400.0000000	---	---	Delete

In this submenu, users can configure 6 types of input and output settings.

1. RTK Client

After configuring the settings of RTK client, users can log on CORS or APIS. Tap the **Connect** button to the right → the *IO Settings* screen will appear → choose one of the connection protocols among the NTRIP, APIS_BASE and APIS_ROVER → configure the related parameters → click [Confirm](#) to log on CORS or APIS.

- Connection Protocol: NTRIP

RTK Client

Connection Protocol: NTRIP

Server IP: 211.144.110.5

Port: 2102


Mount Point: and [Get](#)

User Name: zc

Password: zc

[Confirm](#) [Back](#)

- Connection Protocol: APIS_BASE

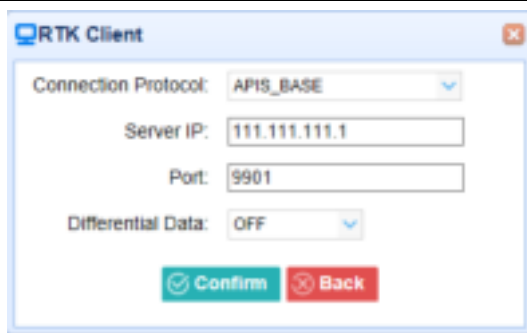

The screenshot shows the 'RTK Client' configuration window. The 'Connection Protocol' is set to 'APIS_BASE'. The 'Server IP' is '111.111.111.1', the 'Port' is '9901', and 'Differential Data' is 'OFF'. There are 'Confirm' and 'Back' buttons at the bottom.

- Connection Protocol: APIS_ROVER




The screenshot shows the 'RTK Client' configuration window. The 'Connection Protocol' is set to 'APIS_ROVER'. The 'Server IP' is '210.14.66.58', the 'Port' is '9902', and the 'Base ID' is '1019023'. There are 'Confirm' and 'Back' buttons at the bottom.

- Connection Protocol: TCP




The screenshot shows the 'RTK Client' configuration window. The 'Connection Protocol' is set to 'TCP'. The 'Server IP' is '201.255.122.215', the 'Port' is '9902'. There are 'Confirm' and 'Back' buttons at the bottom.

2. TCP/UDP_Client/NTRIP Server

Tap the **Connect** button on the right of required TCP/UDP Client → the *IO Settings* screen will appear → select the connection protocol from TCP, UDP, NTRIP1.0 and NTRIP2.0 → enter the IP and Port of the target server → configure messages that you want to output to the target server → click  to save and complete the connection.

 - Connection Protocol: TCP



The screenshot shows the 'TCP/UDP Client' configuration window. The 'Connection Protocol' is set to 'NTRIP2.0'. The 'Server IP' is '192.168.3.10'. The 'Port' is '9900'. The 'Auto connect' checkbox is checked. The 'Mount Point' is empty. The 'Raw Data' checkbox is checked. The 'HRC Data' checkbox is checked. The 'GPGGA' checkbox is checked. The 'GPRMC' checkbox is checked. The 'GPST' checkbox is checked. The 'GPRDA' checkbox is checked. The 'Resume' checkbox is checked. The 'Differential Data' checkbox is checked. The 'HCPRP Data' checkbox is checked. The 'GPGSV' checkbox is checked. The 'GPZDA' checkbox is checked. The 'GPVTG' checkbox is checked. The 'Confirm' button is highlighted in green.

➤ Connection Protocol: NTRIP2.0

The screenshot shows the 'TCP/UDP Client' configuration window. The 'Connection Protocol' is set to 'NTRIP2.0'. The 'Server IP' is '192.168.3.10'. The 'Port' is '9900'. The 'Auto connect' checkbox is checked. The 'Mount Point' is empty. The 'Raw Data' checkbox is checked. The 'HRC Data' checkbox is checked. The 'GPGGA' checkbox is checked. The 'GPRMC' checkbox is checked. The 'GPST' checkbox is checked. The 'GPRDA' checkbox is checked. The 'Resume' checkbox is checked. The 'Differential Data' checkbox is checked. The 'HCPRP Data' checkbox is checked. The 'GPGSV' checkbox is checked. The 'GPZDA' checkbox is checked. The 'GPVTG' checkbox is checked. The 'User Name' field is filled with '192_168_3_10'. The 'Confirm' button is highlighted in green.

3. TCP Server/NTRIP Caster

Tap the **Connect** button to the right of required TCP Server/NTRIP Caster → the **IO Settings** screen will appear → select one of the connection protocols between NTRIP and TCP → configure the other related parameters → click **Confirm** to save the settings and open the server.

➤ Connection Protocol: NTRIP

TCP Server/NTSP Client

Auto connect: ☒

User Name:

Port:

Differential Data:

HCPPP Data:

GPSGA:

GPWMC:

GPSST:

GPSDA:

Retransmit:

Connection Protocol:

Password:

Mount Point:


Raw Data:

HRC Data:

GPSBV:


GPSDA:

GPSVTO:

Tap the **Settings** button on the right of Serial Port → the *Serial Port Setup* screen will appear → select Baud Rate used to transmit data → configure the messages that you want to output through the serial port → click  to save the settings and start to transmit.



5. Bluetooth


Tap the **Settings** button to the right of Bluetooth → the *Bluetooth Set* screen will appear → configure the messages that you want to transmit through Bluetooth → click  to save the settings and start to transmit.




6. Radio

Tap the **Settings** button to the right of Radio → the *Radio Settings* screen will appear → select

the format of differential data that you want to transmit through radio from the dropdown list


→ click  to save the settings and start to transmit.

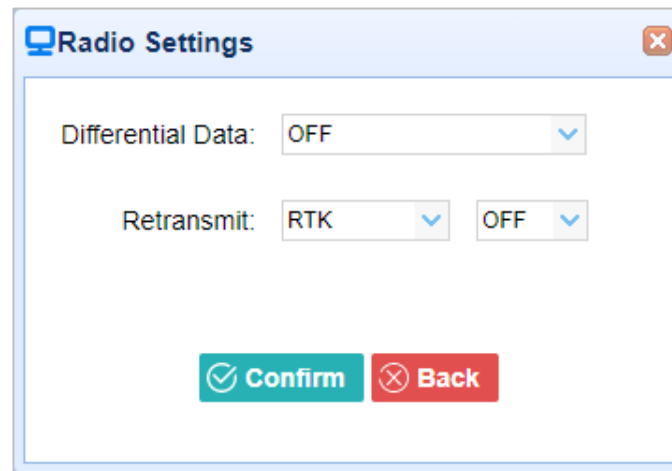

The image shows a 'Radio Settings' dialog box with a light blue header and a red close button. Inside, there are two dropdown menus. The first is labeled 'Differential Data:' and is set to 'OFF'. The second is labeled 'Retransmit:' and is set to 'RTK', with a second dropdown set to 'OFF'. At the bottom, there are two buttons: a green 'Confirm' button with a checkmark icon and a red 'Back' button with a close icon.

5.6 Network Setting Menu

Use this menu to view network information, configure the receiver's mobile network, set email alert for specific situation, configure HTTP or HTTPS port, and the user name and password of internal FTP site:

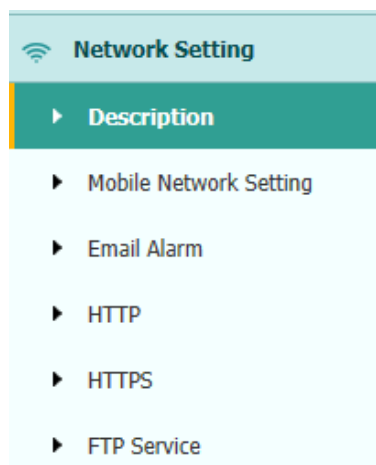

5.6.1 Description Submenu

Use this submenu to check the information of network setting.

Description x

Network Info

Power Status: ON

Network Mode: 2G/3G/4G Auto

Connection Protocol: CHINA MOBILE

Signal Strength: -71(dBm)

SIM Status: SIM Card Ok

Dialing Status: Offline

IMEI: 861529049455435

PhoneNumber: 1440033974571

5.6.2 Mobile Network Setting Submenu

Use this submenu to configure GPRS model, network module and modify dialing status.

Mobile Network Setting x

Network Settings

GPRS Model Status: ON ON GPRS

Auto Start: ☒ Yes ☐ No

2G Only

3G Only

Network Mode: ☒ 2G/3G Auto

4G Only

2G/3G/4G Auto

SIM Type: E-SIM Switch

Dialing Status: Offline On Off

Auto Connect: ☐ Yes ☒ No

APN: 3gnet

Dialing String: net

User Name: user

Password: ****

Save

5.6.3 Email Alarm Submenu

Use this submenu to choose which situation of receiver will be alerted and input the email

address.

Email Alarm x

TO

Email Address 1: test@huacenav.com

Email Address 2: test1@huacenav.com

Email Address 3: test2@huacenav.com

Save

From

Account:

Password:

Server Address:

Save

Email Alert

☐ Receiver is powered on

☐ External power is off

☐ Battery level is low

☐ Ftp push is failed

☐ Reciever(license) will be expired in 7 days.

Save

5.6.4 HTTP Submenu

Use this submenu to configure HTTP port.

HTTP x

HTTP Port: 80

Save

5.6.5 HTTPS Submenu

Use this submenu to configure HTTPS port.



The screenshot shows the 'HTTPS' submenu in a web browser. It features a teal header with the text 'HTTPS'. Below the header, there is a section titled 'Enable HTTPS:' with two radio buttons: 'Yes' (selected) and 'No'. Below this, there is a text input field labeled 'HTTPS Port:' with the value '443'. At the bottom right, there is a teal 'Save' button.

5.6.6 FTP Service Submenu


Use this submenu to configure the user name and password of internal FTP site.



The screenshot shows the 'FTP Service' submenu in a web browser. It features a teal header with the text 'FTP Service'. Below the header, there is a section titled 'User Name:' with a text input field containing 'ftp'. Below this, there is a section titled 'Password:' with a text input field containing three asterisks '***'. At the bottom right, there is a teal 'Save' button.

5.7 Module Setting Menu

Use this menu to check module information, configure WiFi, bluetooth, radio related settings, and turn on/off static voice of buzzer:

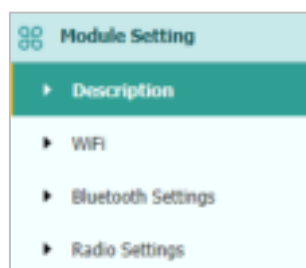

5.7.1 Description Submenu

Use this submenu to check the information of WiFi module, bluetooth module and radio module.

The screenshot shows the 'Description' submenu with two panels: 'Wi-Fi Information' and 'Radio Information'.

Wi-Fi Information	Radio Information
Power Status: ON	Radio Type: Integrated TR Radio
Wifi Mode: Access Point	Radio Power: 1W
MAC: 50:72:24:60:c7:70	OTA Baud Rate: 9600
Access Point Details	Radio Frequency: 456.0500MHz
SSID: GNSS-3225804	Radio Protocol: CHC
Encryption Type: WAP	Radio Frequency Channel: Full Range
Password: 12345678	Frequency Range: 410MHz—470MHz

5.7.2 WiFi Submenu

Use this submenu to turn on/off WiFi function and modify password.

The screenshot shows the 'WiFi' submenu with various configuration options:

- Power Status: ON ☒ OFF
- Auto Start: ☒ Yes ☐ No
- Internet: ☒ Yes ☐ No
- Wifi Mode: Access Point (dropdown)
- SSID: GNSS-3225804
- Encryption Type: WAP (dropdown)
- Password: [masked]
- Start button

5.7.3 Bluetooth Settings Submenu

Use this submenu to turn on/off bluetooth function and modify PIN number.


Bluetooth Settings ×

Bluetooth Settings

Local Name: GNSS-3225804

MAC Address: 50:72:24:60:C7:6F

PIN:



 Save

5.7.4 Radio Settings Submenu

Use this submenu to turn on/off radio function and configure radio parameters.

Radio Settings ×

Radio Settings

Radio Status: ON  

Auto Start: ☒ Yes ☐ No


Radio Protocol:

Channel Bandwidth: (kHz)

OTA Baud Rate:


Radio Power:

Radio Frequency: (410MHz—470MHz)

 Save


5.8 Firmware Menu

Use this menu to check the current firmware information, download the system log, update the receiver firmware, download or update the configuration file and register the receiver, and more:

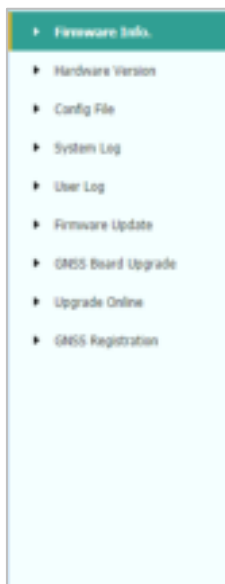

5.8.1 Firmware Info Submenu

Use this submenu to check the current firmware information. The following figure shows an example of the firmware information.

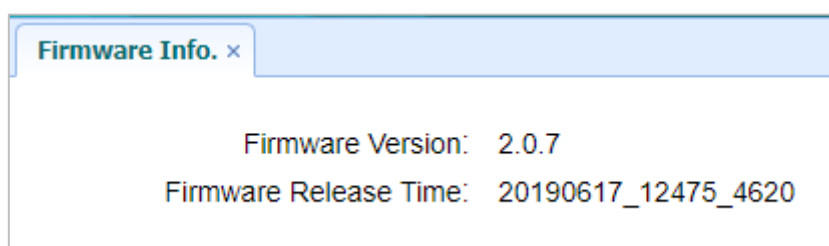

5.8.2 Hardware Version Submenu

Use this submenu to check the hardware information, including main board version and core board version:

Hardware Version ×

Main Board:	1.2
Core Board:	1.2
PN:	118032015701020104
Board Firmware Version Number:	20069

5.8.3 Config File Submenu

Use this submenu to update Configuration File.

Config File ×

Download Configuration File : Download

Update Configuration File: Browse

Confirm

5.8.4 System Log Download Submenu

Use this submenu to download the system log of the receiver.

System Log ×


System Log Type: Firmware Log

Download

5.8.5 User Log Submenu


Use this submenu to download the user log. Tap **Download** to download current user log; Tick items that you want to see on the user log and tap confirm button to confirm selected user

log.

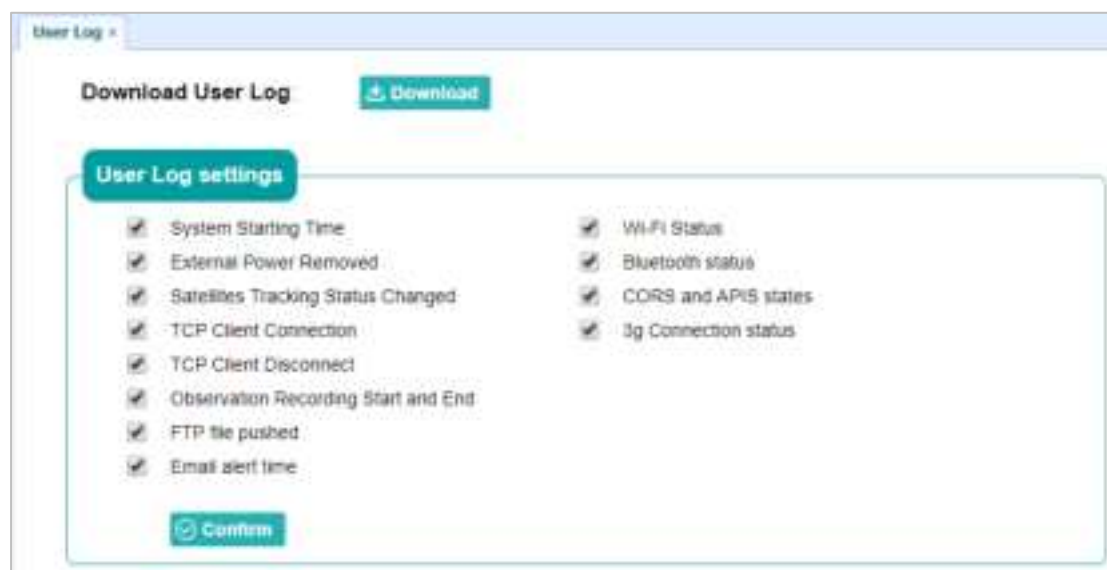

5.8.6 Firmware Update Submenu

Use this submenu to load new firmware to the receiver across the network. Tap the **Browse** button to locate the upgrade file → tap **Confirm** button to confirm the selected upgrading file and start upgrading.

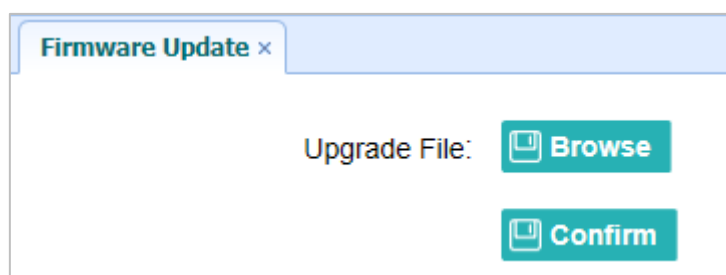


Notes

- It may take about 3 or 4 minutes to complete the firmware upgrading. Do not touch the power button or unplug the power until the upgrading process finishes, or damage will be caused to the receiver.
- The receiver will restart after the firmware upgrading is done, so users need to reconnect the receiver with your computer via Wi-Fi, and then log-in the receiver through a web browser to continue the configuration.

5.8.7 GNSS Board Upgrade Submenu

Use this submenu to upgrade GNSS Board. Use this submenu to load new board to the receiver across the network. Tap the **Browse** button to locate the upgrade file → tap **Confirm** button to confirm the selected upgrading file and start upgrading.

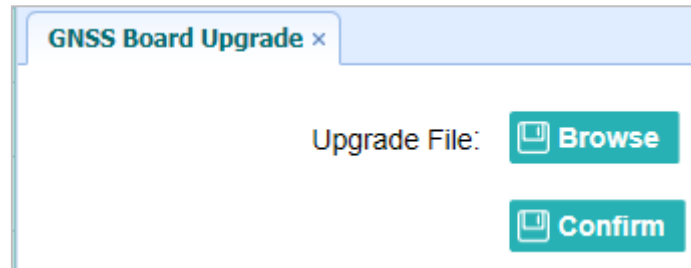

GNSS Board Upgrade x

Upgrade File:

5.8.8 Upgrade Online Submenu

Use this submenu to input Server Address and upgrade online.



Upgrade Online >

Server Address:

File Name	Version	Description	Size	Upgrade
-----------	---------	-------------	------	---------

Get File List

Displaying 0 to 0 of 0 items

5.8.9 GNSS Registration Submenu

Use this submenu to register the receiver. Paste or enter the registration code to the *Registration Code* field → tap **Registration** button to complete the registration.

GNSS Registration x

Serial Number:

3225804

Registration Limit:

2019-9-13


Registration Code:

XaqtUKAn84z

Registration

5.9 Cloud Service Setting Menu

5.9.1 Cloud Service Setting Submenu

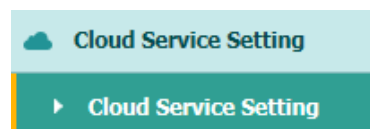

Use this submenu to turn on or turn off Cloud Service, Auto Start, Remote Control and configure other settings.

Cloud Service Setting x

Cloud Service Status: Connecting ☒ ON ☐ OFF

Auto Start ☒

Remote Control ☒ ON ☐ OFF

Anti-theft

It cannot modify server IP or anti-theft mode and the function will automatically upload location info.

Next

Upload position ☒ ON ☐ OFF

Time Interval

Position Interval

Address

Port

Change Password

Save



CHC Navigation

577 Songying Road,
Qingpu District, 201702 Shanghai, China

Tel: +86 21 542 60 273 | Fax: +86 21 649 50 963
Email: sales@chcnave.com | support@chcnave.com
Skype: chcnave_support
Website: www.chcnave.com

This document is intended for general information purposes only. It does not consider the reader's specific circumstances and environmental constraints of use of GNSS

Make your work more efficient

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 80cm between the radiator & your body.