


Name  
Wireless Earphones

**Product Description**  
TWS earphone is a wireless connectivity-enabled audio product, which is compatible with Android and iOS smartphones, tablets, and other portable electronic devices. By eliminating the constraints of wired connections, it offers users enhanced convenience and unrestricted mobility, catering to a wide range of application scenarios.

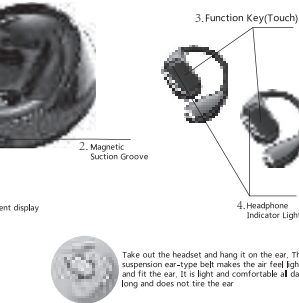

function	operate	Light	Tone
Pair name	OHR510		
Boot	Headphones in the case of charging bin, take out the headphones automatically boot/headphones off state, Long Touch Key 3 seconds to boot	The blue light is on	Power on/开机
Shutdown	Put the earphone into the charging bin and shut down automatically. Press the touch button for 5 seconds to shut down the earphone	The red light flashes three times	Power off/关机
Pair the left and right earphones	The left and right earphones will automatically enter pairing mode after powering on	After the left and right ear phones are successfully paired, the blue and red lights of the main ear will flash alternately, and the light of the secondary ear will be extinguished	Connected/pairing successfully
Toggle the Chinese and English prompt tones	Without connecting the smart device, double-click any left/right ear touch key 4 times, language switch. Factory default English	/	English/中文
Smart device connectivity	When the ears are successfully paired, it will automatically enter the state to be connected; at this time, open the Bluetooth list of the smart device to search and click "OHR510" to connect; after the earbuds are successfully connected to the smart device, there will be a prompt tone, and the headset indicator will go off	The lights in the left and right ears are turned off	Connected /连接成功
Toggle Music/ Game mode	When the headset is connected to the device, double-click the left/right ear touch button 4 times to switch the mode.	/	音乐/游戏模式 MUSIC/GAME MODE
Play/Pause	After the music player starts, double-click the left/right earphone touch button	/	/
Previous song	After the music player starts, click the left Earphone Touch Button three times	/	/
Next song	After the music player starts, double-click the right earphone touch button three times	/	/
Increase the volume	After the music player starts, click the touch button on the right headset	/	Maximum volume indicator (knocks)
Reduce the volume	After the music player starts, click the touch button on the left headset	/	/
Voice assistant	When the headset is connected to the phone, press the L/R earphone touch button for 2 seconds to wake up the assistant	/	Ding Dong
Answer an incoming call	In the incoming call state, double-click the left/right earphone touch button	/	Ringtone of your phone

## Headset parameters

fault	cause	Resolution
Doesn't turn on	The headphones are low on battery	Charge the headphones
The headphones flash red	The headphones are low on battery	Charge the headphones
Charging is silent	The headphones were not put away	Adjust the position where the headphones are placed
Automatic power off	Automatic low battery	Charge the headphones
The headphones have an echo	The volume is too loud or the environment is too noisy	Adjust the volume or change the environment
There is a murmur from the headphones	Serious external interference or too far away from the phone	Change the location or be close to your phone
The other party's voice is quiet	The headphones are worn incorrectly or the volume is too low	Adjust the headset wear or volume
The signal is intermittent	Serious external interference or too far away from the phone	Choose a distraction-free environment or be close to your phone

1. Before using this product for the first time, please fully charge it before using it.
2. The product is not a toy, and children under the age of 12 must be used under the supervision of an adult.
3. Please use a 5V/1A charger that has passed the safety certification of a regular manufacturer to charge the product caused by a fast charging charger that supports high voltage.
4. Please charge in a safe environment, when charging the charging case, please pull out the charging cable as soon as possible after the power is fully charged to avoid damage to the battery caused by long-term charging. The charging method of the charging case is the 1 interface.
5. The product has a built-in non-removable rechargeable battery, and repeated charging and discharging of the earbuds will lead to a decrease in battery performance over time, with no charge for all rechargeable batteries.
6. This product comes with a healthy battery, if it has not been used for a long time, charge it at least once a month.
  - If you feel skin discomfort when wearing it due to individual differences, please wear it and consult a doctor.
7. When using this product with Bluetooth connection, please adjust the sound of the earbuds to an appropriate volume to avoid hearing damage caused by long-term loud volume.
8. If you use this product while engaging in activities that require concentration, you pay attention to your own safety and the safety of others, such as when driving or cycling. Do not conduct sites, railways, or walking. You should remove your headphones or the volume to ensure that you can hear the sounds around you, including alarms and warning signals.
9. Please follow the relevant regulations of your region or country and use this product required when driving.
10. This product contains magnetic materials, please keep away from electrical appliances with strong magnetic or electric fields, such as microwave ovens, refrigerators, etc., when using the product.
11. It is recommended to use this product in an environment with a temperature of -0°C. When the ambient temperature is below +5°C, battery performance is limited.
12. Do not use this product in places where it is expressly prohibited to use wireless equipment. It will interfere with other electronic equipment or cause other dangers.
13. Before approaching medical or industrial equipment or boarding a plane, please ask the staff if they can use it.
14. Before cleaning and maintaining this product, stop using this product, turn it off, and disconnect all connections or cables to other equipment.
15. Please dispose of the electronic products properly in accordance with local laws and regulations, and do not dispose of electrical and electronic equipment, parts, batteries or other household waste.

- Do not use abrasive cleaners to clean this product.
- Do not allow this product to be heated or close to a fire source, such as a cooking stove.
- Do not expose the product to direct sunlight for a long time.
- Do not discard this product in fire to avoid explosion.
- Do not attempt to disassemble this product to make any modifications, as it does not contain any maintenance components.
- Do not use this product in rain.
- If you do not plan to use this product for a long time, please store it in a dry environment and charge the headset less once to prolong its life and avoid extreme temperature and dust.
- Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.
- Batteries may explode if not handled properly.
- Do not disassemble or dispose of batteries in fire.
- Do not short external contacts, crush, puncture or otherwise tamper with batteries.
- Follow local regulations when disposing of used batteries.

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

