 


Music Mode

BG COLOR: Selects a LCD backlight color.

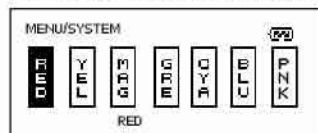

 
* Press and hold the FUNC [] button to change the color. When the color you want is selected, release the button.

POWER SAVINGS: Sets the time duration when the player is automatically turned off if you don't press any button in a pause or stop mode. If you set to DISABLE, the automatic shutdown function will not be activated.



■ ABOUT

Displays the firmware version and the memory capacity.

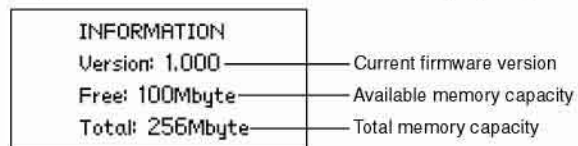

■ EXIT

Saves all settings and returns to the music mode.

MP3
PLAYER

Voice Mode

 
Basic Functions

■ Recording

Records a voice or a sound.


Record: Press the REC/STOP [] button once shortly.

Stop: Press the REC/STOP [] button once shortly again.



Recording time
in progress

 Recording



currently available
recording time

Stop Recording

Note

- ▶ Recording files will be saved and identified by the letter "V" ahead of three digit numbers.
- ▶ You cannot hear the recording sound during recording.

■ Play/Stop

Playback : Select the file to play back when the player is turned on, and press the PLAY/STOP [] button once shortly.


Stop : Press the PLAY/STOP [] button once shortly.



MP3
PLAYER

Voice Mode

■ Volume Control

Press the +/- [] button shortly to increase the volume by 1 step, or hold the button to increase the volume continuously.



Warning

- Do not increase the volume too high during playback using an earphone. Your hearing ability can be impaired.
- Turn the volume down first and increase to the one you want.

■ File Move/Search/Select (FF/REW)

Moves to, searches for or selects the file.

- Move Forward or Backward : Press the ◀◀/▶▶ [] button during playback.
- Search : Press the ◀◀/▶▶ [] button during playback and hold it to move forward or backward.
- Select Previous/Next File : Press the ◀◀/▶▶ [] button once shortly when the player is stopped.






 
MP3
PLAYER

Voice Mode

 
■ A-B Section Repeat

Plays back the selected sector repetitively.

- On: 1. Press the FUNC [] button once shortly during playback to set the A point.
2. Press the FUNC [] button shortly again to set the B point. Then, playback will be repeated between the point A and B.
- Off: Press the FUNC [] button once shortly.



Setting A Point



Setting B Point

■ Menu Setting


Sets the menu item.

- Enter menu: Press the MENU [] button once shortly in voice mode.
- Menu navigation: Use the ◀◀/▶▶ [] button.
- Save settings: Press the MENU [] button once shortly.
- Release menu: Press the MENU [] button longer once.

MP3
PLAYER


Voice Mode

 Menu Configuration

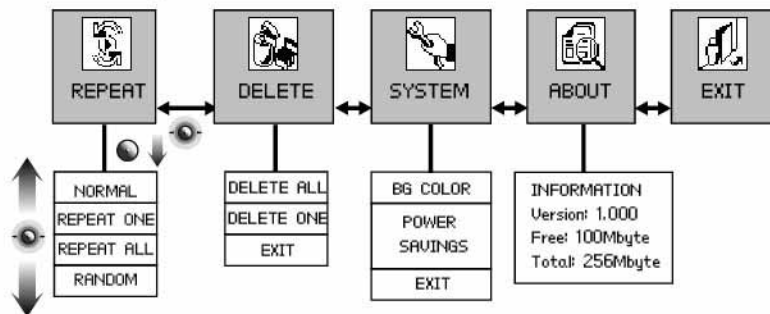

REPEAT

 Sets the voice file playback method in the voice mode



NORMAL : Plays back every selected file once.

REPEAT ONE : Plays back the selected file repetitively.

REPEAT ALL : Plays back all files repetitively.

RANDOM : Plays back all selected files at random.

Voice Mode

DELETE

Deletes the saved voice file.



DELETE ALL: Deletes all saved voice files. Folders will remain even if files are removed.

Are you sure
you want to
delete all file?
Yes **No** Exit

DELETE ONE: Deletes the selected voice file only.

Are you sure you want
to delete the file
V001.WAV
Yes **No** Exit

Note

► Only voice files are deleted in voice mode.

EXIT : Returns to the main menu.

Voice Mode

SYSTEM

 


BG COLOR

POWER SAVINGS

EXIT

BG COLOR: Selects a LCD backlight color

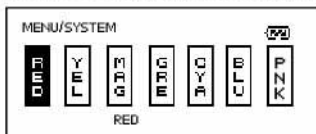

POWER SAVINGS : Sets the time duration when the player is automatically turned off if you don't press any button in stop mode. If you set to DISABLE, the automatic shutdown function will not be activated.



DISABLE

30 Sec

1 Min

3 Min

5 Min

ABOUT

Displays the firmware version and the memory capacity.

INFORMATION	
Version: 1.000	Current firmware version
Free: 100Mbyte	Available memory capacity
Total: 256Mbyte	Total memory capacity

EXIT

Saves all settings and returns to the voice mode.

MP3
PLAYER

FM Mode

Basic Functions

Scanning FM Frequency

Scans the frequency of the broadcasting to listen.

Automatic frequency scanning

Press the ◀◀/▶▶ [->] button and hold it to scan the frequency automatically while you're listening to the radio.

Manual frequency scanning

Press the ◀◀/▶▶ [->] button once shortly while listening to the radio.

Volume Control

Press the +/- [< >] button shortly to increase the volume by 1 step, or hold the button to increase the volume continuously.



Warning

 
- Do not increase the volume too high during playback using an earphone. Your hearing ability can be impaired.
- Turn the volume down first and increase to the one you want.

FM Recording


Records the radio channel that you're currently listening to.

Record: Press the REC/STOP [] button once shortly.

Stop: Press the REC/STOP [] button once shortly again.



Recording

 

Stop Recording

Note

- FM Recording files will be saved and identified by the letter "V" ahead of three digit numbers.
- You can play back the saved channel in a voice mode.