



A Quick Look: Device Controls

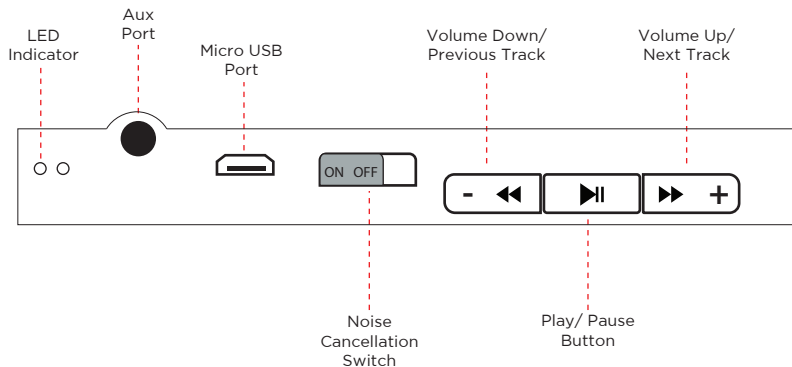


Charging

Micro USB
Plug


USB
Plug

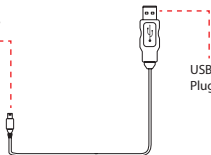

1. The USB charging cable has a Micro USB plug and a standard USB plug.

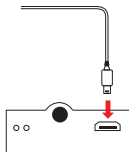


 2. Insert the USB charging cable's Micro USB plug into the charging port on your headphones.



3. Insert the USB charging cable's standard USB plug into the USB port of a computer or suitable USB charging adapter.

 ● (red) = Charging
○ (off) = Charging Complete




4. The LED Indicator light will turn red while the headphones are charging. When charging is complete the light will turn off.

NOTES:


- Charging can take approximately two hours to complete when the battery is fully drained.
- Remove the charging cable once charging is complete.
- Overcharging could reduce the life of the battery.
- A charged battery will lose its capacity if it is not used on a regular basis.

Important: To avoid a complete discharge of the battery, charge your headphones at least once every six months.

Bluetooth Pairing

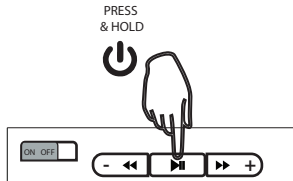

 
1. Press and hold the Play/ Pause button for 1-2 seconds to turn your headphones ON.



2. The LED Indicator will alternately flash red and blue to indicate your headphones are in pairing mode.



 3. Go to the Bluetooth settings menu on your phone. Make sure Bluetooth is turned on. Connect to the available device listed as "ANC Headphone".



4. The LED Indicator will turn solid blue to indicate your headphones are paired with your phone.

Using Your Headphones

PRESS & HOLD



1. Press and hold the Play/Pause button for 1-2 seconds to turn your headphones ON and OFF.

▶||
Play/Pause



2. Press the Play/Pause button to play a track. Press the button again to pause a track.

◀-
Volume Down/
Previous Track

▶+
Volume Up/
Next Track



3. Press the - ◀◀ button to decrease volume. Press and hold to go to the previous track.

Press the ▶▶ + button to increase volume. Press and hold to go back to next track.

Answer Call/ End Call/ Redial



4. Press the Play/Pause button to answer a phone call. Press the button again to end the call.

Double press the Play/ Pause button to redial a number.

Decline Call
PRESS & HOLD



5. Press and hold the Play/ Pause button to decline an incoming call.

Noise
Cancellation



6. Slide the Noise Cancellation Switch left and right to turn the feature on or off. The LED Indicator will turn green when turned ON.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.