








Auto Answer

Use this feature to adjust the number of times the phone rings before it automatically answers a call. When this auto answer feature is used, the phone's ringer option is automatically set to Standard.

To set auto answer

1. From standby mode, press  menu.
2. Press  Preferences.
3. Press  Calling.
4. Press  AutoAnswer.
5. Press  or  to select one of the following options:
 - Off – Phone does not automatically answer
 - After 1 ring – Phone automatically answers after 1 ring
 - After 2 rings – Phone automatically answers after 2 rings
 - Car kit only 1 ring – When installed in the kit, the phone automatically answers after 1 ring
 - Car kit only 2 rings – When installed in the kit, the phone automatically answers after 2 rings
6. Press  ok.




Note

If you select an option other than “off,” the message “-Auto Answer-” flashes while in standby mode.








Auto Redial

Use this feature to set the time interval in which the phone automatically redials a number when the network is busy or unavailable, but not when the phone is busy.


While the phone is in standby mode, the phone automatically redials at intervals until the call connects or you press . If you change service, auto redial stops.

Preferences Menu






 

To set auto redial

1. From standby mode, press  menu.
2. Press  Preferences.
3. Press  Calling.
4. Press  Auto Redial.
5. Press  or  to select one of the following options:
 - Off – Do not automatically redial
 - Every 10 seconds – Automatically redial every 10 seconds
 - Every 30 seconds – Automatically redial every 30 seconds
 - Every 60 seconds – Automatically redial every 60 seconds
6. Press  ok.

One-Touch Dial


Use the one-touch dial feature to call any of the 99 phone book location numbers without pressing .

To set one-touch dial

1. From standby mode, press  menu.
2. Press  Preferences.
3. Press  Calling.
4. Press  One-Touch Dial.
5. Press  or  to select “yes.” Press again to select “no.”
6. Press  ok.


(See One-touch dialing, page 32, for more information.)

Any-Key Answer

If you prefer to answer an incoming call by pressing any key (except ), set the any-key answer feature to “yes.”










Note

If this feature is not set to “yes,” press  to answer calls.








Preferences Menu

To set any-key answer

1. From standby mode, press  **menu**.
2. Press  Preferences.
3. Press  Calling.
4. Press  AnyKeyAnsw.
5. Press  or  to select "yes." Press again to select "no."
6. Press  **ok**.

Ring While Stowed

Use this feature to allow the phone to ring while the antenna is stowed. To answer an incoming call, you must rotate and extend the antenna.

1. From standby mode, press  **menu**.
2. Press  Preferences.
3. Press  Calling.
4. Press  Ring While Stowed.
5. Press  or  to select "yes." Press again to select "no."
6. Press  **ok**.

 
 
 


Note

The auto answer feature (page 73) does not function when the antenna is stowed.



Preferences Menu



System Menu

- 8 System
 - 1 Status
 - 2 Find Home
 - 3 Version
 - 4 Service Provider Select
 - 1 Viewing Lists
 - 2 Adding to List
 - 3 Editing List
 - 4 Erasing a Provider
 - 5 Force Selection
 - 5 Service Provider
 - 6 Territory
- 9 My Number

This section provides information on how to use the following system features:

- Status
- Find Home
- Version
- Service Provider Select
- Service Provider
- Territory
- My Number





 
Status

This feature provides status for the state of the phone's antenna, Globalstar Installation Kit, battery, memory, lock, and self-test:

- ☺ Indicates a good condition or ready for use.
- ☹ Indicates a faulty condition or not ready for use.
- - Indicates not in use.

System Menu

To access status information

1. From standby mode, press  menu.
2. Press  System.
3. Press  Status:
 - Antenna Up – If ☺ displays, the antenna is rotated properly. If the antenna is rotated and ☹ displays, contact your service provider.
 - Car Kit – If ☺ displays, the kit is operating properly. If ☹ displays, reconnect the phone in the cradle or contact the installation technician.
 - Battery – If ☺ displays, the battery is installed properly. If ☹ displays, remove and replace your battery or contact your service provider.
 - Memory – If ☺ displays, there is enough available phone memory. If ☹ displays, delete text messages and voice mail notifications.
 - Unlocked – If ☺ displays, the service provider has not locked your phone. If ☹ displays, contact your service provider.
 - Self-test – If ☺ displays, the phone has made a successful self-test. If ☹ displays, contact your service provider.
4. Press  or .

Find Home

The Find Home feature quickly locates your home service provider. If the home provider is not available, the phone searches for service based on your preference settings (see Service Provider Select, page 79).

If the phone displays the roaming indicator while in the home area, use this Find Home feature to re-establish local service.







Tip

To eliminate “roaming” in your home area, use the Find Home feature before you place the call.

System Menu






To force the phone to find home

1. From standby mode, press  menu.
2. Press  System.
3. Press  Find Home.
4. Press  ok.

Version

The Version feature displays the version number of the software installed on your phone.

To display the software version number

1. From standby mode, press  menu.
2. Press  System.
3. Press  Version.
4. Scroll to read the information (see Navigating and using menus, page 21.)
5. Press  or .

Service Provider Select

The Service Provider feature accesses three lists of service providers: Known, Preferred, and Prohibited. This feature allows you to select and force registration with a service provider.

Phone Registering

Registration means your phone is looking for service and obtains service after network approval.

- If the service change alert is set to “on,” the alert sounds a tone and displays a menu when the phone enters or leaves service. (See Service Change, page 71.)
- After your phone is registered, press the following key sequence for service provider information and the current phone number:

System Menu

- ☐  **Menu.**
- ☐  **System.**
- ☐  **Service Provider.**

Changes made to the Preferred or Prohibited Lists do not take effect until the phone is registered again with the network. To register the phone, choose one of the following methods:

- Turn the phone off and on.
- Find your home service provider (see Find Home, page 78).
- Force service provider selection (see Force Service Provider Selection, page 83).

If you add the currently registered service provider to the Prohibited List, the phone automatically re-registers.









Service Provider Lists

- **Known List** – Displays all of the known service providers that can be added to the Preferred or Prohibited Lists. This list is created and updated by the service provider.
 - ☐ New service providers are automatically added as they become available.
 - ☐ Service providers placed on the Preferred List are highlighted.
 - ☐ Service providers placed on the Prohibited List are crossed out.
 - ☐ Service providers on both the Preferred and Prohibited Lists are highlighted and crossed out.
- **Preferred List** – Displays your preferred order of priority for service providers.
 - ☐ Highlighted first on the screen is your home service provider.
 - ☐ The order of priority is shown by the number to the left of the service provider's name.
- **Prohibited List** – Displays the service providers (in alphabetical order) that you choose *not* to use.





System Menu**Note**

You cannot add or delete your home service provider from any list.





Viewing lists**To view the Known, Preferred, or Prohibited Lists**

1. From standby mode, press  menu.
2. Press  System.
3. Press  SP (service provider) Select.
4. To select a list to view:
 - ☐ Press  Known List.
 - ☐ Press  Prefr List.
 - ☐ Press  Prohb List.
5. Press  view to display the service provider's MCC (mobile country code) and MNC (mobile network code).
 - If the service provider is on the Preferred List, the preferred location number displays (Pref Loc).
 - If the service provider is on the Prohibited List, "yes" displays (Prohib).
 - If the service provider is on both the Preferred and the Prohibited Lists, the preferred location number and "yes" displays.
6. Press  ok.

Adding to lists**To add to the Preferred or Prohibited Lists**











1. From standby mode, press  menu.
2. Press  System.
3. Press  SP (service provider) Select.
4. Press  Known List.

System Menu

5. Scroll to select a service provider (see Navigating and using menus, page 21).
6. Press  **edit**.
7. Press  Preferred or  Prohibited.
8. Press  **ok**.
9. Re-register your phone (see Phone Registering, page 79).

Editing lists

To edit (reorder or delete) from the Preferred List

1. From standby mode, press  **menu**.
2. Press  System.
3. Press  SP (service provider) Select.
4. Press  Prefr List.
5. Scroll to select a service provider.
6. Press  **edit**.
7. Choose *one* of the following:
 - Reorder
 - ☐ Press  Reorder.
 - ☐ Scroll to move the selected service provider to a new position in the Preferred List.
 - ☐ Press  **ok**.
 - Delete
 - ☐ Press  Delete.
 - ☐ Press  **ok** to delete the selected service provider from the list.
8. Press  **ok**.
9. Re-register your phone (see Phone Registering, page 79).