 


Aud Mini Plus Manual

Black and white printing with Staple binding

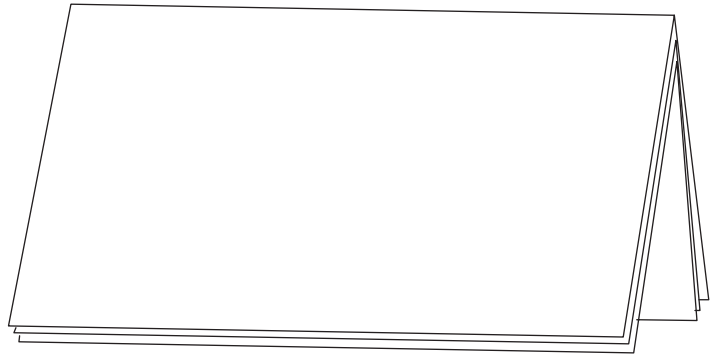

iLuv®

Aud Mini Plus
IPX5 Water Resistant Portable
Stereo Bluetooth Speaker

User Manual



iLuv.com

CONTENTS

Warning and Safety Instructions	1
IPX5 Rated Water Resistance	3
What's included	4
Overview of Aud Mini Plus	5
Battery Charging	7
Power On	9
Bluetooth - Discovery	11
Bluetooth - Connect	
From Your iPhone, iPad, Smartphone, Tablet and Mobile Devices	13
From Your Apple Mac	14
From Window 10 Laptop/Computer	15
From Your Amazon Echo Dot	16
Connect to AUX-In for Non-Bluetooth Device or Window 7 or 8 Computer	19
Answer Calls Hands Free	21
Trouble Shooting	23
Customer Support	25

WARNING AND SAFETY INSTRUCTIONS

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
SAFETY AND PRECAUTIONS

- Read these instructions - All the safety and operation instruction should be read before this product is operated.


- Keep these instructions - The safety and operation instruction should be retained for future reference.
- Follow all instructions - All operating and use instructions should be followed.
- IPX5 rated Aud Mini Plus can resist water splash but must not merged inside water or left on wet place long time.
- Note, please close the rubber cover for water resistance. When charging or using the 3.5mm speaker away from water as it can be damaged by water.
- Unplug the Micro USB charging cable during lightning storms.

IPX5 RATED WATER RESISTANCE


IPX5 rated water resistance allows you to use Aud Mini Plus for following occasions.

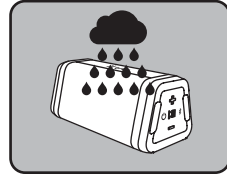

Rain or water splash

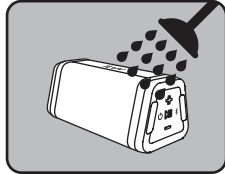 

In shower

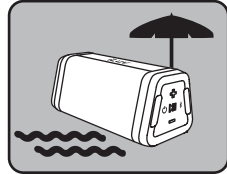 


Beach or by the pool


IPX5 rated Aud Mini Plus can resist water splash but must not be merged inside water or left on wet place long time.

Note: Please close the rubber cover for water resistance. When charging or using the 3.5mm audio cable, please keep the speaker away from water as it can be damaged by water.

 
WHAT'S INCLUDED

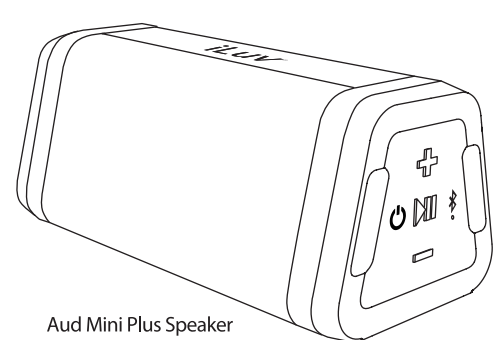

Aud Mini Plus Speaker

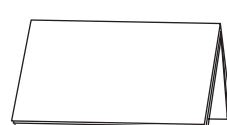 

User Manual

 


Micro USB Charging Cable


OVERVIEW OF AUD MINI PLUS

- | | |
|---|---|
| A Built-in Mic for Handsfree Call | F Charging LED Light (LED is visible only when connected to a charging source) |
| B Bluetooth LED Light (LED is visible only when power is on) | G Power Button |
| C Bluetooth Button | H Rubber Cover |
| D Volume Down Button | I Aux-in Port |
| E Play/Pause Button | |

 - J** Micro USB Charging Port
K Volume Up Button

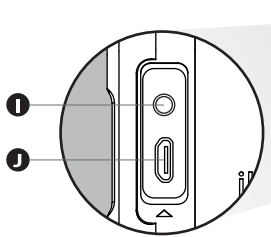


Behind the rubber cover

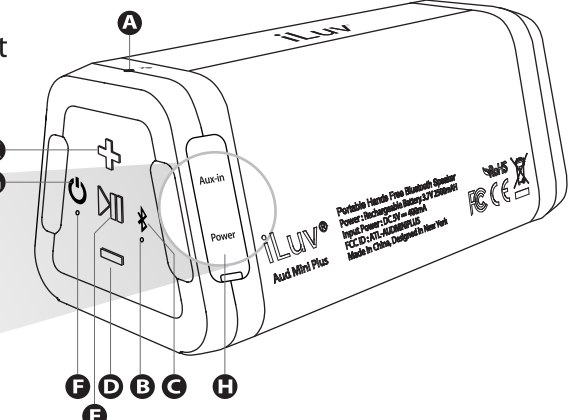 

BATTERY CHARGING

 ATTENTION VERY IMPORTANT! Charge completely before use

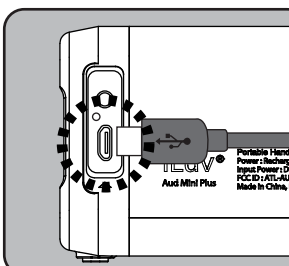

- 1 If battery is low, the LED indicator will flash red.
- 2 Lift up the rubber cover from charging port (Aud Mini Plus is water resistant only when the cover is closed, so please keep it closed when using in wet location).
- 3 Insert the smaller end of the included Micro USB charging cable into Micro USB charging port on Aud Mini Plus as shown.
- 4 Insert the other end of the Micro USB charging cable into a USB wall charger (5V 1.0A up to 5V 2.4A maximum) or a USB port on a computer.
- 5 While charging, the LED indicator will stay red until fully charged. Red LED will turn off once fully charged.

MUSIC PLAY TIME

Music playing time up to 12 hours which varies by volume level and music content.

POWER SAVING FEATURE

Aud Mini Plus automatically turns off the power 15 minutes after BT is disconnected.

* When Aud Mini Plus is connected with Amazon Echo Dot, Echo Dot disables the power saving feature to constantly communicate with Aud Mini Plus even when Aud Mini Plus does not play music.

PLAY WHILE CHARGING

You can play music while Aud Mini Plus is in charging. You can continue to plug into a USB charger even when it is fully charged.

 
 
CHARGING LED LIGHT

Red charging LED light will flash when the battery charge is less than 15%, alerting you to charge. Red light will be on until fully charged. Once fully charged, the red LED light will be off.

POWER ON

TURN ON
Press and hold [⏻] button for 3 seconds. There will be a music tone, indicating power is on.

TURN OFF
Press and hold [⏻] button for 3 seconds. There will be a music tone, indicating power is off.

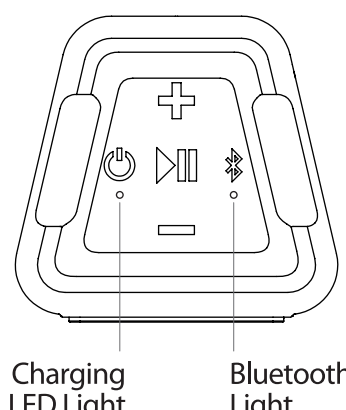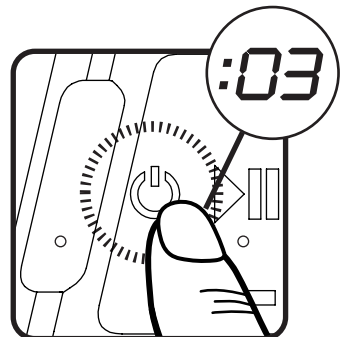

Charging LED Light

Bluetooth Light

CHARGING LED LIGHT - RED

 
- Low Battery
- Charging
- Ready

BLUETOOTH LIGHT - BLUE

- Fast flashing blue Bluetooth Discovery Mode
- Slow flashing blue Bluetooth Connected
- Aux Mode

BLUETOOTH - DISCOVERY

- 1 Power on Aud Mini Plus
- 2 Press and hold [⌘] button for 3 seconds. There will be a music tone. Blue LED light will flash fast, indicating that Aud Mini Plus is discovering your mobile device.

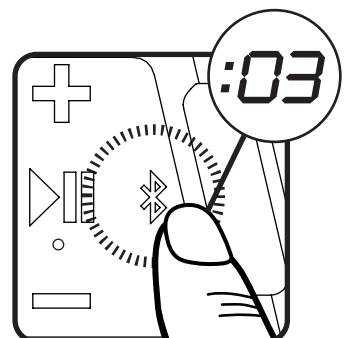

* If blue LED light flashes slowly when you power on, Aud Mini Plus has automatically connected to the last mobile device that was connected before.

* If you want to pair with another device, press and hold [⌘] button for 3 seconds. There will be a music tone and current mobile device will be disconnected. The blue LED light will flash fast and Aud Mini Plus is ready to pair and connect to another device.

BLUETOOTH - CONNECT

13

FROM YOUR IPHONE, IPAD, SMARTPHONE, TABLET AND MOBILE DEVICES

- 1 Go to settings > Bluetooth
- 2 Turn on Bluetooth
- 3 Search and select "iLuv Aud Mini Plus"
- 4 It will connect in a few seconds
- 5 Blue LED light will flash slowly
- 6 Play music from your phone
- 7 Aud Mini Plus will stream music up to 33 ft from your mobile device

FROM YOUR APPLE MAC

- 1 Click "System Preferences"
- 2 Click "Bluetooth"
- 3 Click "Turn Bluetooth On"
- 4 Search "iLuv Aud Mini Plus" under "Devices"
- 5 Click "Pair" on the listing of "iLuv Aud Mini Plus"
- 6 It will connect in a few seconds
- 7 Blue LED light will flash slowly
- 8 Play music from your Mac

BLUETOOTH - CONNECT

15

FROM WINDOW 10 LAPTOP/COMPUTER

- 1 Click Action Center icon located on the bottom right
- 2 Click "Bluetooth" tile to turn on Bluetooth. "Bluetooth" tile will become blue. If you do not see "Bluetooth" tile in Action Center, click "Expand".
- 3 Click "Connect" tile.
- 4 Search "iLuv Aud Mini Plus"
- 5 It will connect in a few seconds
- 6 Blue LED light will flash slowly
- 7 Play music from your computer

FROM YOUR AMAZON ECHO DOT

To use the full Alexa service you must download Alexa app by Amazon on your iPhone, iPad, Smartphone, or Tablet.

- 1 Make sure any other Bluetooth device is not connected to Amazon Echo Dot
- 2 Open Alex App
- 3 Click Menu icon with 3 horizontal lines next to "Home" on the top left
- 4 Press "Settings"
- 5 Select your Amazon Echo Dot under "Devices"
- 6 Click "Bluetooth"
- 7 Click "Pair a New Device". Aud Mini Plus will appear in a few seconds.
- 8 Select Aud Mini Plus
- 9 It will connect in a few seconds. Alexa voice from Aud Mini Plus will say "Connected to Aud Mini Plus"
- 10 Music/Sound from the Amazon Echo Dot will be played through Aud Mini Plus

* If Aud Mini Plus becomes disconnected or turned off, turn on Aud Mini Plus and simply say "Alexa, connect my speaker" or "Alexa, pair".

BLUETOOTH - CONNECT

17

FROM YOUR AMAZON ECHO DOT

WARNING

Amazon Echo Dot disables the power saving feature on the Aud Mini Plus. Therefore, Aud Mini Plus won't automatically turn off power even after 15 minutes without playing music and will stay on. Since Echo Dot will continue to communicate with Aud Mini Plus even when not playing music, it will drain battery charge of Aud Mini Plus at the same rate of music playing with full volume.

SUGGESTION IF IT'S IN BATTERY MODE

- OPTION 1** Please keep Aud Mini Plus connected to USB wall charger.
OPTION 2 Turn off Aud Mini Plus when you are not playing music.

Turn off

- Press [⏻] button for 3 seconds to turn off
- Or, say "Alexa, disconnect my speaker". Aud Mini Plus will automatically turn off after 15 minutes without playing music.

Turn on

 
- 1. Press [⏻] button for 3 seconds to turn on Aud Mini Plus
- 2. Say "Alexa, connect my speaker" or "Alexa, pair". Aud Mini Plus will be connected and play music from Echo Dot.

* For additional support regarding Alexa app, please contact amazon's support team through the app.
1. Open the Alexa app, 2. Select "Help: Feedback", 3. Select "Email Customer Service"

CONNECT TO AUX-IN FOR NON-BLUETOOTH DEVICE OR WINDOW 7 OR 8 COMPUTER

19

- 1 Lift up rubber cover
- 2 Plug one end of 3.5mm Aux-in cable to Aux-in port
- 3 Plug the other end of the Aux-in cable to your non Bluetooth device or laptop/computer. Blue LED light will be on.

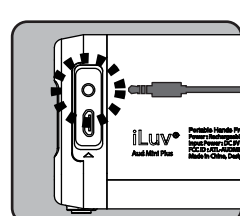

- 4 Play music from the connected device

 
* Bluetooth will be disabled when Aux-in cable is connected to Aux-in port. Please remove Aux-in cable from the speaker when you want to play music through Bluetooth.

* Aud Mini Plus is water resistant only when the cover is closed. So please keep it closed when not using 3.5mm Aux-in cable.

ANSWER CALLS HANDS FREE

21

[⏻] Button to answer/end call

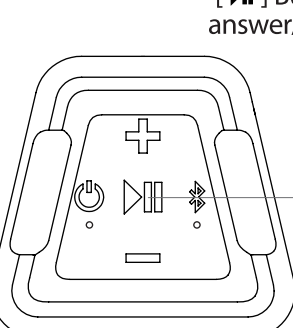

- 1 Once your phone is connected to Bluetooth, speaker will ring when there is incoming call.
- 2 To Answer call, press [⏻] button and begin talking. You should be able to hear call through the speaker.

- 3 To reject the call, press and hold [⏻] button for 3 seconds.

- 4 To end call, press [⏻] button again. Music will resume automatically once call ends.

* Hands-free phone call feature works only with an iPhone or a Smartphone through Bluetooth.

* Please place Aud Mini Plus close to you when you talk so that your voice can be clearly heard by the other person since microphone is located on the top of Aud Mini Plus

TROUBLESHOOTING

23

AUD MINI PLUS DOES NOT TURN ON

Charge Aud Mini Plus at least 15 minutes and turn on the power. Charging LED light will show charging status.

Reset: press and hold Power button for 5 seconds to reset

NO AUDIO SOUND FROM AUD MINI PLUS VIA BLUETOOTH

- Turn off Aud Mini Plus and check Bluetooth device list on your phone. If Aud Mini Plus is listed, forget/unpair the device. Restart the phone. Turn on Aud Mini Plus and pair it again.
- Make sure the volume is up on the Aud Mini Plus and your mobile device
- Check if music from your mobile device is paused
- If your mobile device was out of Bluetooth range, move closer within 33 ft range of Aud Mini Plus
- Turn off Aud Mini Plus and back on
- Check if the music playing app is muted

NO SOUND FROM AUD MINI PLUS WHEN CONNECTED WITH THE 3.5MM AUX-IN CABLE

Please remove case from your mobile device if it prohibits Aux-in cable from being inserted fully

NO CONNECTION TO AMAZON ECHO DOT

- If Blue light flashes slowly which means it is connected to another device via Bluetooth, disconnect the currently paired audio source
- Check if Aud Mini Plus has enough power charge
- Set Aud Mini Plus to pairing mode and say "Alexa, connect my speaker" or "Alexa, pair"

CUSTOMER SUPPORT

25

If your question is not answered in the troubleshooting, please contact us by visiting: <http://support.iluv.com> or call customer service department at 1-866-807-5946.

LIMITED WARRANTY

WHAT IS COVERED?

Our Limited Warranty covers defects in materials and workmanship. Aud Mini Plus will be repaired or replaced at no charge if it is found to be defective within the warranty period. The warranty does not cover damage caused by misuse, accident, or other factors outside of our control.

EXCLUSIONS

This warranty does not apply to the serial number or any other identification number. It does not cover damage caused by misuse, accident, or other factors outside of our control. It does not cover damage caused by fire, theft, or other factors outside of our control.

OUTSTANDING WARRANTY SERVICE

Customers must obtain a Return Merchandise Authorization (RMA) number from our website to initiate a return. RMA numbers are valid for 90 days from the date of issuance. Customers must provide proof of purchase and a description of the defect.

RETURNING YOUR PRODUCT

The product must be accompanied with a valid Return Merchandise Authorization (RMA) number and a description of the defect. The product must be returned within 90 days of the date of issuance of the RMA number.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you. Please read your state's laws for more information.

INSTRUCTIONS ON ENVIRONMENT

Do not dispose of the product in the household trash. It should be recycled or disposed of as electronic waste. Please contact your local government for more information.

FCC NOTICE (USA)

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that the device does not cause harmful interference.

If interference is caused by this device, the user is advised to take the following steps to correct the interference: 1. Increase the distance between the device and the receiver. 2. Turn the device off and on again. 3. Move the device to a different location. 4. Contact the manufacturer for more information.

iLuv Creation Technology
2 Harbor Park Drive
Port Washington, NY 11050

iLuv®
Designed by iLuv in New York