



Wireless Bluetooth Earphone

Indicators for charge and battery
Operating mode and battery management

Schematic diagram



Volume / Power
Power / Mode
Charging indicator

Charge

The earphone with a rechargeable battery. The first use of the earphone must fully charge in the battery. It takes 1.5 hours to fully charge. After completing the process, the battery is full. After you need to charge the earphone.

The charging cable must be connected to the earphone magnetic charging port. About 1 hour to full. Charging status indicator is red light. Full charging status blue light.

Notes

There are positive and negative poles corresponding to the magnetic charging port. It can be charged normally by correct connection. Wrong connection cannot charge in short-circuit state.

Power On/Off

Function	Operation	Indication
On	Power On/Off	Light is on
Off	Power On/Off	Light is off

Music Play

Function	Earphone status	Operation
Previous volume	Play mode	Short press
Next volume		Short press
Next track		Long press
Previous track		Long press
Play/Pause	Play mode	Short-click

Answer the phone

Function	Earphone status	Operation
Answer the call (ringing)	Phone call in	Short-click
End the call		Press
Answer incoming	Calling	Short-click
Answer / End the call (phone call)		Press

Operating instruction

How to pair with Bluetooth

Bluetooth pairing in the off state, enter and hold the power button for 5 seconds, the indicator light will flash red and blue light. Then, enter the pairing mode. Then enter the Bluetooth module phone's computer on the phone and search for the device name "T3" (with the device "T3" to pair with device).

Bluetooth MP3 music playback

Double-click the power button to enter music mode.

Press Bluetooth mode is suitable for both.

Long standby

When the magnetic charging cable is in the computer and the earphone, you can use the USB data transfer cable and can help the energy that the earphone for the chip.

It can't playback music switch

After closing earphone to play music, long-click the power button to switch between music and answering phone mode and playing function.

[illegible]

55mm