

gemini®



GMAX-S5000

**GMAX-S6500
(SHOWN)**

GMAX-S7500

GMAX S-SERIES MANUAL

HIGH POWER BLUETOOTH DVD PARTY SYSTEM

©2024 Innovative Concepts & Design LLC. All Right Reserved.
Bluetooth® is a registered trademark of Bluetooth SIG Inc.
Product Specifications and colors may vary from photo.

Manufactured and serviced by:
Innovative Concepts & Design LLC
458 Florida Grove Road
Perth Amboy, NJ 08861 USA
(732)587-5466

geminisound.com

INDEX

What's Included	3
Precautions	4
Introduction	5
Product Overview	6
Specifications	8
FCC Compliance Statement	10
Legality & Safety	11
Warranty Info	12
Manual en Español	13

WHAT'S INCLUDED

GMAX-S5000

- 1 x GMAX-S Series Head Unit
- 2 x 15" Speaker Cabinets
- 2 x Audio/Lighting Cables
- 1 x Wired Microphone
- 1 x Remote Control
- 1 x Power Cable
- 1 x User Manual



GMAX-S6500

- 1 x GMAX-S Series Head Unit
- 2 x 15" Sub Speaker Cabinets
- 2 x Column Speaker Array
- 4 x LED Spacers
- 2 x Audio/Lighting Cables
- 1 x Wired Microphone
- 1 x Remote Control
- 1 x Power Cable
- 1 x User Manual



GMAX-S7500

- 1 x GMAX-S Series Head Unit
- 2 x Dual 15" Speaker Cabinets
- 2 x Audio/Lighting Cables
- 1 x Wired Microphone
- 1 x Remote Control
- 1 x Power Cable
- 1 x User Manual



3

PRECAUTIONS

PLEASE READ INSTRUCTIONS GIVEN IN THIS MANUAL AND THOSE MARKED ON THE UNIT

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

WARNINGS

Fire and electric shock hazard

- 1 - Do not place any open flame sources, such as lighted candles, on or near the apparatus.
- 2 - Do not attempt to service the apparatus yourself.
- 3 - Opening or removing covers may expose you to dangerous voltages or other hazards and will void the manufacturer's warranty.
- 4 - To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.
- 5 - Lightning storms Unplug this apparatus during lightning storms.
- 6 - Object and liquid entry: Never insert objects of any kind through the openings of this apparatus, as it may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Care should be taken so that objects do not fall and liquids are not spilled into the apparatus through openings in the enclosure immediately.



4

INTRODUCTION

Welcome to the GMAX S-Series, the latest evolution in Gemini's powerful audio lineup. This series combines the best of past GMAX innovations with exciting new features, including a built-in DVD/CD player on each model, making the GMAX-S5000, GMAX-S6500, and GMAX-S7500 versatile solutions for parties, performances, and home entertainment. Paired with either dual or quad subwoofers, depending on the model, and dynamic LED light shows, these speakers deliver an immersive, all-in-one audio-visual experience.

This manual will guide you through the features, setup, and specifications of the GMAX S-Series. For any additional support, feel free to reach out to our customer service team.

INTEGRATED DVD/CD ENTERTAINMENT

All GMAX S-Series models feature a built-in DVD/CD player, allowing you to play your favorite movies, music, and multimedia. Perfect for gatherings or solo relaxation, this added feature elevates the series beyond traditional speakers, turning any space into a cinema or karaoke room.

POWERFUL AUDIO FOR ANY OCCASION

Experience deep bass and clear highs with powerful woofers tailored to each model: the GMAX-S5500 and GMAX-S6500 feature traditional party speaker cabinets, while the GMAX-S7500 features a modern Sub/Array setup. Designed to fill any room, these speakers create an exciting, high-energy atmosphere.

PERFORM LIKE A STAR

With dual microphone inputs, the GMAX S-Series lets you take center stage. Sing, play, and even record your performances directly to a USB or SD card for easy playback. The series transforms any space into a live performance area, ideal for aspiring musicians or home parties.


CUSTOMIZABLE LED LIGHT SHOW

With straightforward controls and adjustable sound settings, the GMAX S-Series makes it easy to customize your audio experience. The GMAX-S6500's column array design and the portable construction across the series ensure easy setup and transport wherever you need great sound.

VERSATILE CONNECTIVITY OPTIONS

Stream music wirelessly via Bluetooth, tune into FM radio, or play your favorite tracks through USB, SD card, or AUX input. With multiple connection options, the GMAX S-Series provides flexible and reliable playback for a wide range of media.


PRODUCT OVERVIEW

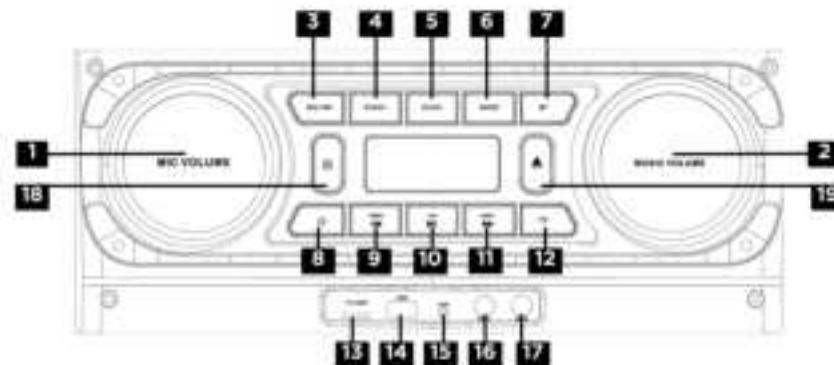

1. **MIC VOLUME:** Adjust volume of both microphone inputs
2. **MUSIC VOLUME:** Adjust master volume of media playback
3. **MIC.PRI:** Microphone priority function, reduces music playback volume when using microphone.
4. **ECHO+:** adjust microphone echo to your desired level.
5. **ECHO-:** adjust microphone echo to your desired level.
6. **MODE:** Switch between BT/USB/TF CARD/FM/CD/DVD modes
7. **BT:** Activate Bluetooth mode
8. **LED lighting:** Toggle between the 5 different lighting modes
9. **PREV-:** Short press for previous song, long press for rewind
10. **P/P:** Play/Pause music
11. **NEXT+:** Short press to skip to next song, long press for fast forward
12. **FM:** Activate FM radio tuner, connect the antenna in rear panel and press **P/P** to search, press **PREV-** and **NEXT+** for broadcasting station. Please note when you press the FM button the LED lighting will turn off.
13. **microSD:** insert micro SD card for audio/video playback
14. **USB flash:** insert USB flash drive for audio/video playback
15. **AUX:** 1/8" / 3.5mm auxiliary audio input
16. **MIC1:** 1/4" / 6.35mm jack microphone input
17. **MIC2:** 1/4" / 6.35mm jack microphone input
18. **Standby:** Put system into standby power mode
19. **Eject:** Open/close the CD/DVD tray

REMOTE CONTROL

1. **Power:** When the power switch on the unit is ON, press to put the unit in standby mode. Press again to resume.
2. **Open/Close:** Open/close CD/DVD tray.
3. **Numeric Keys:** In USB/SD mode, enter a track number to play that specific track. For numbers above 9, press the digits in sequence (e.g., press 1 then 0 for 10, 1 then 1 for 11, etc.)
4. **Goto:** Opens DVD/CD shortcut menu.
5. **Subtitle:** Toggles DVD subtitles on/off
6. **Title:** Displays title menu of the CD/DVD.
7. **Language:** Switches DVD language.
8. **Angle:** Adjusts the DVD viewing angle.
9. **Return:** Return to the parent DVD menu.
10. **Menu:** Opens the CD/DVD menu.
11. **Enter:** Confirms a selection.
12. **Direction Buttons:** Use the arrow buttons to navigate the CD/DVD menu.
13. **Slow:** Slows down DVD playback speed.
14. **Setup:** Opens the setup menu for CD/DVD functions.
15. **Volume +:** Increase the master volume.
16. **Volume -:** Decrease the master volume.
17. **Video:** Adjusts the DVD video format.
18. **Step:** Go to next step in the DVD menu.
19. **Program:** Program a sequence for CD/DVD playback.
20. **Resume:** Resume playback from the previous position on the CD/DVD.
21. **Repeat:** Repeats the current track or section on the CD/DVD.
22. **Mute:** Mute/unmute the audio.
23. **Clear:** Clears all CD/DVD settings.
24. **L/R:** Switches between left and right audio channels.
25. **OSD (On-Screen Display):** Opens the on-screen display menu.
26. **PCB:** Displays the title of the CD/DVD.
27. **USB:** Plays music from the USB drive.
28. **Zoom:** Zooms in or out on the DVD screen.
29. **A-B:** Repeats a selected section from point A to B.
30. **Reset:** Resets the unit to its default settings.

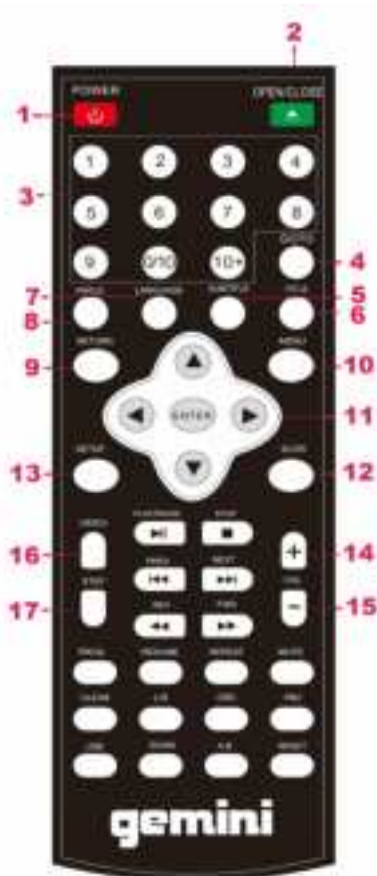

TURNING THE UNIT ON/OFF

Press the power ON/OFF button on the back of the speaker to switch on/off the DVD head unit.

If the power button is off, power button on the remote control will not be functional.

FRONT PANEL LIGHT



Press the Lighting button on the front panel. There are 7 lighting modes to choose from.

Mode 1: Multi-color automatically when power on

Mode 2: Single color circle

Mode 3: Multi color circle

Mode 4: Multi color converge

Mode 5: Multi color circle & converge

Mode 6: Multi color circle & converge & flash

Mode 7: LED lighting off

SPECIFICATIONS

GMAX-S5000

Active/Passive	Active
Amplifier Type	Class D
LF Driver Size	2 x 15" Woofers
HF Driver Size	2 x 1" High-Frequency Driver
Total Power	5500 Watts Peak
Inputs	¼" Mic input ⅛" Aux input RCA Audio input HDMI OPTICAL
Outputs	1/8" Line Out
Media Player	BT, USB, microSD Card & FM Radio
Bluetooth	Bluetooth® V 5.0. Range >30 Feet
Lighting	7 modes / 7 colors LED Party Lighting
Frequency Response	50Hz - 20kHz
Max Peak SPL @ 1 Meter	102 dB
Signal Processing	EQ
Enclosure Material	ABS & MDF
Handles	Top & Side Handles
Mounting Options	N/A
Voltage	AC 115V

GMAX-S6500

Active/Passive	Active
Amplifier Type	Class D
LF Driver Size	2 x 15" Subwoofers
MF Driver Size	3 x 3" full range speaker
HF Driver Size	1 x 1" Tweeter
Total Power	6500 Watts Peak
Inputs	¼" Mic input ¼" Aux input RCA Audio input HDMI OPTICAL
Outputs	1/8" Line Out
Media Player	BT, USB, microSD Card & FM Radio
Bluetooth	Bluetooth® V 5.0. Range >30 Feet
Lighting	5 modes / 7 colors LED Party Lighting
Frequency Response	50Hz - 20kHz
Max Peak SPL @ 1 Meter	102 dB
Signal Processing	EQ
Enclosure Material	ABS & MDF
Handles	Top & Side Handles
Mounting Options	N/A
Voltage	AC 115V

GMAX-S7500

Active/Passive	Active
Amplifier Type	Class D
LF Driver Size	4 x 15" Woofers
HF Driver Size	4x 1" Tweeters
Total Power	7500 Watts Peak
Inputs	¼" Mic input ¼" Aux input RCA Audio input HDMI OPTICAL
Outputs	1/8" Line Out
Media Player	BT, USB, microSD Card & FM Radio
Bluetooth	Bluetooth® V 5.0. Range >30 Feet
Lighting	5 modes / 7 colors LED Party Lighting
Frequency Response	50Hz - 20kHz
Max Peak SPL @ 1 Meter	102 dB
Signal Processing	EQ
Enclosure Material	ABS & MDF
Handles	Top & Side Handles
Mounting Options	N/A
Voltage	AC 115V

Responsible Party Name:
Innovative Concepts & Designs LLC

Company address:
458 Florida Grove Road
Perth Amboy, NJ, 08861 USA

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. The operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These equipment generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and then on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to a different outlet so that the equipment and receiver are on different branch circuits.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. For Mountable Outdoor Bluetooth Speakers this equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC IDs:

2AE6G-GMAXS5000
2AE6G-GMAXS6500
2AE6G-GMAXS7500

LEGALITY & SAFETY

The device is not intended for use by people (including children) with reduced physical, sensory or mental capacity. People who have not read the manual, unless they have received an explanation by someone responsible for their safety, should not use this unit. Children should be monitored to ensure that they do not play with the device. The device should always be readily accessible. The device should not be exposed to water. No objects filled with liquids, such as vases, shall be placed on the device. Always leave a minimum distance of 10 cm around the unit to ensure sufficient ventilation. Open flame sources, such as candles, should not be placed on top of the device. The device is intended for use only in a temperate climate. At full volume, prolonged listening may damage your hearing and cause temporary or permanent deafness, hearing drone, tinnitus, or hyperacusis. Listening at high volume is not recommended. One hour per day is not recommended either. Danger of explosion if battery is incorrectly replaced or not replaced by the same type or equivalent. The battery should not be exposed to excessive heat such as sunshine or fire. Different types of batteries, or new and used batteries, should not be mixed. The battery must be installed according to its polarity. If the battery is worn, it must be removed from the product. The battery must be disposed of safely. Always use collection bins to protect the environment. The battery can only be replaced by the maker of this product, the sales department, or a qualified person. Switch the device off where the use of the device is not allowed or where there is a risk of causing interference or danger - for examples: on an aircraft, or near medical equipment, fuel, chemicals or blasting sites. Check the current laws and regulations regarding the use of this device in the areas where you drive. Do not handle the device when driving. Concentrate fully on driving. All wireless devices are susceptible to interference which may affect their performance. All our devices conform to international/national standards and regulations, and we aim to limit user exposure to electromagnetic fields. These standards and regulations were adopted after the completion of extensive scientific research. This research established no link between the use of the mobile headset and any adverse effects on health if the device is used in accordance with standard practices. Only qualified people are authorized to install or repair this product. Only use batteries, chargers and other accessories which are compatible with this equipment. Do not connect incompatible products. This equipment is not waterproof. Keep it dry. Keep your device in a safe place, out of the reach of young children. The device contains small parts which may present a choking hazard to kids

WARRANTY

A. Innovative Concepts & Designs LLC guarantees its products to be free from defects in materials and workmanship for one (1) year from the original purchase date. Exceptions: Laser assemblies on CD Players, batteries, cartridges, and crossfaders are covered for 90 days.

B. This limited warranty does not cover damage or failure caused by abuse, misuse, abnormal use, faulty installation, improper maintenance, or any repairs other than those provided by an authorized Innovative Concepts & Designs LLC Service Center.

C. There are no obligations of liability on the part of Innovative Concepts & Designs LLC for consequential damages arising out of or in connection with the use or performance of the product or other indirect damages with respect to loss of property, revenues, of profit, or costs of removal, installation, or reinstallation. All implied warranties for Innovative Concepts & Designs LLC, including implied warranties for fitness, are limited in duration to one (1) year from the original date of purchase, unless otherwise mandated by local statutes.

The logo for Gemini, featuring the word "gemini" in a bold, lowercase, sans-serif font. A registered trademark symbol (®) is located at the top right of the letter "i".

support.geminisound.com

MANUAL EN ESPAÑOL

¿QUÉ INCLUYE?

GMAX-S5000

- 1 x Unidad principal GMAX-S
- 2 x Cajas acústicas de 15"
- 2 x Cables de Audio/Iluminación
- 1 x Micrófono con cable
- 1 x Mando a distancia
- 1 x Cable de alimentación
- 1 x Manual de usuario



GMAX-S6500

- 1 x Unidad principal GMAX-S
- 2 cajas de altavoces auxiliares de 15"
- 2 x Conjunto de altavoces de columna
- 4 x Espaciadores de LED
- 2 x Cables de Audio/Iluminación
- 1 x Micrófono con cable
- 1 x Mando a distancia
- 1 x Cable de alimentación
- 1 x Manual de usuario



GMAX-S7500

- 1 x Unidad principal GMAX-S
- 2 x Cajas de altavoces dobles de 15"
- 2 x Cables de Audio/Iluminación
- 1 x Micrófono con cable
- 1 x Mando a distancia
- 1 x Cable de alimentación
- 1 x Manual de usuario



INTRODUCCIÓN

Bienvenido a la serie GMAX S, la última evolución de la potente gama de audio de Gemini. Esta serie combina lo mejor de las innovaciones pasadas de GMAX con nuevas y emocionantes características, incluido un reproductor de DVD/CD incorporado en cada modelo, lo que convierte a los GMAX-S5000, GMAX-S6500 y GMAX-S7500 en soluciones versátiles para fiestas, actuaciones y entretenimiento en el hogar. Junto con subwoofers duales o cuádruples, según el modelo, y espectáculos de luces LED dinámicos, estos altavoces ofrecen una experiencia audiovisual inmersiva todo en uno.

Este manual lo guiará a través de las características, la configuración y las especificaciones de la serie GMAX S. Para cualquier asistencia adicional, no dude en ponerse en contacto con nuestro equipo de atención al cliente.

Todos los modelos de la serie GMAX S cuentan con un reproductor de DVD/CD incorporado, que le permite reproducir sus películas, música y multimedia favoritas. Perfecto para reuniones o relajación en solitario, esta característica adicional eleva la serie más allá de los altavoces tradicionales, convirtiendo cualquier espacio en una sala de cine o karaoke.

AUDIO POTENTE PARA CUALQUIER OCASIÓN

Experimente graves profundos y agudos claros con potentes woofers adaptados a cada modelo: el GMAX-S5500 y el GMAX-S6500 cuentan con cajas de altavoces de fiesta tradicionales, mientras que el GMAX-S7500 cuenta con una moderna configuración Sub/Array. Diseñados para llenar cualquier habitación, estos altavoces crean una atmósfera emocionante y llena de energía.

RINDE COMO UNA ESTRELLA

Con dos entradas de micrófono, la serie S de GMAX te permite ser el centro de atención. Canta, toca e incluso graba tus actuaciones directamente en una tarjeta USB o SD para facilitar la reproducción. La serie transforma cualquier espacio en un área de actuación en vivo, ideal para aspirantes a músicos o fiestas en casa.


ESPECTÁCULO DE LUCES LED PERSONALIZABLE

Con controles sencillos y configuraciones de sonido ajustables, la serie S de GMAX facilita la personalización de su experiencia de audio. El diseño de matriz de columna del GMAX-S6500 y la construcción portátil en toda la serie garantizan una fácil configuración y transporte a donde necesite un sonido excelente.

OPCIONES DE CONECTIVIDAD VERSÁTILES

Contre música de forma inalámbrica a través de Bluetooth, sintonice la radio FM o reproduzca sus pistas favoritas a través de USB, tarjeta SD o entrada AUX. Con múltiples opciones de conexión, la serie S de GMAX proporciona una reproducción flexible y fiable para una amplia gama de medios.

DESCRIPCIÓN GENERAL

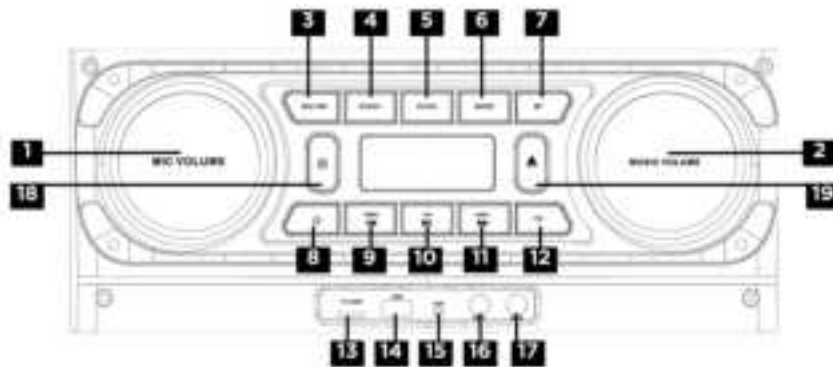

1. **VOLUMEN DEL MICRÓFONO:** Ajusta el volumen de ambas entradas de micrófono
2. **VOLUMEN DE MÚSICA:** Ajuste el volumen maestro de la reproducción multimedia
3. **MIC.PRI:** Función de prioridad de micrófono, reduce el volumen de reproducción de música cuando se usa el micrófono.
4. **ECHO+:** ajusta el eco del micrófono al nivel que desees.
5. **ECHO-:** ajusta el eco del micrófono al nivel deseado.
6. **MODO:** Cambie entre los modos BT / USB / TF CARD / FM / CD / DVD
7. **BT:** Activar el modo Bluetooth
8. **Iluminación LED:** Alterna entre los 5 modos de iluminación diferentes
9. **⏮/PREV-:** Pulsación corta para la canción anterior, pulsación larga para rebobinar
10. **⏮/P/P:** Reproducir/Pausar música
11. **⏭/NEXT+:** Pulsación corta para saltar a la siguiente canción, pulsación larga para avance rápido
12. **FM:** Activar sintonizador de radio FM, Conecte la antena en el panel trasero y presione **⏮/P/P** Para buscar, presione **⏮/PREV-** y **⏭/SIGUIENTE+** para Estación de radiodifusión. Tenga en cuenta que cuando presione el botón FM, la iluminación LED se apagará.
13. **microSD:** inserte la tarjeta micro SD para la reproducción de audio/vídeo
14. **Flash USB:** inserte la unidad flash USB para la reproducción de audio / video
15. **AUX:** entrada de audio auxiliar de 1/8" / 3,5 mm
16. **MIC1:** Entrada de micrófono jack de 1/4" / 6,35 mm
17. **MIC2:** Entrada de micrófono jack de 1/4" / 6,35 mm
18. **En espera:** Ponga el sistema en modo de energía en espera
19. **Expulsar:** Abrir/cerrar la bandeja de CD/DVD

CONTROL REMOTO

1. **Encendido:** Cuando el interruptor de encendido de la unidad esté encendido, presione para poner la unidad en modo de espera. Pulse de nuevo para reanudar.
2. **Abrir/Cerrar:** Abrir/cerrar la bandeja de CD/DVD.
3. **Teclas numéricas:** En el modo USB/SD, introduzca un número de pista para reproducir esa pista específica. Para números superiores a 9, presione los dígitos en secuencia (por ejemplo, presione 1 luego 0 para 10, 1 luego 1 para 11, etc.)
4. **Ir a:** Abre el menú contextual de DVD/CD.
5. **Subtítulos:** Activa o desactiva los subtítulos de DVD
6. **Título:** Muestra el menú de título del CD/DVD.
7. **Idioma:** Cambia el idioma del DVD.
8. **Ángulo:** Ajusta el ángulo de visión del DVD.
9. **Retorno:** Regresa al menú principal del DVD.
10. **Menú:** Abre el menú de CD/DVD.
11. **Intro:** Confirma una selección.
12. **Botones de dirección:** Utilice los botones de flecha para navegar por el menú de CD/DVD.
13. **Lento:** Ralentiza la velocidad de reproducción de DVD.
14. **Configuración:** Abre el menú de configuración de las funciones de CD/DVD.
15. **Volumen +:** Aumenta el volumen maestro.
16. **Volumen -:** Disminuya el volumen maestro.
17. **Vídeo:** Ajusta el formato de vídeo del DVD.
18. **Paso:** Vaya al siguiente paso en el menú del DVD.
19. **Programa:** Programa una secuencia para la reproducción de CD/DVD.
20. **Reanudar:** Reanuda la reproducción desde la posición anterior en el CD/DVD.
21. **Repetir:** Repite la pista o sección actual en el CD/DVD.
22. **Silenciar:** Silenciar/reactivar el audio.
23. **Borrar:** Borra todos los ajustes de CD/DVD.
24. **L/R:** Cambia entre los canales de audio izquierdo y derecho.
25. **OSD (On-Screen Display):** Abre el menú de visualización en pantalla.
26. **PCB:** Muestra el título del CD/DVD.
27. **USB:** Reproduce música desde la unidad USB.
28. **Zoom:** Acercar o alejar la pantalla del DVD.
29. **A-B:** Repite una sección seleccionada desde el punto A hasta el punto B.
30. **Restablecer:** Restablece la unidad a su configuración predeterminada.



ENCENDIDO/APAGADO DE LA UNIDAD

Presione el botón de encendido/apagado en la parte posterior del altavoz para encender/apagar la unidad principal de DVD.

Si el botón de encendido está apagado, el botón de encendido del control remoto no funcionará.

LUZ DEL PANEL FRONTAL



Presione el botón Iluminación en el panel frontal.
Hay 7 modos de iluminación para elegir.

Modo 1: Multicolor automáticamente cuando se enciende

Modo 2: Círculo de un solo color

Modo 3: Círculo multicolor

Modo 4: Convergencia multicolor

Modo 5: Círculo multicolor y convergencia

Modo 6: Círculo multicolor y converger y parpadear

Modo 7: Iluminación LED apagada

ESPECIFICACIONES

GMAX-S5000

Activo/Pasivo	Activo
Tipo de amplificador	Clase D
Tamaño del controlador LF	2 woofers de 15"
Tamaño del controlador HF	2 controladores de alta frecuencia de 1"
Potencia total	5500 vatios pico
Entradas	Entrada de micrófono de 1/4" Entrada auxiliar de 1/8" Entrada de audio RCA HDMI ÓPTICO
Salidas	Salida de línea de 1/8"
Reproductor multimedia	BT, USB, tarjeta microSD y radio FM
Bluetooth	Bluetooth® V 5.0. Alcance >30 pies
Iluminación	7 modos / 7 colores Iluminación LED para fiestas
Respuesta de frecuencia	50 Hz - 20 kHz
SPL máximo máximo @ 1 metro	102 dB
Procesamiento de señales	EQ
Material de la carcasa	ABS y MDF
Manijas	Asas superiores y laterales
Opciones de montaje	N/A
Voltaje	CA 115 V

17

GMAX-S6500

Activo/Pasivo	Activo
Tipo de amplificador	Clase D
Tamaño del controlador LF	2 subwoofers de 15"
Tamaño del controlador MF	Altavoz de rango completo de 3 x 3"
Tamaño del controlador HF	1 tweeter de 1"
Potencia total	6500 vatios pico
Entradas	Entrada de micrófono de 1/4" Entrada auxiliar de 1/8" Entrada de audio RCA HDMI ÓPTICO
Salidas	Salida de línea de 1/8"
Reproductor multimedia	BT, USB, tarjeta microSD y radio FM
Bluetooth	Bluetooth® V 5.0. Alcance >30 pies
Iluminación	5 modos / 7 colores LED Iluminación de fiesta
Respuesta de frecuencia	50 Hz - 20 kHz
SPL máximo máximo @ 1 metro	102 dB
Procesamiento de señales	EQ
Material de la carcasa	ABS y MDF
Manijas	Asas superiores y laterales
Opciones de montaje	N/A
Voltaje	CA 115 V

GMAX-S7500

Activo/Pasivo	Activo
Tipo de amplificador	Clase D
Tamaño del controlador LF	4 woofers de 15"
Tamaño del controlador HF	4 tweeters de 1"
Potencia total	7500 vatios pico
Entradas	Entrada de micrófono de 1/4" Entrada auxiliar de 1/8" Entrada de audio RCA HDMI ÓPTICO
Salidas	Salida de línea de 1/8"
Reproductor multimedia	BT, USB, tarjeta microSD y radio FM
Bluetooth	Bluetooth® V 5.0. Alcance >30 pies
Iluminación	5 modos / 7 colores LED Iluminación de fiesta
Respuesta de frecuencia	50 Hz - 20 kHz
SPL máximo máximo @ 1 metro	102 dB
Procesamiento de señales	EQ
Material de la carcasa	ABS y MDF
Manijas	Asas superiores y laterales
Opciones de montaje	N/A
Voltaje	CA 115 V

18

gemini[®]
support.geminisound.com