

CRAIG®

WIRELESS SELFIE REMOTE
with Bluetooth® Wireless Technology

Owner's Manual

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: CMA3318

FCC INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. Modifications not authorized by the manufacturer may void users authority to operate this device.

01

OPENRATION

location of Controls:

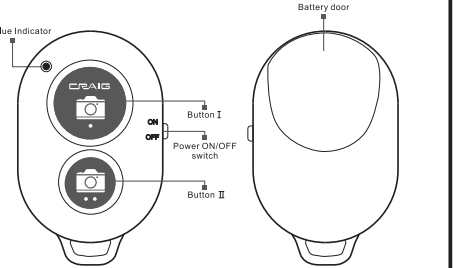


02

POWER SOURCE

Battery Operation:

The unit is operation by CR 2032 Lithium button cell, install or replace the battery as below:

1. Open the battery door by slide it off. Install the supplied (or replace by new) CR 2032 Lithium button cell with polarity "+" face up as the figure below.
2. Replace the battery door.

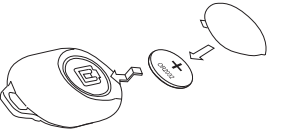

BATTERY PRECAUTIONS:

Follow these Battery Precaution when using a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.

03

OPENRATION

3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's instructions.)
6. Do not dispose of battery in fire. Battery may explodes or leak.
7. Clean the battery contacts and also those of the device prior to battery installation.
8. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burn in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

OPERATION:

1. Slide the Power ON/OFF Switch to ON position, the Blue Indicator will light and blinking.
2. Power on the external BT device and enter to searching mode. Start pairing as the on screen instructions on the external BT

04

OPENRATION

device. After paired, the indicator will not light . (For details pairing procedures, please refer to the user's manual of your BT device).

Notes:

- When the external BT device searched the unit, our model number "CMA 3318" will appear on the display of external BT device.
 - Pairing code "0000" or "1234" may need to enter.
3. To power off the unit, slide the Power ON/OFF Switch to off position. The Blue Indicator will not light.

Normal operation after pairing:

1. Turn on the BT function of the external BT device.
2. Slide the Power ON/OFF Switch on the unit to ON position to power on the unit, the Indicator will light and blinking. Wait until the unit paired to the external BT device. (The indicator will stop blinking. It needs take a few seconds).
3. Enter to the Photo/Video capture mode as usual.
4. Press the either Button I or Button II to capture photo (In video capture mode, press to start video recording then press again to stop). Function is depends on the type of BT paired cell phone.
5. To power off the unit, slide the Power ON/OFF Switch to off position. The Blue Indicator will not light.

05

OPENRATION

Compatible cell phones:

Compatible list	Capture Button
iPhone 6s Plus/6s/6 Plus/6/5s/5c/5/4s/4 , iPad Pro/Air2/Air/4/3/2,iPad Mini 4/3/2 , iPad with Retina Display , iPod touch 6/5/4 .	
Samsung Galaxy S2/S3/S4/S5/S6/S7 , Note 1/2/3/4/5, Tab 2/3, Note8, 10, 1+ Moto X/Nexus 4,5,7.	

Note: Some others cell phones may compatible too. Please try or consult the shop you buy this unit.

Specification:

Power source ----- 1 x CR 2032 Lithium button cell (Included).

Accessory:

1 x User's Manual

Noted: The specifications are subject to change without notice.

06

LIMITED WARRANTY

Craig warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$3.00 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

LIMITED WARRANTY

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

To Obtain Service on your Product
email:service@craigelectronics.com

Printed in China

CMA3318_WC_E0FF1_B0US

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.