




TM

USA Item #1010749792
Model #24SV24386

USE AND CARE GUIDE

12FT GIANT SIZED SKELLY

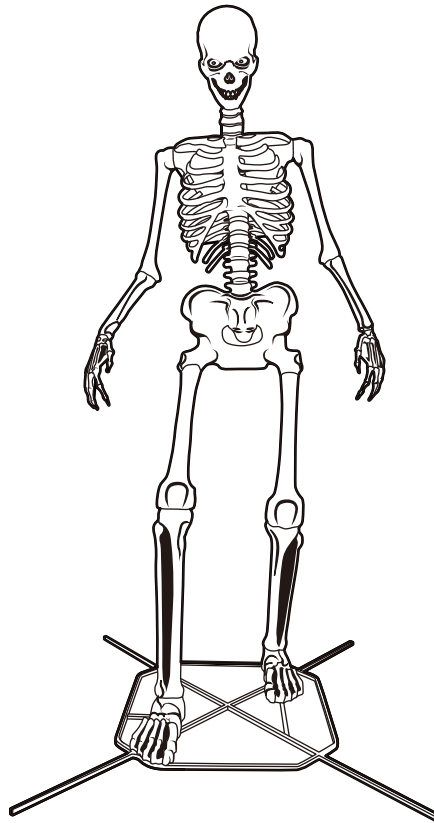

Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday
Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM



**Video assembly
instructions
available online**

THANK YOU

We appreciate the trust and confidence you have placed in Home Depot through the purchase of this 12ft Giant Sized Skelly. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents Holiday!

Table of Contents

Safety Information	2	Assembly	5
Warranty	3	Operation	14
Pre-Assembly	3	Care and Cleaning	16
Tools Required	3	Troubleshooting	16
Package Contents	4	Service Parts	16

Safety Information

BATTERY WARNING:



Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium) batteries. Do not mix old and new batteries. Rechargeable batteries to be removed from the product before being charged. Only batteries of the same or equivalent type as recommended are to be used. Rechargeable batteries are only to be charged under adult supervision. Non-rechargeable batteries are not to be recharged. Batteries are to be inserted with the correct polarity. Remove batteries if consumed or if product is to be left unused for a long time. The supply terminals are not to be short-circuited. Dispose of batteries safely. **DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK**

WARNING



This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep flammables away from the adapter, as it heats up during operation.

Please view all instructions carefully before assembling. Save this instruction sheet for future reference.

- ☐ Lay product down before a storm or strong winds.
- ☐ Don't climb or pull on product.
- ☐ Do not add to or modify unless accessory is designed for product
- ☐ Assemble and place the product on level surfaces only.
- ☐ Don't push or tilt product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.



However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference received, including interference that may cause undesired operation of the device.

Warranty

The 12ft Giant Sized Skelly is intended for seasonal use and does not have a warranty. In the event you experience a technical malfunction, damage, or missing parts upon purchase, please contact customer service (as noted on page 1 and 17) within 90 days of the date of purchase. The customer service team will assist you with troubleshooting / replacement parts depending on the availability of the item. Replacements do not cover normal wear and tear, damage incurred due to misuse, parts not assembled or installed in accordance with the instruction manual, repairs or alternations made outside source, store display products, third party purchases, or full product replacements. All part requests must be accompanied with proof of purchase.

Pre-Assembly

PLANNING INSTALLATION

Estimate installation time: 1 Hour

Number of people required: 2 - 3 People

TOOLS REQUIRED




M6 hex wrench (included)



Small phillips
screwdriver (not included)

Pre-Assembly (continued)

PACKAGE CONTENTS

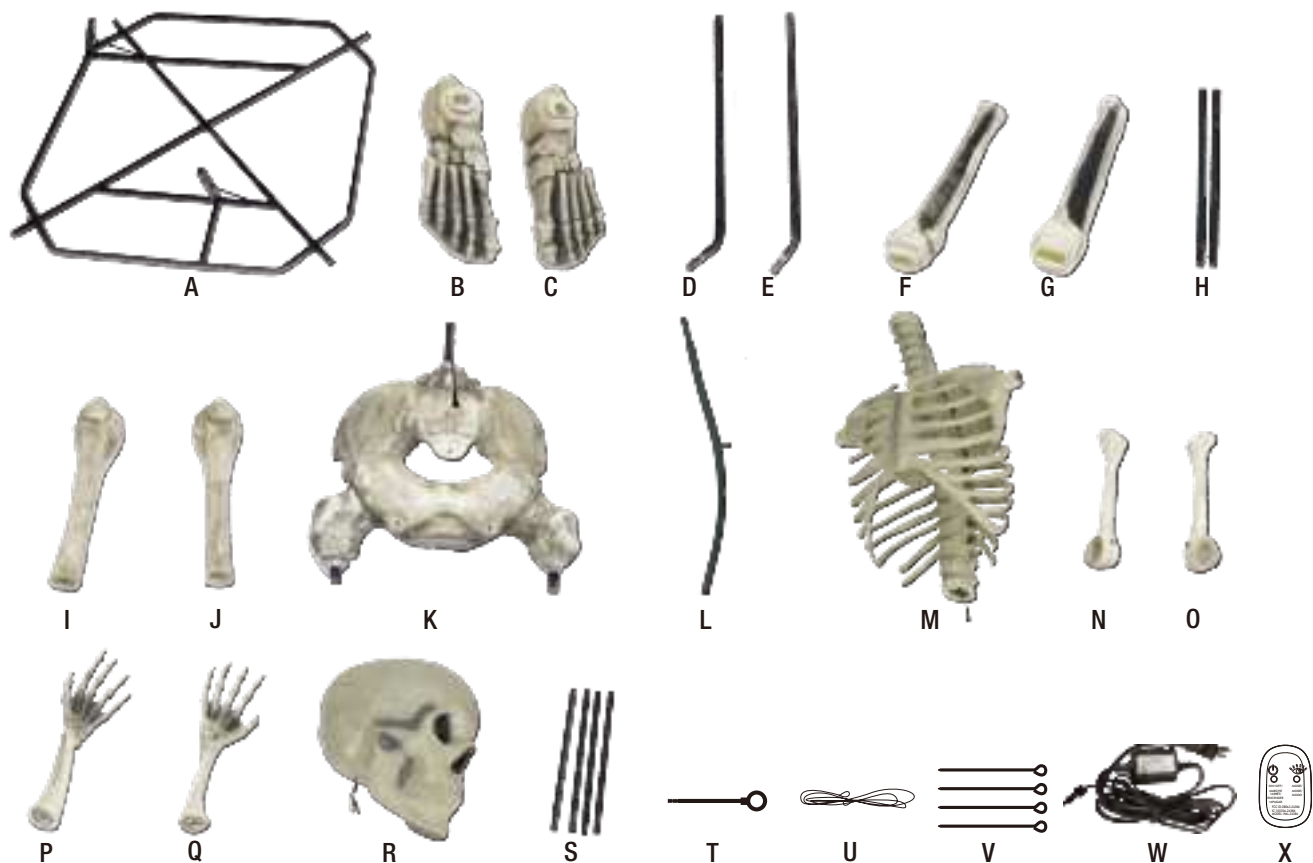

Part	Description	Quantity
A	Base	1
B	Right Foot	1
C	Left Foot	1
D	Right Lower Support Pole	1
E	Left Lower Support Pole	1
F	Right Shin	1
G	Left Shin	1
H	Upper Support Pole	2
I	Right Femur	1
J	Left Femur	1
K	Pelvis	1
L	Spinal Support	1
M	Rib Cage	1
N	Right Humerus	1
O	Left Humerus	1
P	Right Forearm	1

Part	Description	Quantity
Q	Left Forearm	1
R	Head	1
S	Base Stabilizer	4
T	Loop Screw (M8*130mm)	1
U	Cable	1
V	Stake	4
W	Adapter *	1
X	Remote Control	1

Power Adapter * Spec
 Input: 120V~60Hz
 Output: 5.9V 3A
 Wattage: 17.7W


Assembly

1 Placing the feet

- Place the Right Foot (B) and Left Foot (C) onto their corresponding pole on the Base (A).






NOTE: Throughout the instructions, Right and Left are relative to the character. Hex wrench included for assembly.

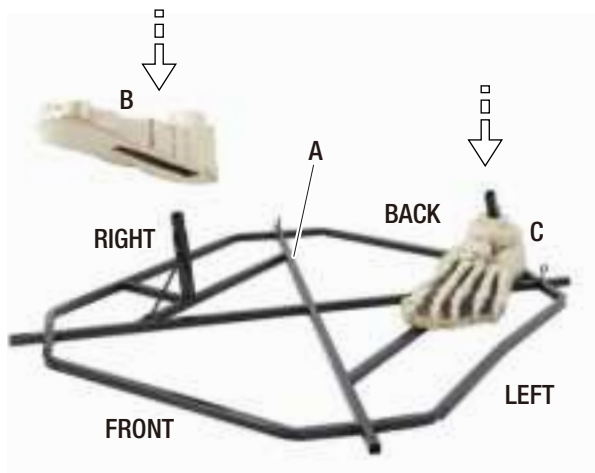

2 Attaching the lower support poles

- Connect the Right Lower Support Pole (D) and the Left Lower Support Pole (E) to their corresponding pole available on the Base (A).

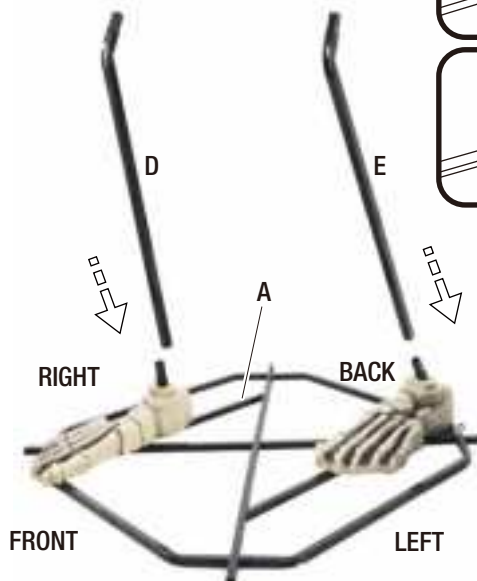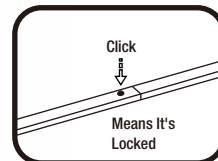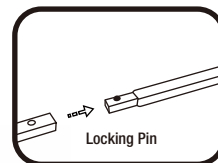


3 Placing the shins

- Slide the Right Shin (F) over the Right Lower Support Pole (D) and slide the Left Shin (G) over the Left Lower Support Pole (E).




NOTE: The Right Shin (F) and Left Shin (G) are designed to only fit onto their corresponding Right Foot (D) and Left Foot (E).

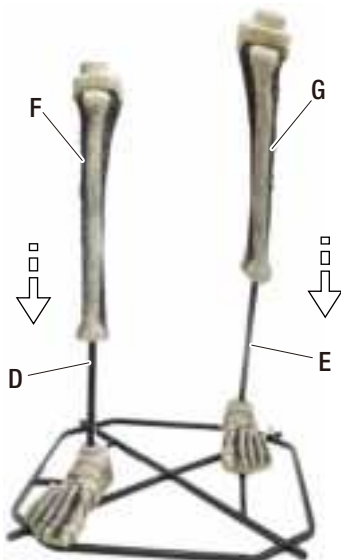

4 Attaching the upper support poles

- Attach an Upper Support Pole (H) to both the Right Lower Support Pole (D) and the Left Lower Support Pole (E).

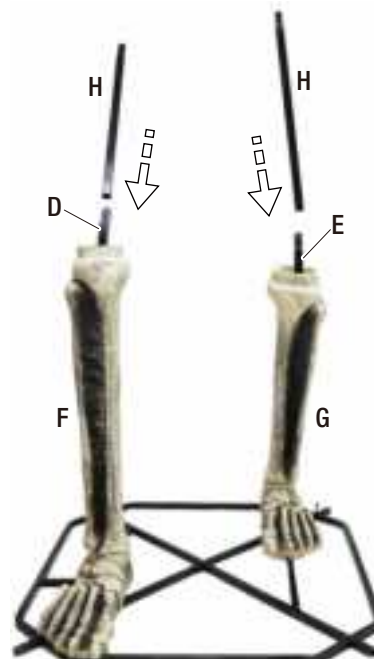


Assembly (continued)

5 Placing the femurs

- Slide the Right Femur (I) over the Upper Support Pole (H) on the right side and fit onto the Right Shin (F). Slide the Left Femur (J) onto the Upper Support Pole (H) on the left side and fit onto the Left Shin (G).



NOTE: The Right Femur (I) and Left Femur (J) are designed to only fit onto their corresponding Right Shin (F) and Left Shin (G).

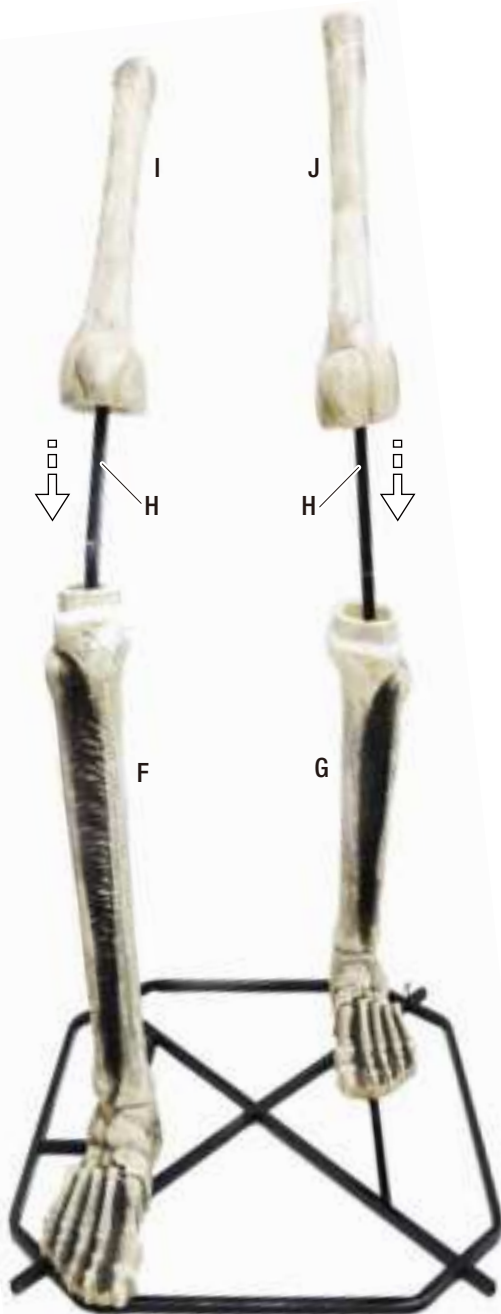

6 Attaching the pelvis



- Attach the Pelvis (K) to the Upper Support Poles (H) and fit onto the Right Femur (I) and Left Femur (J).



NOTE: A ladder and more than 2 people are advised when assembling the Pelvis (K) to the Upper Support Poles (H), Right Femur (I), and Left Femur (J). If there is difficulty in assembling the Pelvis (K), try adjusting the upper legs until they are properly aligned.



NOTE: If connecting the Pelvis (K) is difficult, try attaching the Pelvis (K) to the Upper Support Poles (H) in a lowered position. Once the Upper Support Poles (H) are inserted, carefully raise the assembly to a vertical position to help lock pins into place.

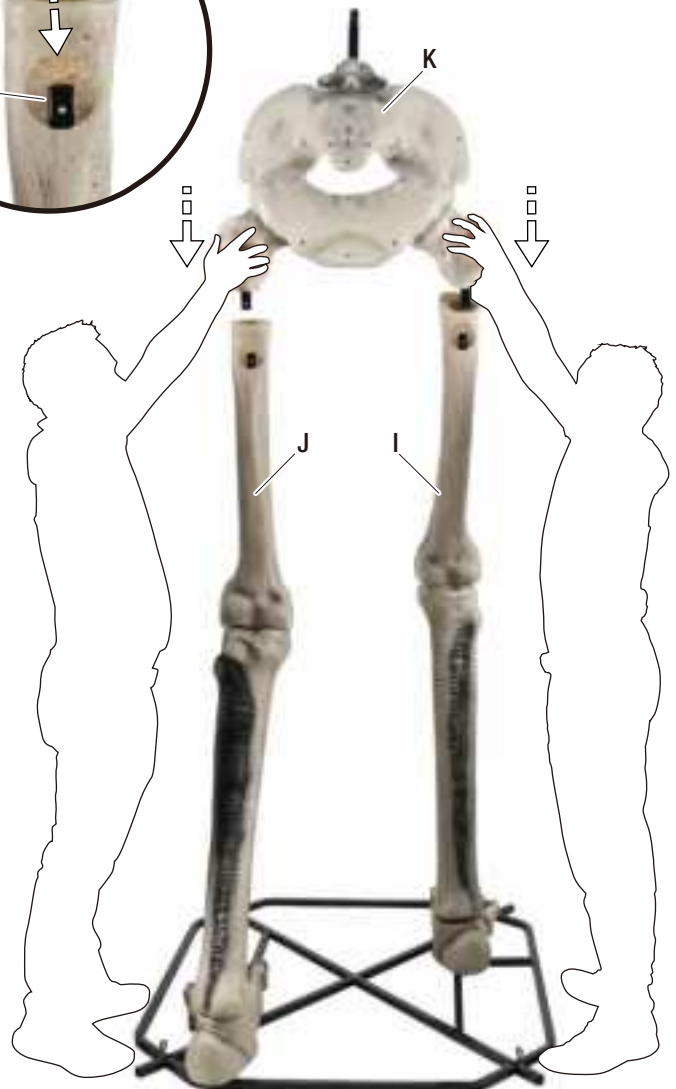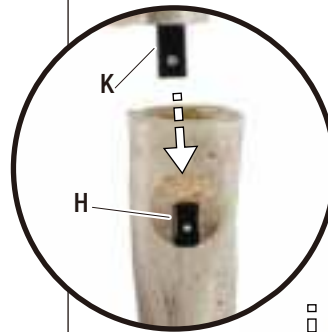


Assembly (continued)

7 Laying down the assembly

- Lean the assembly onto the box it came in for easier assembly.




NOTE: 3 adults are strongly recommended for this step.

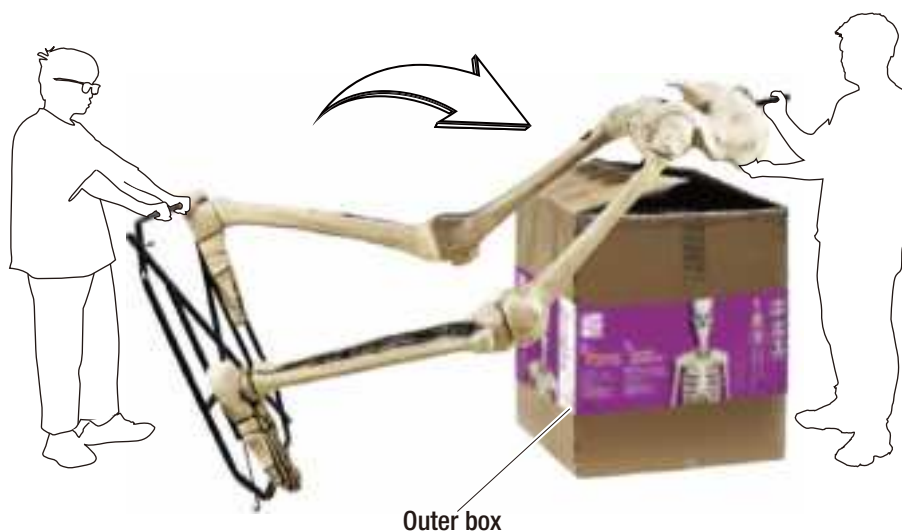

8 Attaching the spinal support

- Attach the Spinal Support (L) to the top of the Pelvis (K).

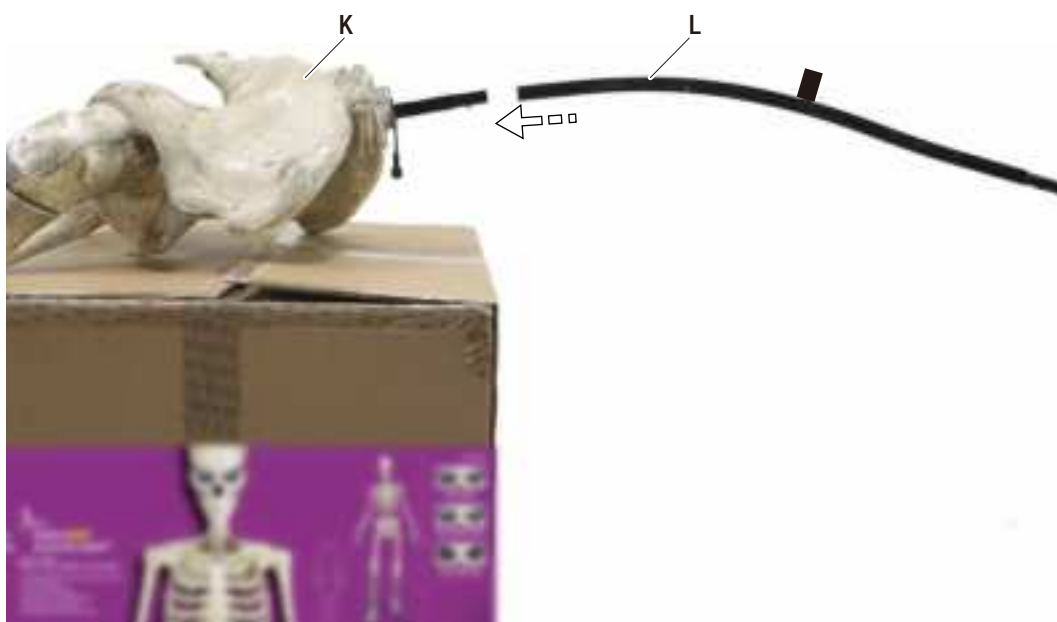


Assembly (continued)

9 Attaching the rib cage

- Slide the Rib Cage (M) over the Spinal Support (L). Then connect the cable from the Rib Cage (M) to its corresponding cable from the Pelvis (K). Then fit the Rib Cage (M) onto the Pelvis (K).




NOTE: After connecting the wires, hide the excess inside the available cavity at the bottom of the Rib Cage (M).

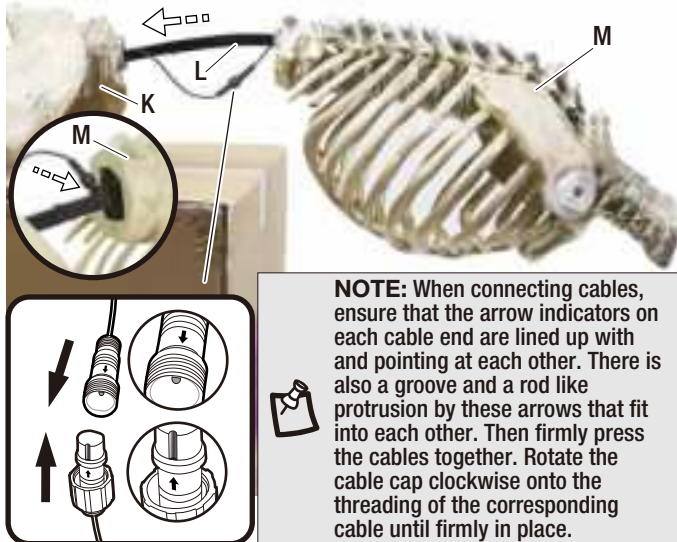

NOTE: When connecting cables, ensure that the arrow indicators on each cable end are lined up with and pointing at each other. There is also a groove and a rod like protrusion by these arrows that fit into each other. Then firmly press the cables together. Rotate the cable cap clockwise onto the threading of the corresponding cable until firmly in place.


10 Securing the loop screw

- Screw the Loop Screw (T) into the threading available in the hole at the upper back of the Rib Cage (M).

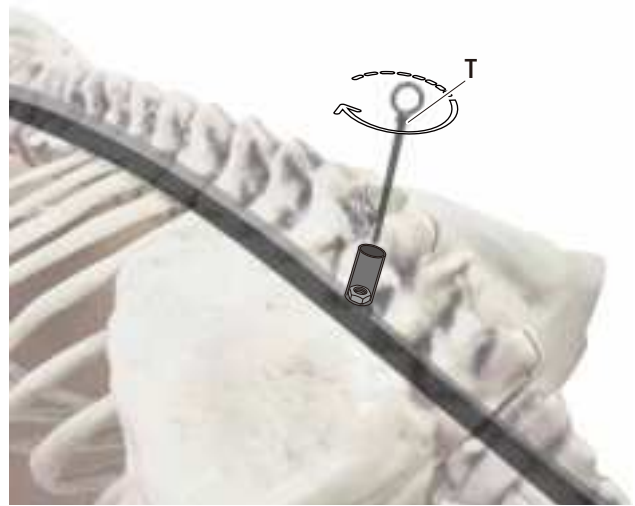

11 Attaching the right humerus

- With the Screw access hole facing the grooves on the shoulder shaft, set the Right Upper Arm (N) onto the right shoulder of the Rib Cage (M). Use the Hex Wrench to tighten the screw in place. Do not overtighten. Arm position should be adjusted only after arms are attached with screw facing grooves.

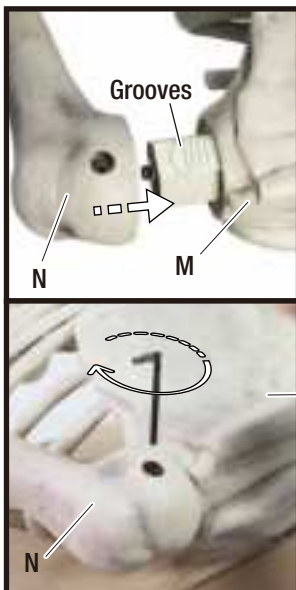



NOTE: Do not overtighten this screw. Overtightening may result in damage to the product. If a screw is missing, check inside the box as it may have fallen out of the arm.



Screw
M8*18mm



12 Attaching the left humerus

- Set the Left Upper Arm (O) onto the left shoulder area of the Rib Cage (M) so that the screw lines up with the grooves at the shoulder. Use a Hex Wrench to tighten the screw in place.

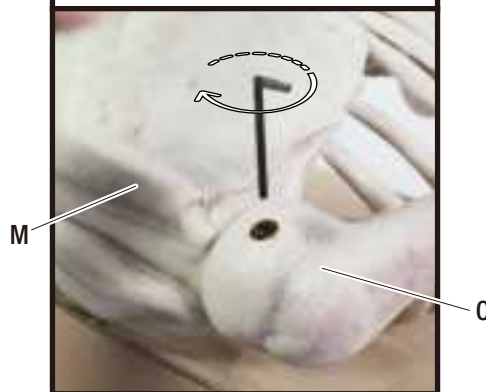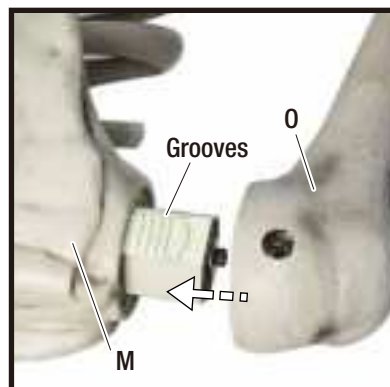

13 Attaching the forearms

- Connect the Right Forearm (P) to the Right Upper Arm (N) by using an insert and twist motion. Connect the Left Forearm (Q) to the Left Upper Arm (O) by using an insert and twist motion. Arms can now be posed by raising or lowering. Follow cautions in Step 20.

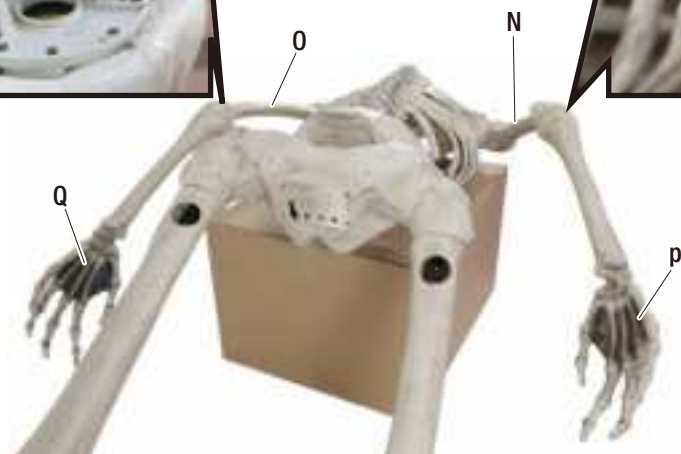
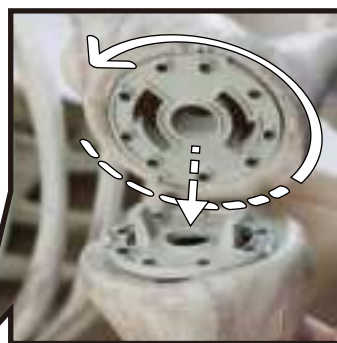


14 Securing the tether cable

- Set the Tether Cable (U) onto the hook available at the right side of the Base (A) and then thread the Tether Cable (U) through the Loop Screw (T). Then set the other end of the Tether Cable onto the hook available at the left side of the Base (A).






CAUTION: Cable may have sharp ends, use caution when assembling. If cable cannot reach, the upper body of the 12ft Giant Sized Skelly needs to be lifted while in its laying position. This should enable the cable to reach.

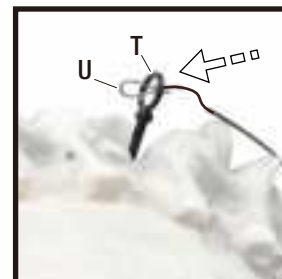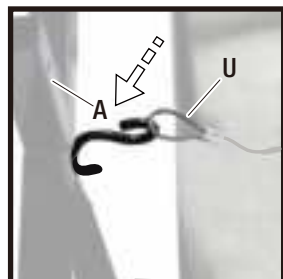


15 Attaching the head

- Connect the cables from the bottom of the Head (R) to their corresponding cables available at the top of the Rib Cage (M). Tuck the excess cables into the cavity available at the top of the Rib Cage (M) and secure the Head (R) onto the Rib Cage (M) using an insert and twist motion.

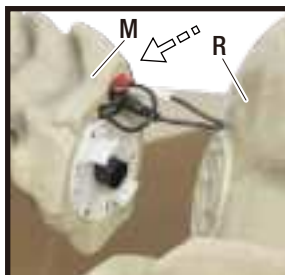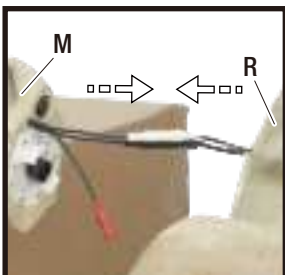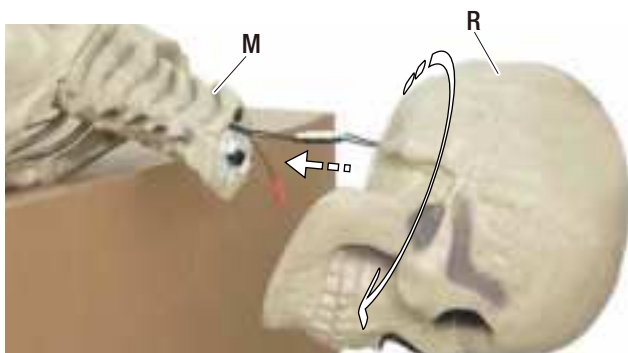

NOTE: The red cable is for future accessories for the 12ft Giant Sized Skelly. This red cable does not have a use otherwise and can be tucked into the cavity at the top of the Rib Cage (M).

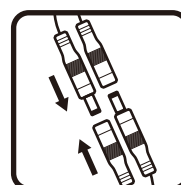

Cable pairs are color-coded to ensure proper color-matching connections.



16

Plugging in the adapter

- Plug the Adapter (W) into the adapter receiver available on Control Panel or underside of the Pelvis (K).



NOTE: When plugging the adapter into the 12ft Giant Sized Skelly, ensure that the cap on the adapter cable is rotated clockwise until firmly in place as shown.

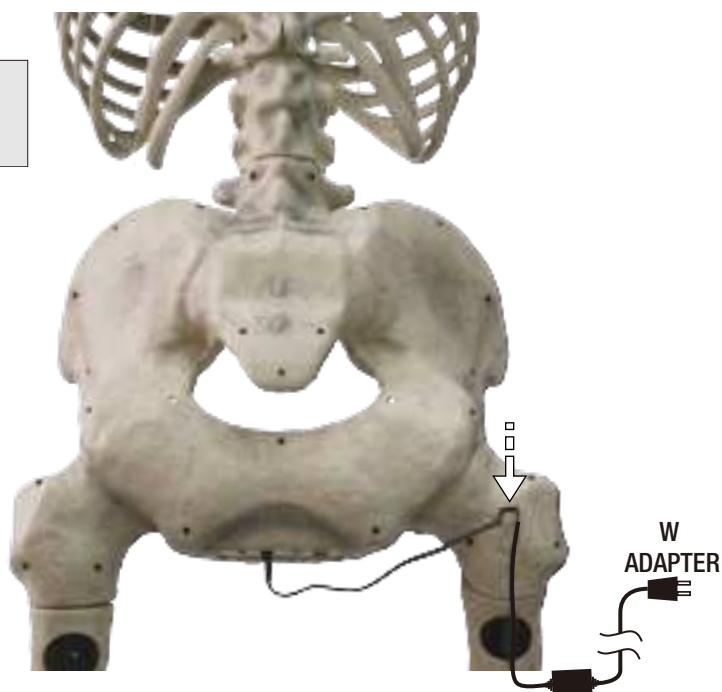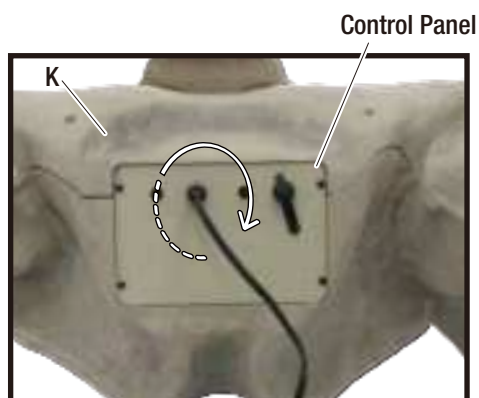


17

Standing up the skeleton

- Stand the assembly up with one person pressing down on the back of the Base (A) and another person lifting up by the Rib Cage (M).




CAUTION: The Tether Cable (U) must be secured before standing up the 12ft Giant Sized Skelly. It is strongly advised that 3 adults participate in the assembly, standing the skeleton up, setting the skeleton down, and disassembly. The item must be laid down for disassembly.

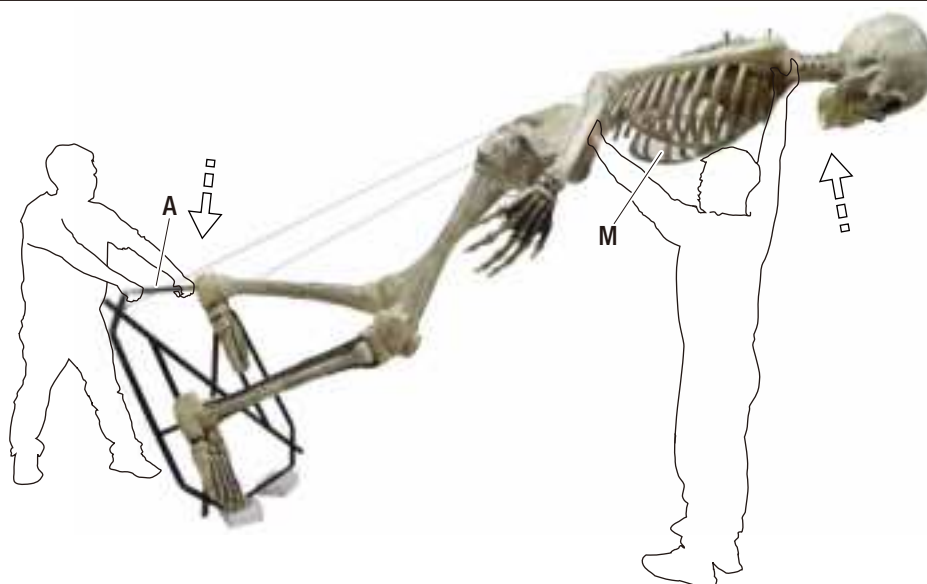

18 Attaching the base extensions

- Attach the Base Extensions (S) to each corner of the Base (A).



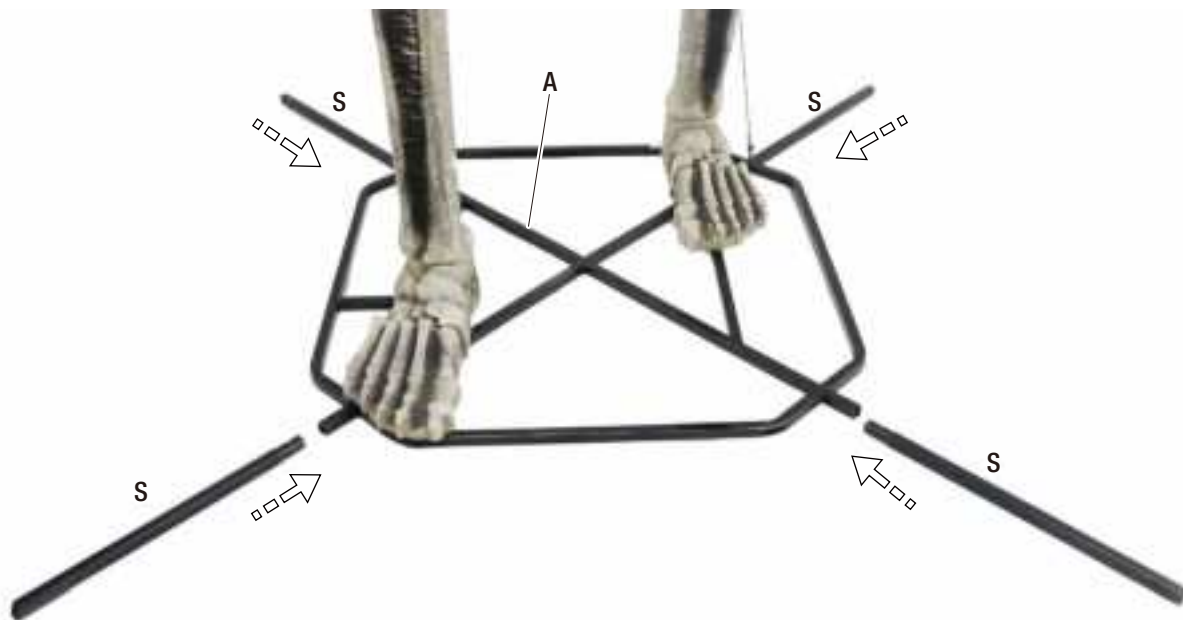


19 Securing the base

- If the Skeleton is assembled on soft ground, insert the Stakes (V) through the holes and into the ground at each corner of the Base (A).




NOTE: If your application requires additional stability, add weights on top of the base (for example sand bags – not included). You can also add guy wires (not included) for added stability.

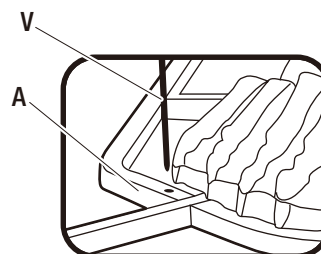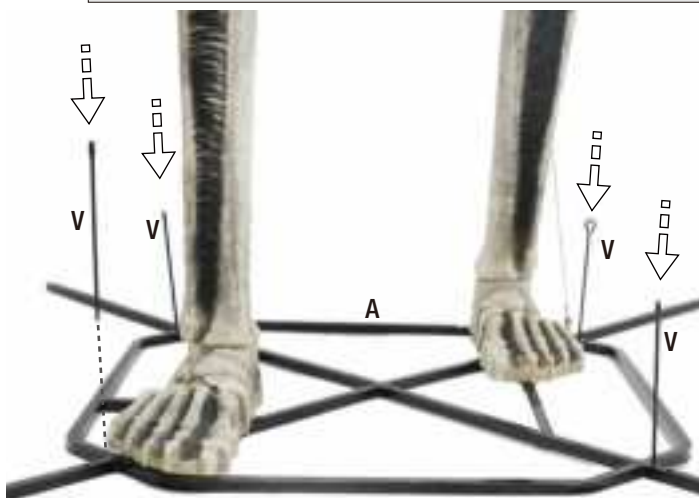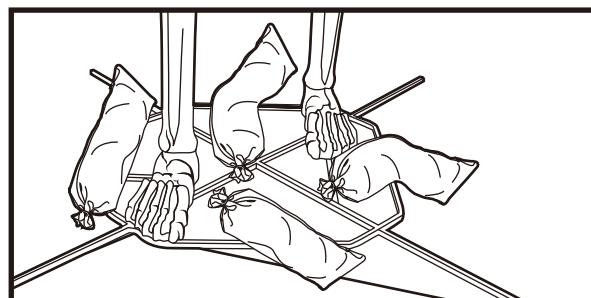

20 Adjusting to preference

- The controls for turning on the LCD Eyes and toggling between the eye options are under the Pelvis (K). The Remote Control (X) can also be used to change settings. Position the 12ft Giant Sized Skelly on flat surfaces only. Your 12ft Giant Sized Skelly is now fully assembled. Plug in and turn on to let the fun begin!

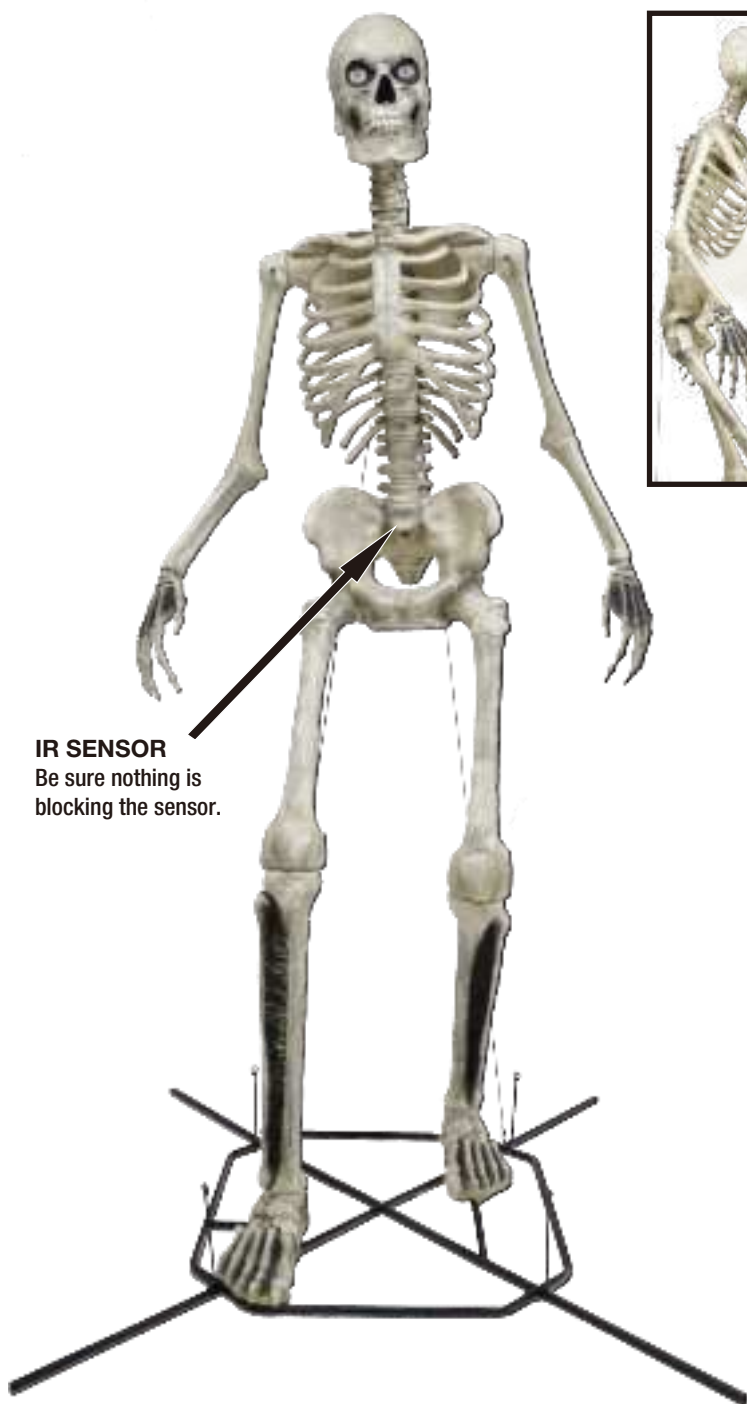


NOTE: The arms can be raised or lowered to your preference. Apply firm steady pressure on the upper arm.

Do not apply pressure at the hand or forearm to adjust arm height, this may damage the parts.



Loud 'clacking' is normal as the arm moves. If you're unable to move the arm, please contact customer service for further instructions.

Please pose arms before standing up, otherwise a ladder will be needed.

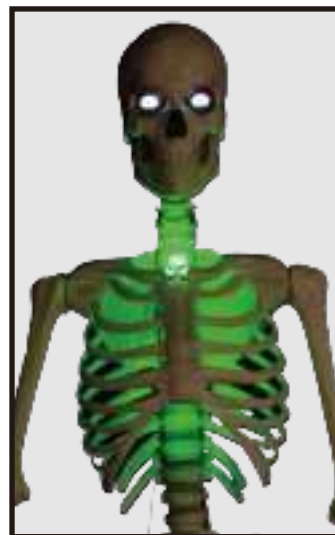

If you would like to add additional lighting fun to your skeleton, check out the 12 Foot Skeleton Lighting Kit at The Home Depot (sold separately).


Operation


1 Controls

NOTE: The 12ft Giant Sized Skelly has 3 different function settings (ON, SENSOR/TIMER and OFF) and 8 different Eye Options (MODES) to chose from - see images on box. Settings and Eye options can be controlled at the Control Panel or by using the Remote Control. Timer/Sensor setting is only available on the Skeleton Control Panel, located on the underside of the Pelvis (K).

OPERATION INSTRUCTIONS - CONTROL BOX:

Plug the power adapter into a standard power outlet. Locate the 2 push buttons on the control panel underneath the Pelvis (K). Middle Button is for ON/OFF and Sensor/Timer. Button at corner of panel is to select from 8 Eye options/modes.

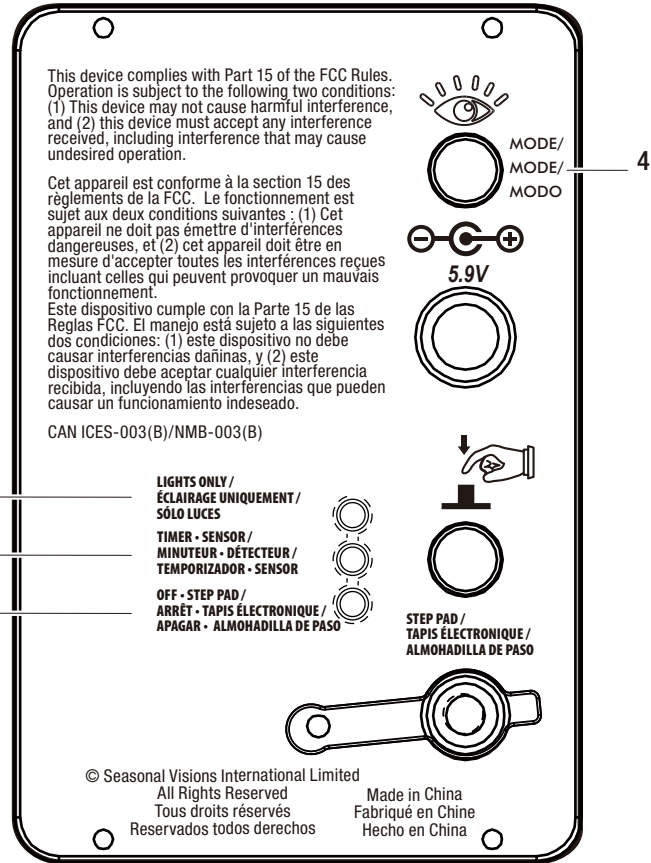


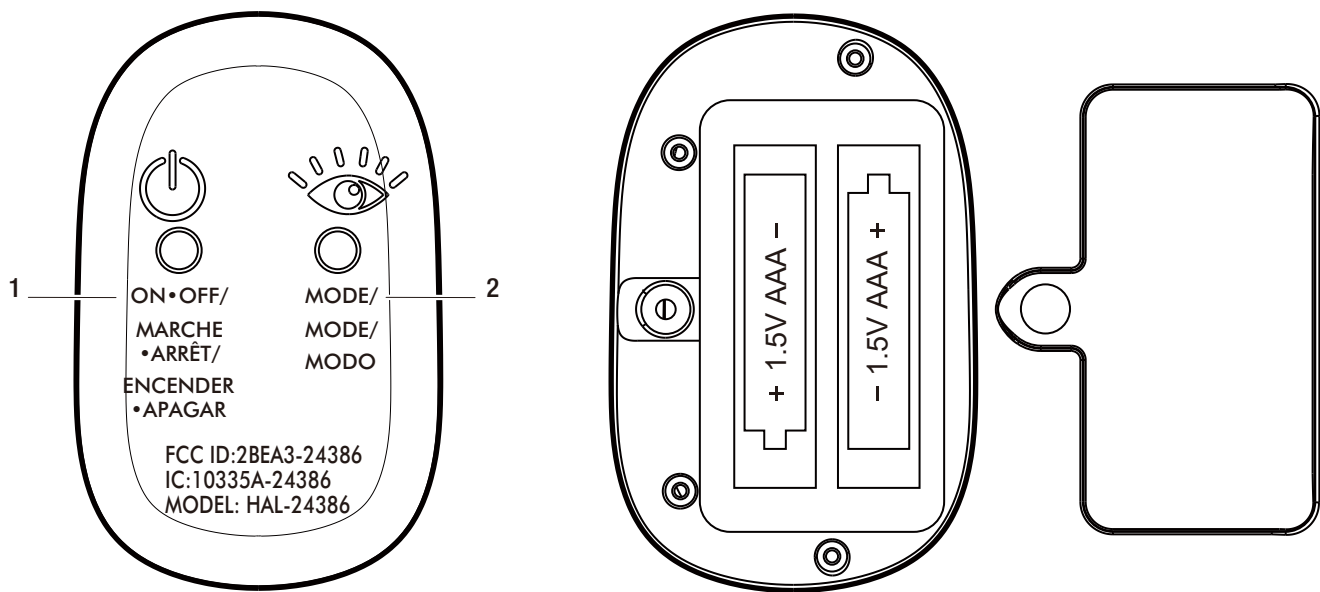
Button	Function Description
1 LIGHTS ONLY / ÉCLAIRAGE UNIQUEMENT / SÓLO LUCES	Press middle button once to activate the LCD eyes indefinitely until the settings are changed.
2 TIMER • SENSOR / MINUTEUR • DÉTECTEUR / TEMPORIZADOR • SENSOR	Press middle button twice to activate the LCD eyes for an 18 second function cycle when the Infra-red (IR) sensor is activated. The Infra-red (IR) sensor has a range of up to 4 m/13 ft. and will activate when someone comes within an 80-degree angle from left to right as well as from above and below.
3 OFF • STEP PAD / ARRÊT • TAPIS ÉLECTRONIQUE / APAGAR • ALMOHADILLA DE PASO	Press middle button a third time to turn LCD eyes OFF, or if using the Step Pad for activation, each press activates the 12ft Giant Sized Skelly for an 18 second cycle.
4  MODE/ MODE/ MODO	Corner button toggles through 8 LCD eye options.




NOTE: The 12ft Giant Sized Skelly is compatible with external timers and preserves its setting when the power is turned OFF/ON.


2 Remote control

 This Remote Control allows one to change the settings of the 12ft Giant Sized Skelly from up to 20 ft away. The Remote Control has an indicator light that lets you know if its working.



Button	Function Description
1 ON • OFF / MARCHE • ARRÊT / ENCENDER • APAGAR	This button turns the Skeleton on and off.
2  MODE/ MODE/ MODO	This button toggles through the 8 different LCD eye displays for the 12ft Giant Sized Skelly.

 **NOTE:** Timer/Sensor setting can only be chosen from the Skeleton Control Panel, not with Remote Control.

NOTE: Requires 2 x 1.5V AAA batteries (Included)
 * You will need a small Phillips head screwdriver (Not included).
Locate the battery compartment on the product. Remove the battery compartment cover by using a small Phillips head screwdriver to unscrew the screw. After removing or installing the batteries, place the battery compartment cover into position, and secure the battery cover. If Skeleton is being stored while not in use, please remove battery in Remote Control.

Care and Cleaning

□ General Cleaning

- Wipe with a clean, damp cloth. If packing, allow 12ft Giant Sized Skelly to fully dry before putting back in the box.



NOTE: When not in use, store this product in its original packing. Keep away from heat and moisture. Remove batteries from Remote Control.

Specifications

□ Power Adapter Spec

Input:	120V~60Hz
Output:	5.9V 3A
Wattage:	17.7W

Troubleshooting

Problem	Solution
The LCD eyes are not lighting up or are not functioning properly (cannot switch between eye options).	Ensure that all cables are firmly connected to their corresponding cables. Make sure that the adapter is plugged into a live outlet and that the adapter is plugged firmly into the adapter receiver. If the issue persists, contact customer service.
The item does not turn on when activated.	Make sure that the adapter is plugged into a live outlet. Also make sure that the adapter is firmly plugged into the adapter receiver. If the issue persists, contact customer service.
The Remote Control is not working.	Make sure you are within a 20 ft. range of the 12ft Giant Sized Skelly. If the issue persists, replace the batteries in the Remote Control with fresh batteries (2 x 1.5V AAA). If there is still a problem with your Remote Control, contact customer service.
The sensor is not working.	Make sure the sensor is not aimed at an area that is either a heat source or any drafty areas. The Infra-red sensor works by detecting changes in temperature and these environments can affect its function. Make sure nothing is blocking the sensor and that the sensor cable is firmly plugged into its corresponding cable. If the issue persists, please contact customer service.

Service Parts

Replacement parts are available for most parts listed on page 4, but supplies are limited and restrictions do apply. Additional parts (wiring, hardware, etc.) may also be available.

Please retain your receipt or proof of purchase from The Home Depot.

Contact Customer Support for details or if you have any question about assembly or operation. Contact information is at the front and back of this manual.



Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday
Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM

Retain this manual for future use.