

***NONSTOP™***

**Station** **W**

**Setup &  
Usage Guide**




*Qi Certified Fast Wireless charging*






## Interface & Ports

- ❶ Hour Set button
- ❷ Minute Set button
- ❸ ALARM ON-OFF switch
- ❹ SNOOZE/DIMMER button
- ❺ DISPLAY ON-OFF switch
- ❻ Qi charging area
- ❼ Security tether socket
- ❽ Hour Quick Adjust button
- ❾ Time Set button
- ❿ DC Power In
- ⓫ Port Security Cover

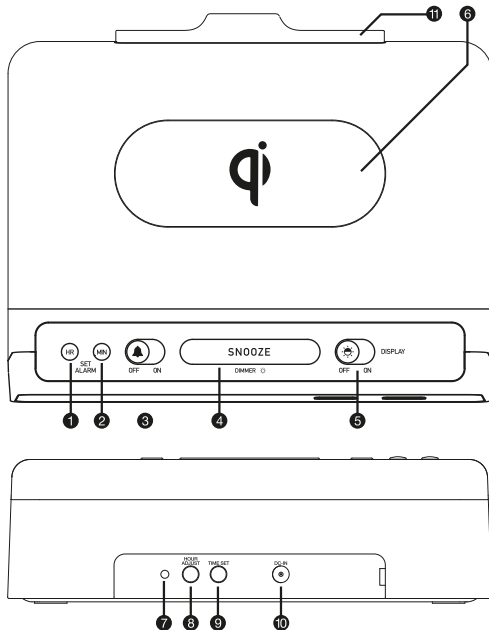

## Front Panel Display

- 12 Alarm Indicator
- 13 Time Display
- 14 AM/PM Indicator
- 15 Qi Charging Indicator
- 16 USB CHARGING PORT (1A)
- 17 USB CHARGING PORT (2.4A)

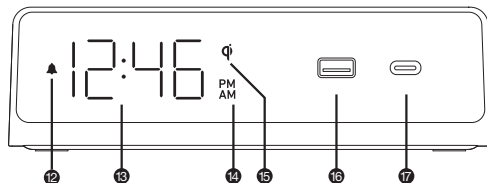

## Specifications

Power .....	DC 9V 3.5A Adapter
AC Power Supply .....	100-240V ~ 50/60HZ 1.5A Max
Qi Charging Pad .....	10W
USB-A Charging .....	1A
USB Type-C Charging .....	2.4A

## Installation

Insert the small end of the AC/DC adapter into the DC IN Jack located on the back of the Station W. Connect the other end to a wall outlet (110V AC).

If desired, connect the security tether to the security socket on the back of Station W.

Once the time is set, the Port Security Cover can be fastened over the ports by inserting into the tab on the back right of Station W and then secured with a screw on the left side.

## Quick Time Set

Station W comes with the date and time already set.

To simply adjust the hour to your local time zone, press the "Hour Adjust" button on the back of Station W.

## Auto DST

Auto-DST by default will ship as "on".

Press both "time set" and "hour adjust" together to toggle DST on/off, the display will show "dSt" for 1 second and then show "ON" or "OFF" 5 seconds.

## Full Date & Time Set

1. On the back of Station W, press and hold TIME SET and the last 2 digits of the current year are displayed. Make sure they are correct. Press the HR or MIN button repeatedly to advance to the correct current year.
2. Press TIME SET button again, the current date will flash. Make sure it's correct. Press the HR button repeatedly to advance the correct current month, press the MIN button repeatedly to advance the correct current day.
3. Press TIME SET button again. Press HR button to set the hour. Press the MIN button to adjust the minutes. As you cycle through, the hours will change from AM to PM. (You can tap or hold down to change the time faster.)
4. Press TIME SET button again to exit the setup (or if no key pressed for about 10 seconds, it will automatically exit the setup)

## Setting the Alarm

To set the time, press the HR button and MIN button to change the alarm time.

Slide the ALARM switch to the "ON" position. When the alarm is on, the 📌 icon will appear the display.

## Using the Alarm

To snooze, tap the SNOOZE button on the top. The Alarm will sounds again after 9 minutes.

To STOP Alarm, slide the ALARM switch to the "OFF". To reset ALARM to sound again next day, press switch to the "ON" again.

## Display

To turn the display off, simply slide the display switch to the "OFF" position. To turn the display back on, simply slide the swith to the "ON" position.

There are three (3) levels of display brightness. Repeatedly press the SNOOZE/DIMMER button to select the desired setting.

## Qi wireless charging

Place your wireless device on top of the Station W. Charging will begin on contact. When wirelessly charging, the LED indicator is continuously solid green.

**NOTE:** Works with all Qi certified compatible devices including: iPhone 8, iPhone X, Android Phones.

**NOTE:** Provides 10W of charging power for faster Qi wireless charging.

**NOTE:** Station W has a protective circuit that detects when foreign objects or devices that are Qi certified are placed on the charging and will disable power to the charger as a safety precaution. When triggered the LED indicator will light red.

## USB Charging

Station W features two USB charging ports located on the front of the device. The USB port on the left indicated provides 1A of power to charge phones and other devices. The USB Type-C port on the right provides 2.4A of power to charge phones and other devices.

## SAFETY PRECAUTIONS

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or ground-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has

been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

13. **SURGE PROTECTORS:** It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.
  - a. Do not expose this unit or the AC/DC adaptor to dripping or splashing water. Keep liquid-filled objects, such as vases, away from this unit and AC/DC adaptor.
  - b. To ensure that this unit is completely disconnected, unplug it from the wall.
  - c. Ensure that the AC/DC adaptor is easily accessible.
  - d. Please note the information printed underneath the unit.
  - e. Do not impede the ventilation of this unit by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
  - f. Keep open flames, such as lighted candles, away from this unit.
  - g. Do not place this unit in closed bookcases, racks, or other spaces without proper ventilation.

## FCC STATEMENTS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Compliance information: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limit set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

### Supplier's Declaration of Conformity

Product Name: Station W

Model number: NSW2

Responsible party:

Nonstop, Inc.

10624 S. Eastern Ave, Suite A-979

Henderson, NV 89052

+1 775-398-3038

connect@nonstopproducts.com





**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).  
NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

---



**DANGEROUS VOLTAGE:** The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

---



**ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

---

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

---

**ATTENTION: POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISES ET POUSSER JUSQU'AU FOND.**

---

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

***NONSTOP***<sup>TM</sup>

Nonstop Inc. All Rights Reserved.