 
 


CROSLEY

CT201A-BK CASSETTE PLAYER

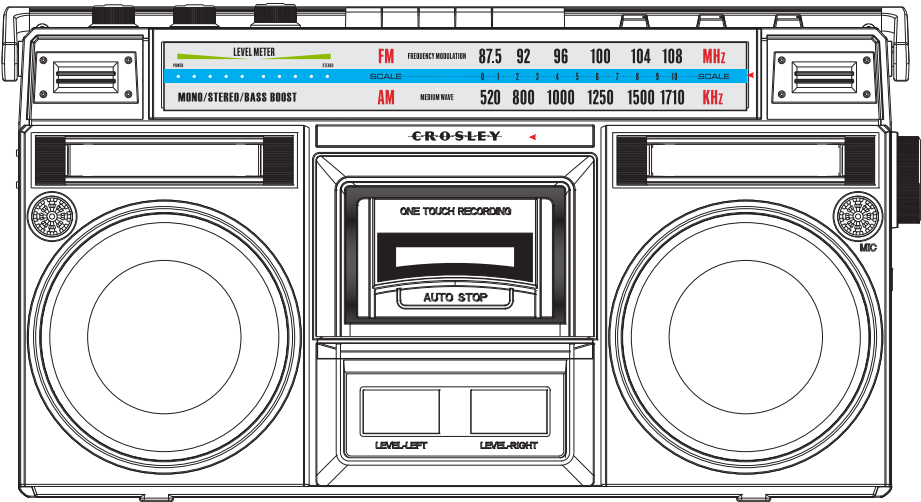



Quickstart Guide (English)

Introduction

Thank you for purchasing the CT201A-BK. At Crosley, your entertainment is as important to us as it is to you. That's why we design our products with one thing in mind- to make your life more fun and more convenient.

Box Contents

CASSETTE PLAYER

Power Cable

Manual

Warranty Card

 
Support

For the latest information about this product (documentation, technical specifications, system requirements, compatibility information,etc.) and product registration, visit www.crosleyradio.com

For additional product support, please call 1.866.276.7539


Setup

Items not listed under *Introduction > Box Contents* are sold separately.

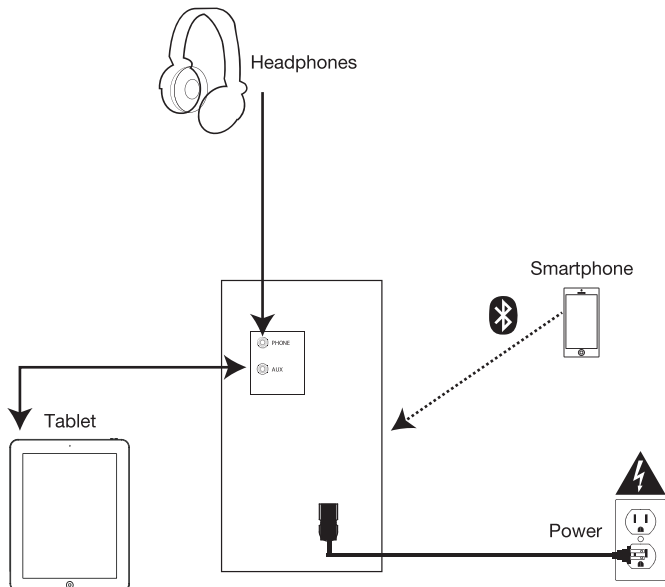

Features

 Front Panel

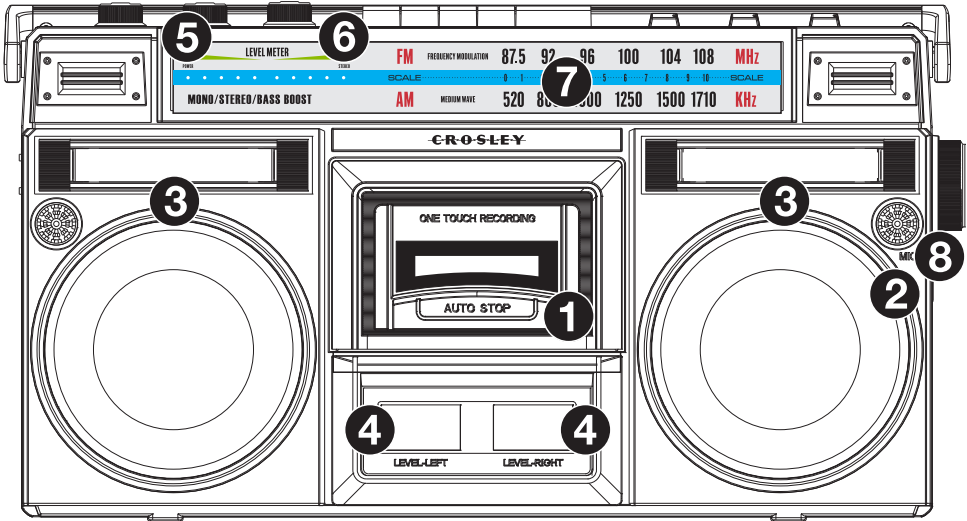


1. **Cassette Holder:** Press the **Stop/Eject** button to open the cassette deck and insert a tape here.
2. **Internal Mic:** Use this microphone to record external audio sources such as speech, live music, nature sounds, beatboxing, etc. to USB, SD, and cassette.
3. **Speakers:** Listen to your audio source here.

Note: When headphones are connected to the **Headphone Output**, the internal speakers will be muted.

4. **Level Display:** View the audio playback level for the left and right channels.
5. **Power LED:** The LED will illuminate red when the unit is powered on.
6. **Stereo LED:** The LED will illuminate green when a stereo FM station is selected.
7. **Radio Channel Display:** View the selected radio station here.
8. **Tuning Dial:** Adjust this dial to tune in to a radio station.

 
Top Panel

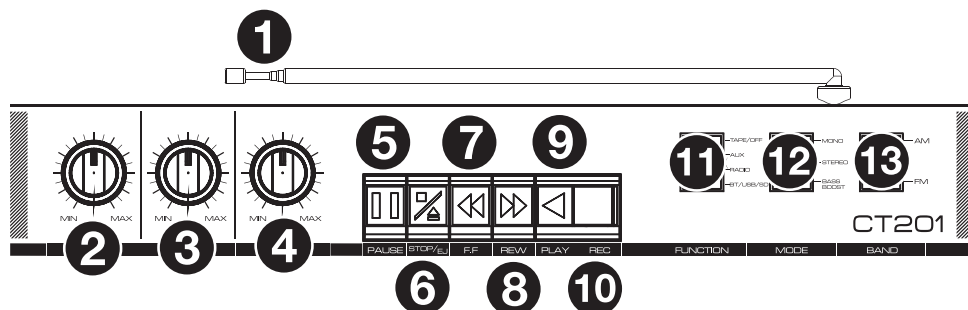



1. **Antenna:** Adjust the antenna to get the best radio station reception.
2. **Volume:** Adjust this to control the overall playback volume.
3. **Bass:** Adjust this to control the low frequencies for the audio playback.
4. **Treble:** Adjust this to control the high frequencies for the audio playback.
5. **Pause:** In Tape mode, press this button to pause the tape playback.
6. **Stop/Eject:** In Tape mode, press this button to stop or eject a tape.
7. **Fast Forward:** In Tape mode, press this button to fast forward the tape.
Note: The cassette mechanism will not auto-stop when fast forwarding. Press the **Stop** button after fast forwarding is completed.
8. **Rewind:** In Tape mode, press this button to rewind the tape.
Note: The cassette mechanism will not auto-stop when rewinding. Press the **Stop** button after rewinding is completed.
9. **Play:** In Tape mode, press this button to play the tape.
Note: There will be a delay in playback for a few seconds after the **Play** button is pressed.
10. **Record:** In Tape mode, press the **Record** button to record to a tape.
11. **Function:** Adjust this switch to select your sound source as **Tape/Off**, **Aux**, **Radio**, or **BT (Bluetooth)/USB/SD**.
12. **Mode:** Adjust this switch to change the mode from **Mono**, **Stereo**, or **Bass Boost**.
13. **Band:** Adjust this switch to select AM or FM radio.

Rear Panel

 1. **Battery Compartment:** Insert 6 new “D” size alkaline batteries (not included) to power the unit when not using AC power.
2. **Power Switch:** Adjust this switch to power Street Rocker on or off.

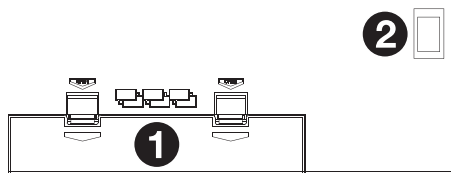

Side Panels

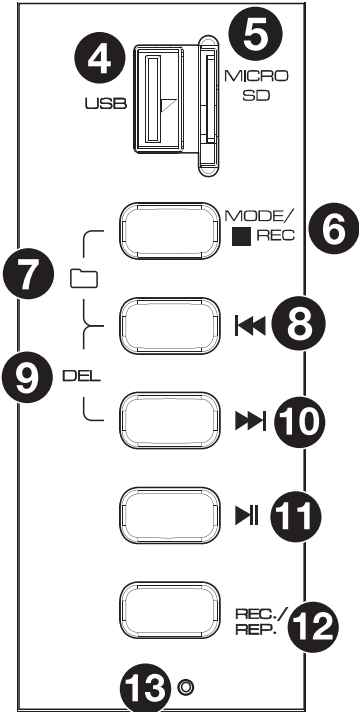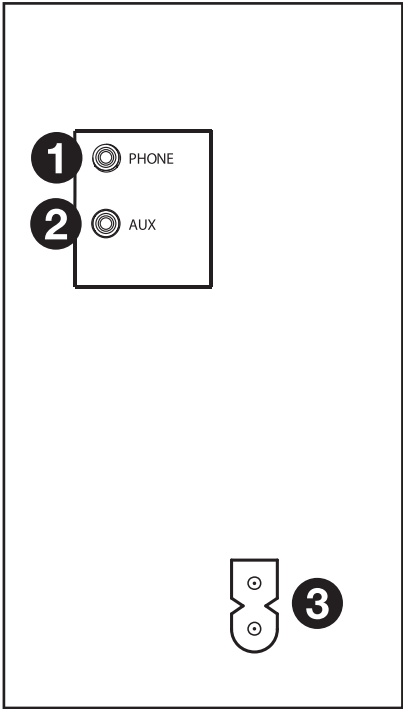  


1. **Headphone Output:** Connect your headphones to this 1/8" (3.5 mm) output. When using headphones, the internal speakers will be muted.
Note: When headphones are connected to the **Headphone Output**, the internal speakers will be muted.
2. **Aux Input:** Connect your smartphone, MP3 player, or similar device here using an 1/8" (3.5 mm) cable (not included).
3. **2-Prong IEC Power Input:** Connect the included power cable here.
4. **USB Port:** Connect your USB flash drive here to play music or record the audio from Bluetooth, tape, radio, internal mic, or the aux input.
5. **Micro SD Card Slot:** Insert your micro SD card here to play music or record audio from Bluetooth, tape, radio, internal mic, or the aux input.
6. **Mode/Stop Rec:** Press and release this button to switch between Bluetooth, USB, or micro SD card source playing modes. When recording, press and release this button to stop recording.
7. **Switch Folders:** Press the **Mode/Stop Rec** and **Previous Track** buttons simultaneously to switch between the recorded tracks folder and other music folders on a USB flash drive or micro SD card.

8. **Previous Track:** Press this button to go to the beginning of the current playing track. During playback, double press this button to go to the previous track. Press and hold this button to rewind the track during playback.
9. **Delete Track:** Press and hold both the **Previous Track** and **Next Track** buttons to delete the currently playing track.
10. **Next Track:** Press this button to go to the next track. Press and hold this button to fast forward the track during playback.
11. **Play/Pause:** Press this button to play/pause a USB or micro SD card track. Press and hold this button to disconnect from a paired Bluetooth device.
12. **Rec./Rep.:** Press and hold the **Rec./Rep.** button to record the audio source (Bluetooth, radio, tape, or mic) to the USB flash drive or micro SD card. Press **Mode/Stop Rec** to stop the recording and the recorded content will be transferred to the USB flash drive or micro SD card. When playing tracks from the USB flash drive or micro SD card, press and release this button to switch between sequential playback, repeat a single track, and repeat all tracks.
13. **Media Status:** The LED will slowly flash blue when the USB flash drive, micro SD card, or Bluetooth source is playing back. When in Bluetooth pairing mode, the LED will quickly flash blue. When a Bluetooth device is paired, the LED will be lit solid blue. When recording to the USB flash drive or micro SD card, the LED will slowly flash red. When playing back tracks that were recorded to the USB flash drive or micro SD card, the LED will flash purple. When recorded audio is paused, the LED will be lit solid purple.

Operation

Recording to Tape

 Note: Most cassettes feature a protective plastic strip which, when removed, will not allow any recording to be made to the cassette. When the plastic strip has been removed, the Cassette Player's **Record** button will not function when attempting to record to the cassette. To record to a cassette which no longer has a plastic strip, use adhesive tape to cover the strip opening.

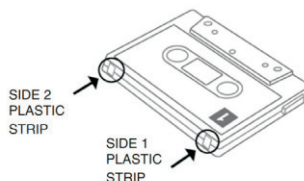

Recording from the Internal Microphone to Tape:

1. Press **Stop/Eject** to open the cassette holder.
2. Insert a blank tape and close the cassette holder.
3. Set the **Function** switch to **Tape**.
4. Press the **Record** button to start recording.
5. To stop recording, press **Stop/Eject** button.

Recording from the Aux Input to Tape:

1. Connect your smartphone, MP3 player, or similar device to the **Aux Input** using an 1/8" (3.5 mm) cable (not included).
2. Set the **Function** switch to **Aux**.
3. Connect your external audio device and start its playback. Adjust the output volume on your source device.
4. Play your source and check the levels on the **Level Display**.
5. To begin recording, press the **Record** button and the **Play** button simultaneously.
6. To stop recording, press **Stop/Eject** button.

Recording from the Radio to Tape:

1. Press **Stop/Eject** to open the cassette holder.
2. Insert a blank tape and close the cassette holder.
3. Set the **Function** switch to **Radio**.
4. Set the **Band** switch to the desired frequency band (AM or FM).
5. Adjust the **Tune** dial to select a radio station.
6. Extend and adjust the antenna for best reception.
7. Press the **Record** button to start recording.
8. To stop recording, press **Stop/Eject** button.

Recording Bluetooth to Tape:

1. Press **Stop/Eject** to open the cassette holder.
2. Insert a blank tape and close the cassette holder.
3. Set the **Function** switch to **Bluetooth/USB/SD**.
4. Pair your Bluetooth device to the unit and begin playing music. See the section [*Pairing a Bluetooth Device*](#) for setup details.
5. Press the **Record** button to start recording.
6. To stop recording, press the **Stop/Eject** button.

Recording from a USB Flash Drive or Micro SD Card to Tape:

1. Press **Stop/Eject** to open the cassette holder.
2. Insert a blank tape and close the cassette holder.
3. Insert a USB Flash Drive or micro SD card into the unit.
4. Set the **Function** switch to **Bluetooth/USB/SD**.
5. Press the side panel **Play** button to begin playback.
6. Press the **Record** button to start recording.
7. To stop recording, press the **Stop/Eject** button.