

user manual

Model name:I534

Brand name:DaNo

FCC ID:2ADWD-I534

I534 Manual Book

Statement

Our company reserves the right not to notice any of the products described in this document to make changes and improvements in power.

In any case, my company be liable for any loss of data or income or any special, incidental, consequential or indirect damages liable, regardless of whether the damage caused by any reason.

Users of mobile phones and mobile phone operator interface description might be some discrepancy, depending on your phone's software version or specific operator services.

While maintaining the rights of the company constantly updated product content, and all contents, please prevail in kind.

All rights reserved. All rights reserved.

Table of Contents

A basic knowledge of 3

2 phone looks and keys 5

2.1 Right softkey 5

2.2 left softkey 6

2.3 off key 6

2.4 arrow keys 6

2.5 numbers, symbols, letter keys 6

2.6 dial keys 6

2.7 SOS button 6 small screen

2.8 small-screen answer key 6

2.9 Small Screen MP3 key 7

2.10 small screen hang up key 7

3 Information symbol 7

3.1 Display 7

4 Operating Instructions 7

4.1 How to install the SIM card 7

4.2 How to remove the SIM card 7

4.3 How to install the battery 8

4.4 How to remove the battery 8

4.5 How to charge the battery 9

4.6 How to turn on / off the phone Power 9

4.7 How to install a memory card 9

5 make and receive phone 9

5.1 call 10

Emergency calls 10 5.2

5.3 International calls 10

5.4 Answering calls 10

5.5 Adjusting the volume 11

5.6 Call options 11

Handsfree 5.7 11

- 5.8 11 missed calls
- 6 Information 11
 - 6.1 write information 12
 - 12 6.2 Inbox
 - 6.3 Outbox 13
 - 6.4 13 common phrases
 - 6.5 SMS settings 13
- 7 phone book 14
 - 14 7.1 Quick Search
 - 7.2 Find a contact 15
 - 7.3 Add number 15
 - 7.4 Copy all 15
 - 7.5 Delete 15
 - 7.6 Other Number 15
 - 7.7 Set 15
- 8 Call Center 15
 - 8.1 SIM card 1 Call 16
 - 8.2 SIM card 2 call records 17
 - 8.3 Call 17
- 9 Set 21
 - 9.1 Mode setting 21
 - 9.2 Profiles 21
 - 9.3 Phone settings 22
 - 9.4 Network Settings 23
 - 9.5 Security Settings 23
 - 9.6 restore factory settings 24
- 10 Media 25
 - 10.1 Camera 25
 - 10.2 25 albums
 - 10.3 26 video
 - 10.4 Video Player 26
 - 10.5 Recording 26
 - Music Player 26 10.6
 - 10.7 Radio 27
 - 10.8 File Management 27
- 11 28 Toolbox
 - 11.1 Calculator 28
 - 11.2 magnifier 28
 - 11.3 28 Fun and games
 - 11.4 SOS setting 28
 - 28 11.5 Calendar
 - 29 11.6 Alarm
 - 11.7 family number 29
- 12 input 29

12.1 input keys	30
Pinyin input method	12.2 30
12.3 stroke input method	30
English input method	12.4 31
13 USB connection	31
14 security code	32
14.1 PIN code	32
14.2PUK code	32
14.3PIN2 code	32
14.4PUK2 code	32
15 Maintenance and troubleshooting	32
15.1 Maintenance	32
15.2 Battery Maintenance	33
15.3 Help	33
16 The term	34

A basic knowledge

1.1 Safety Warnings and Precautions

Please read carefully before using the phone these precautions to ensure safe and proper use of the phone.

1.2 General Considerations

Cell phone

Please use the phone at a temperature of -10 °C ~ 55 °C and 35% to 85% humidity.

Please use the phone as far away from the ordinary telephone, television, radio and office automation equipment areas, so the impact of these devices and mobile phones use of effects.

SIM card can be removed, please note that prevent children from swallowing small parts such.

Battery

Keep the battery away from direct sunlight, in a cool ventilated place.

phone battery life is limited. Battery charging time in frequent gradually shortened. Invalid when repeatedly charged, the battery is dead, it should be replaced with new batteries of the specified type.

Do not throw old batteries in the general household waste. There are clearly defined in the processing of used batteries in accordance with the instructions of local please do.

Charger

Do not charge in the following places: in direct sunlight; the outside temperature is below -10 °C or above 45 °C place; damp, dusty place or vibration place (may cause malfunction); televisions, radios and other appliances nearby (will affect the image, sound effects).

1.3 Notes on the use of mobile phones

On the plane, hospitals and other places use is prohibited, turn off the phone. The phone will affect the normal operation of electronic equipment and medical equipment, the use of mobile phones in these places, please follow the relevant provisions of the workplace. Your phone has the automatic power and alarm functions, please see the phone's settings to confirm that the aircraft will not automatically during boot. At any time an airplane must be shut down in order to avoid

interference from mobile phones electronic system, resulting in an airplane accident.

Do weak signal in the vicinity of high-precision electronic devices or use the phone. Radio wave interference may cause malfunction of electronic equipment and other problems. In particular, need special attention in the vicinity of the following equipment: hearing aids, pacemakers and other medical electronic equipment, fire detectors, automatic doors and other automatic control devices. Impact of mobile phones on pacemakers and other medical electronic equipment, please contact the device manufacturer or your local distributor. Mobile phones may interfere with TV, radio, or PC and other electrical equipment

Do not force the LCD screen or use it to beat the other things that could cause leakage of damaged LCD panels and LCD liquid. LCD liquid into the danger will be blind eye, then immediately rinse eyes with water (do not rub your eyes) and to the hospital.

Do not disassemble or modify the phone, otherwise it will cause damage to the phone, leakage and circuit failure.

In rare cases, some models of mobile phones in the car when using electronic equipment inside the car might have an adverse effect. Then please do not use the phone in order to avoid the loss of security.

Do not use needles, and other sharp things written buttons, otherwise it will damage the phone or a miss.

If the antenna is damaged, do not use the phone, it may cause data loss or damage.

In when refueling shutdown, at the gas station, do not use the phone when nearby chemical plant, or explosive job, and do not remove the battery, because the phone will affect the technical installation.

Avoid phone moisture, water or other liquids to enter the phone will cause the phone overheating, leakage and failure.

1.4 Battery Safety Instructions

Battery Precautions

Do not throw batteries into the fire, otherwise it will cause fire and burst. Properly dispose of waste batteries according to local circumstances.

When installing batteries, do not force the pressure, otherwise it will cause battery leakage, overheating, explosion and fire.

Do not use wires, needles and other metal objects to short circuit the battery, do not place the battery with metal objects such as necklaces together, otherwise it will lead to battery leakage, overheating, explosion and fire. Not exceed the specified voltage power supply system, and use the specified external device.

Do not solder the battery terminals, otherwise it will cause leakage, overheating, explosion and fire.

If the battery fluid gets into your eyes, there is a risk of blindness, then please do not rub your eyes, use a water rinse, and then immediately to the hospital.

ensure safety, do not use the battery into the mouth or damaged batteries.

Do not disassemble or modify the battery, otherwise it will lead to battery leakage, overheating, explosion and fire.

Do not use in or near the fire place or place heaters and other high temperature battery, otherwise it will lead to battery leakage, overheating, explosion and fire.

If the battery is in use, charging or save in the process of heating up, discoloration, distortion

and other anomalies, please stop using it and replace with new batteries.

If the battery liquid touch skin, on clothing, which may cause skin burns, should immediately rinse with water, seek medical attention immediately if necessary.

If the battery leaks fluid or a strange odor, immediately take it from beside the open fire to avoid fire and burst.

Do not expose the battery to moisture, which will cause the battery to overheat, smoke and corrosion.

Do not use or leave the battery in direct sunlight or high temperatures near where the car, otherwise it will result in fluid leakage and overheating, may degrade performance and shorten life. Use only approved accessories and batteries, Do not connect incompatible products.

Do not charge for more than 24 hours. In any case, you can not open the phone or battery, and make changes to these devices is strictly prohibited.

Battery performance

make a call, turn the backlight, using the game features will consume more power, with longer talk time and standby time will be shortened.

no service area of standby time than the standard standby time is short.

battery performance as the charging state, high and low temperature, as well as the status of the local network signal backlight varies.

1.5 Waste Battery Disposal

Waste batteries in household waste is negligible, but its harm is very large, the battery contains mercury, cadmium, lead and heavy metals, harmful to human health. If the used batteries together mixed with garbage landfill, over time, leaking heavy metals may contaminate groundwater and soil. So be reasonable to dispose of used mobile phone batteries.

Can not be landfilled. Because of heavy metals in waste batteries, water and soil pollution by osmosis.

Not burned. Because the use of a steam incineration formed, and may generate a harmful gas catalytic, causing atmospheric pollution.

Non-compostable. May lead to excessive levels of heavy metal compound.

Not free to discard used batteries to avoid environmental contamination.

Try to separate from used batteries out of garbage to reduce pollution of the environment.

1.6 Charge Notes

You can use the charger for the phone battery quickly. Please confirm before charging the battery has been properly installed on the phone, charging Do not remove or move the cell phone battery. Please use the AC charger provided. Other voltage can cause leakage, fire and damage to the phone and charger.

The first charge for at least 12 hours, in order to achieve the best results.

When charging is completed, if the charger is still plugged in the phone, the phone will automatically check the battery status, if it detects the battery is still lower than the full state is automatically recharged.

Please phone is charging the reach of small children.

Do not short the charger may cause electric shock, smoke and damage to the charger.

Do not use the charger power cord damaged, otherwise it will cause fire and electric shock.

Please clean the accumulated dust in the power outlet.

Please do not put water containers, etc. on the side charger, so as not to cause water to spill

charger overheating, leakage and failure.

If the charger come into contact with water or other liquids, should immediately unplug the power from the outlet to prevent overheating, fire, electric shock and charger failure.

Do not disassemble or modify the charger, otherwise it will lead to personal injury, electric shock, fire and damage to the charger.

Please do not place high humidity in the bathroom using the charger, otherwise it will cause electric shock, fire and damage to the charger.

Do not touch the charger, wire and power socket with wet hands, otherwise it will cause electric shock.

Do not place heavy objects on the power cord or refit wire, otherwise it will cause electric shock and fire.

Disconnect the power plug from the socket before cleaning and maintenance.

To seize the time to pull the plug charger, pull the power cord can damage the cord, causing electric shock and fire.

1.7 Cleaning and Maintenance

Phone, battery and charger is not waterproof, do not place the use of high humidity in the bathroom, also have to avoid the rain.

With a soft, dry cloth to clean the phone, battery and charger.

Do not wipe the mobile phone and other alcohol, thinner or benzene.

dirt socket can cause poor contact, power-down, so that can not be recharged, periodically clean. As described in this manual does not match with your phone, please phone prevail. Manufacturers have right of final interpretation of this manual.

2 phone looks and key

This phone is a flip phone.

Phone openings, can achieve the overall operating functions:

2.1 The right soft key

phone right soft key to enter the phone book and return key functions

pre-dial interface, enter the phone number or the phone book, text messages and other editing mode, press the return key, to remove the characters entered.

after entering the multi-level operation menu, press the Back button to return to the previous menu.

2.2 left softkey

left soft key for OK key, and implementation choices and determine the function

2.3 off key

press and hold the key to achieve the phone on / off.

2.4 arrow keys

[] [] two directions.

the key: Specifies the function keys

down key: Alarm

2.5 numbers, symbols, letter keys

A total of 12 letters keyboard keys: the key to achieve the corresponding letter on the screen
key numbers, symbols, complex functions;

When dialing, press the appropriate key to display the corresponding figures;

in Pinyin input state, strokes, and other digital English, according to the input method status

display different characters, such as: letters, symbols or numbers

2.6 dial key

lid state to check phone records and receive functions

2.7 Small Screen SOS button

Under standby long press, call SOS call.

2.8 small-screen answer key

Under the circumstances Caller Press to answer the call.

2.9 Small Screen MP3 key

Under long standby MP3 Press to perform the function. Press once again, to play

2.10 small screen hang up the keys

Under the circumstances Caller Press to hang up the phone.

3 information symbols

3.1 Display

Under the closed condition of small screen can display: time, there can be displayed when the phone to enter the phone number (if stored in the phone book in the name of the show), the new message icon, the alarm icon can be displayed when playing MP3 song name, etc.

Lid main display includes three parts:

top of a behavioral state icon indicates the received signal strength and battery power remaining and other states.

middle part of the text, including the date, time, menu icons

the next act "menu" "phonebook" icon is displayed, either as a locked screen prompt display.

4 Operating Instructions

4.1 How to install the SIM card

When these steps, make sure the phone is turned off, in the absence of charge.

remove the battery.

the SIM card into the SIM card holder fixed to ensure that the card has been aligned with the missing corner chipping decks

Replace the battery.

4.2 How to remove the SIM card

When these steps, first turn off the phone power.

remove the battery.

The SIM card is removed from the SIM card slot.

Replace the battery.

4.3 How to install the battery

1. Place the battery in the back of the phone with the label facing up, connector alignment with each other.

2. Place the battery cover, align each card bit stuck.

4.4 How to remove the battery

1. Press the key off, off.

2. Place the cell phone battery cover is open, remove the battery from the battery at the bottom.

4.5 How to charge the battery

The end of the charger into a household power outlet, and the other end into the phone charging jack. (Note that the direction should be consistent with the jack plug)

charging when the battery level indicator on the screen starts scrolling until the battery is fully charged so far.

after charging is completed, unplug it and remove the charger from the wall outlet.

Note:

1. In the boot state, after charging is completed, there will be a stationary battery symbol on the screen.
2. If the battery is completely charged, the charge after a certain time required to display text only display (depending on the degree of the battery is exhausted)
3. When charging is completed, if the charger is still plugged in the phone, the phone will automatically check the battery status, if it detects the battery is still lower than the full state is automatically recharged.
4. If the phone is running low, it will automatically shut down.
5. No device battery, do not charge.
6. not dispose of batteries in a fire, nor the battery for extreme high places.
7. Do not disassemble or modify the battery.
8. Place the battery can not place a strong mechanical shock, can not hit with a hard object through the battery.
9. If you find that the battery has any cracks, deformation, or other types of damage, or electrolyte leakage was found, should immediately stop using the battery.
10. If the leaked electrolyte gets on your skin or clothing, wash immediately with soap and water clean; if accidentally splashed into the eyes of electrolyte, the application rinse thoroughly with water and immediately contact with the hospital treatment.
11. Do not use the battery at low temperature situation, unable to get the maximum standby / talk time at low temperatures.
12. Dispose of used batteries according to the law, such as: Do not use the battery when the battery recycling general waste discarded.

4.6 How to turn on / off the phone Power

Determine the battery has been installed, and the battery has power.

open the phone, press and hold button about 3 seconds until you hear a sound until the power-on signal. When turned on, the phone will automatically search system.

turn off the phone, press and hold button about 3 seconds until you hear a tone until the power is turned off.

4.7 How to install a memory card

You can install a memory card of the phone, please check carefully before installation, must be consistent with the native TF card.

phone off, the memory card into fixed storage deck, sliding down the metal plate to secure it. Make sure the card's gold contacts facing down, and chipping card deck has been aligned with the missing corner of

5 call and receive calls

5.1 calls

To make a call, you can use the numeric keypad keys to directly enter the number, or the middle of the bottom of the touch screen "button" icon to enter the virtual keyboard, tap the keyboard enter the area code and phone number.

1. If the input number is incorrect, touch screen press the "Clear" to delete a number entered last; if clear all input numbers, press the "Back" until the full number is deleted. Or use the right soft key to clear the input numbers.

2. Enter the correct number, then press the dial key to dial. If the card holder has this number, the number of users will be displayed.

By the card holder to store the number quickly call

1. Enter the card holder to find, enter the first letter of the name, search for a name (phone number) pre-dialed.

2. Press the "Options" selection call, dial the phone.

3. Press the left soft key for options and determine the function in the phonebook menu, press the left soft key to dial the phone function buttons below.

4. Speed Dial list in the call log

1. Go to the "Call Log." Select a SIM card or SIM card phone records 2 call records.

Missed Calls: shows recently answered calls.

Dialed: Show recently dialed calls.

Received calls: Shows recently received calls.

2. Select the pre-dial a name or phone number.

3. Press the "Options" selection call, outgoing calls.

5.2 Emergency calls

Only within the scope of the GSM system, you can make an emergency call.

Enter the emergency phone number. Such as: 112.

then dial keys (optional SIM card 1 or SIM card 2 dial) to dial.

Remarks:

With any of a mobile phone, since the transmission of the network coverage reasons or wireless signal, does not necessarily support the mobile phone with the characteristics, some networks do not even support the 112 emergency call service. Thus, for particularly critical communications (eg medical emergencies), should not be entirely dependent on the mobile phone. Check with your local network operator and check.

5.3 international calls

repeatedly press the * key until a "+" symbol to dial international numbers. "+" Represents the international dialing code.

enter the country code, area code and telephone number.

then dial keys (optional SIM card 1 or SIM card 2 dial) to dial.

Remarks:

Some networks international dialing code is not "+" sign.

5.4 incoming call

When a call comes in, the screen displays the "answer", "mute" menu

1. Press the left soft key is turned on incoming calls, select the "Transfer" you can divert calls (requires operators to support).

2. Press the right soft key to "mute", shielding ringtones.

Remarks:

To answer a call, you can not turn on call forwarding, call barring can not start the ban calls.

5.5 Adjusting the volume

In the call, you can press the navigation keys to adjust the volume up and down.

5.6 Call Options

Click on the screen during a call in the "Options" and press the left soft key to access the call option has the following menu:

Retain single call, ending single call, new calls, call recording, phone book, information, mute / restore, dual tone multi-frequency.

Reserved single call: Pause the current call.

End single call: End the current call.

New call: If your network supports call hold feature, you can start making a call while another call: Press "Options" and select "New call", enter the phone number you want to dial, press the dial key to dial the second phone. The first call (call) is automatically maintained.

Phone book: You can view the phone book in the numbers.

Mute / resume: You can mute / restore muted.

DTMF: You can turn on or off the dual-tone multi-frequency function.

5.7 Handsfree

Call, would like speakerphone, press the right soft key for hands-free function, then click to "normal" conversation, that the handset.

5.8 Missed calls

For some reason failed to answer phone messages will be displayed on the screen to remind the missed calls. For the unanswered calls to enter the function menu to view details about the recording of the telephone, or press the "Options" selection call, outgoing calls.

6 Information

This function is used to provide a text message service, in order to receive or send text messages. When the short message status icon appears on the screen, it indicates that you receive a new text message.

If the inbox is full, you will not receive a new message. Continue to receive a new message, please delete the full post short messages.

6.1 Write message

This function is used to edit the new text message (see the input method described later).

editing information, you can switch the input method. In the editing process, if a mistake, you can press the "Clear" delete operation.

Press the Options menu to enter a new short message when editing the following menu: complete election SIM card 1 (2), inserted into the template, insert phone number into the phone book name, input methods including:

(1) completion of the election SIM card 1 (2): After entering this option, select Send, Save and send, save, multi-send, to send different ways.

(2) insert a template: You can choose a different template text to a text message.

(3) a telephone number: phone book can browse the store and choose to insert after the selected number in the message, press OK

(4) Insert the name of the phone book: You can browse the phone book stored selection to insert the selected number in the message, press OK.

(5) Input Method: You can choose a different input method

6.2 Inbox

Inbox can read SIM card 1 / SIM card 2 SMS messages received and its reply, forward, delete, delete all, save it to the phone book and other treatment.

Inbox.

press OK, the screen displays the order by receiving a short message.

Arrow keys to select the message you want to read, or under the direction of the press . Press OK to read the text message, press Options for SMS reply, delete, edit, forward, delete all, use numbers and other operations.

when reading text messages, if the content can not be displayed in one screen, press the down arrow key to read the content.

(1) Reply

People This function is used to send a short message reply.

(2) Delete

This function is used to delete the selected text message.

(3) Edit

This function is used to receive a short message can be edited.

Press OK to enter the function. Screen displays a short message editing interface. After editing is completed into the options menu, the operator with the "write information operations."

(4) Forwarding

This function is used to receive text messages forwarded to others.

Press OK to enter the function. Screen displays a short message editing interface. After editing is completed into the options menu, forwarding operation with the "write information operations."

(5) Remove all

This function is used to delete all inbox every SMS, operating with the "delete."

(6) the use of numbers

This feature may be the presence of short message telephone number, USSD extracted.

6.3 Outbox

This function sends a text message is not successfully stored or saved after editing a "send, edit, delete, delete all, use numbers," and so on.

enter "SIM card 1 Outbox" or "SIM card 2 outbox";

Press OK to enter the function, the screen displays a short message is stored;

Press OK to read the details of the selected short message;

Press the "Options" function key can be selected SMS: send, edit, delete, delete all, use numbers and other operations.

6.4 Common Phrases

Phone built-in 10 commonly used phrases, users can edit or delete

6.5 SMS settings

This function is used for various parameters of the short message can be set.

1. Mode Settings

can be set up "model name."

a. short message center number

This function is used to store the message center number (ask your network operator).

After only a short message center number is set to send a short message.

b. a short message is valid

Short information may for some reason can not be issued by temporarily short message center (if not the boot), this function is used to set the short message center to save time these short messages until more than save time so far.

press the arrow keys to enter the function. The following screen will appear to save time:

1. one hour
2. six hours
3. twelve hours
4. one day
5. three days
6. one week
7. maximum

Press the left or right to select save time.

c. Send format

Press the arrow keys to select the entry, there are: text, fax, pager, e-mail and other formats to choose from.

2. Status Set

Set GSM news report and reply path.

3. Capacity inquiry

GSM Inbox Outbox and save the information is determined by the total capacity of the storage capacity of the phone / SIM card, press the function key will display the usage of mailbox space.

4. Storage Location

Set short message storage path, is stored on the phone or SIM card.

7 phone book

This feature allows you to browse the phone book, store, edit, and remove the phone and SIM card in the name and phone number. To facilitate the management of records, this phone is set up a group function, the relevant items in the same group. Storage capacity SIM cards depending on the card may be, the maximum storage capacity of this machine is 100.

7.1 Quick Search

Enter the search for a name, find the matching records in the phone book.

7.2 Find a contact

Standby left soft key to enter the main menu → select "Contacts", into the main interface → Find phonebook contacts, enter the name you want to find the number you have stored → find good numbers.

7.3 add numbers

Into the "Directory" menu → "Add number" → → select the storage location as required to enter the number corresponding to the names; the storage capacity of the SIM card according to the card you are using may be.

7.4 Copy all

Select "Copy All" → select copy the contents (SIM card to a phone, the phone to the SIM card 1, from SIM2 card to the phone, from the phone to the SIM card 2, from one SIM card to the SIM card 2, from 2 to SIM SIM card card 1), select the copy mode and press the OK function key → displays a "copy" and wait for the completion of exit.

7.5 Delete

Select "Delete all contacts" → select Delete content (1, 2, from the machine, one by one removed from the SIM card from the SIM card), select Delete function mode and press the OK button, and

then press delete.

7.6 Other numbers

To view or edit service numbers and emergency numbers.

7.7 Set

Capacity query: You can check the SIM card 1, SIM card 2 and phone book storage state.

Storage Location: Select the new default number stored in the SIM card 1, SIM card 2 card or mobile phone phonebook or all of them.

The reported number phonebook: Select to open or close the phonebook record reporting function.

8 Call Center

8.1 SIM card 1 call settings

8.1.1 Missed calls

This feature will automatically record a SIM card recently and refused to answer the unanswered phone numbers, and view the details (date, time, name or number) of these numbers.

select and enter the function, sequential display of missed phone number.

select a phone number or press the "Options", you can delete, save, call, send text messages, edit, add to blacklist and other operations.

8.1.2 dialed calls

This feature will automatically record the SIM card is a recently dialed phone numbers, and these numbers to delete, save, call, send text messages, edit, add to blacklist and other operations. Select the call may choose to allocate or two aside from the SIM card from the SIM card 1.

Operation with missed calls.

8.1.3 Received calls

This feature will automatically record the SIM card has recently received a telephone number, and these numbers delete, save, call, send text messages, edit, add to blacklist and other operations. Select the call may choose to allocate or two aside from the SIM card from the SIM card 1.

Operation with missed calls.

8.1.4 delete call records

This function is used to remove the SIM card is a missed, dialed, received, or all of the phone records.

select and enter the function, select the item you want to delete. Screen asks, "Delete", "yes" or "no."

Press "Yes" to confirm the deletion, returned after execution.

Select Delete all you can delete all call records a SIM card

8.1.5 Call duration

Last call: display a SIM card last call time.

Dialed Total: SIM card displays a total talk time for all dialed calls.

Received Calls Total: SIM card display a total for all answer the phone talk time.

Reset all: SIM card a call timer is cleared of all

8.1.6 Call Cost

Last call cost: check SIM card a recent call costs.

All calls cost: check SIM card 1 All call charges.

Call costs to zero: clear all call costs a SIM card information recovery zero state. (PIN2 code

required)

Fee limit: Enter your PIN2 SIM card can be set to determine a total cost of the call.

Price per unit: Enter your PIN2 SIM card can be set to determine a price and rate.

* This function needs network support.

8.1.7 SMS Calculator

You can view a SIM card has been received and the number of messages sent.

8.2SIM card 2 call records

Operating with a SIM card phone records

8.3 Call

8.3.1SIM card 1 call settings

This function is used to set the SIM card a call, answer the call of the way.

1. Call waiting:

SIM card 1 is used to set during a call to a beep to prompt new calls (network support). After starting this function, during a conversation, if a new call, the network will notify the appropriate phone sounds an alert tone, and displayed on the screen of new Caller ID, you can decide whether to answer the new call as needed. If you turn off this feature, when a new call, the phone does not beep sound, and the caller will hear a busy prompt (if open call forwarding function is automatically transferred to another phone).

Start up

This function is used to start the SIM card a call waiting.

select and enter the function. Implementation of the screen.

Shut down

This function is used to cancel the SIM card a call waiting.

select and enter the function. Implementation of the screen.

Inquiry

This function is used to display the status of the SIM card a call waiting settings.

select and enter the function. Call Settings screen displays the status waiting.

1. Call Forwarding

This feature on the SIM card all incoming calls to a designated phone number to another (need network support). When you can not answer or not answer the phone, turn on this feature.

1. Divert all voice calls

This function is used to set whether the SIM card all incoming calls to a designated number.

Start up

This function is used to start a SIM card "Divert all voice calls."

select and enter the function. Screen prompts to enter the forwarding number.

enter the forwarding number and confirm.

Shut down

This function is used to turn off the SIM card 1 "Divert all voice calls."

Inquiry

This function is used to display a SIM card "Divert all voice calls" setting status.

select and enter the function. Screen display returns after transfer settings.

2. Contact less transfer

When turned off, or not within the coverage area of the network, you can not transfer a call to a

SIM card is turned on.

Operating Ibid "Divert all voice calls."

3. No reply

This function is used to set a SIM card if no answer when the incoming calls to a designated phone.

Operating Ibid "Divert all voice calls."

4. Busy

When the SIM card in a mobile phone is busy call forwarding This function is used to set to the specified phone.

Operating Ibid "Divert all voice calls."

5. All data calls

This function is used to set the SIM card in the phone is busy data calls to a designated number.

Operating Ibid "Divert all voice calls." (Need network support)

6. Cancellation transfer

The SIM card is an all calls are canceled.

select and return to the screen after entering "all transfer function is turned off" post.

3. Call Barring

Phone SIM card a limit set in each case to answer or dial out. Must first subscribe to the network provider and obtain the network restriction password, you can set the limit. Each one call restrictions can be set to open, close, and queries. Call restrictions include:

Restrict outgoing

All calls: restrict all outgoing calls.

International calls: restrict international calls.

International free Domestic: When the phone is in roaming, only set aside the original network provider registered in any country telephone number.

Open

This function is used to start a SIM card limit outgoing calls.

select and enter this function, the screen prompts for a password is prohibited.

enter a password and confirm, the screen display returns after implementation.

Shut down

This function is used to turn off the SIM card a limit exhale.

select and enter this function, the screen prompts for a password is prohibited.

enter a password and confirm, the screen display returns after implementation.

Inquiry

This function is used to display a SIM card limit outgoing setting situation.

select and enter the function, the display returns after implementation.

Restrict incoming calls

SIM card includes a prohibition of all calls and roaming calls, but not receive any calls after opening the user will be subject to restrictions on the network provider.

Operation above "Outgoing."

Cancel all

This function is used to cancel all call barring a SIM card.

After selecting the entry, enter the password is prohibited.

Change password

This function is used to modify a restriction SIM card password.

select and enter this function, the screen prompts to enter the old password.

After Enter the new password and confirm it, the screen prompts for the new password again to confirm.

Remarks:

When you apply for the network function, you can obtain the password from the network operator.

3. Line Switching

This function is used to set a line selector switch SIM card. You can select the "Line 1" or "Line 2" (on the location of network support, we recommend that you select the "Line 1").

8.3.2SIM card 2 call settings

You can use this function to set the SIM card 2 call, answer the call of the way. Including phone number, call waiting, call forwarding, call barring, line switching settings.

Operating with a SIM card call settings.

8.3.3 call tips

This function can set the phone to prompt manner and time of the call.

Off: no call tips during a call.

Out: You can set 1-3000 seconds per call set-up time will be prompted to achieve this soon.

Cycle: You can set 30-60 seconds, each call to a set period of time you will be prompted.

8.3.4 Call time display

This function can set the phone during a call whether to display the time of the call, select On or Off.

8.3.5 Automatic redial

This feature can be turned on / off the automatic redial function, such as opening automatic redial, call, the other missed, it will automatically redial the phone number after the other.

8.3.6 blacklist

This function is used to turn on / off the blacklist.

If you turn on the blacklist, recorded in the blacklist are unable to dial phone numbers.

8.3.7IP dial

This function is used to set the edit SIM card 1 and SIM 2 IP dialing numbers.

9 Set

9.1 Mode Settings

9.1.1 SIM card 1 Open Open

Close SIM card 2, only open SIM card 1, SIM card 2 part of the menu will be hidden.

9.1.2SIM Card 2 Open

Close the SIM card 1, only open SIM card 2, SIM card is a part of the menu will be hidden.

9.2 Profiles

This function is used to select a different ring, SMS alert methods to suit different occasions. By pressing the up or down button to select this option, then press the OK function key to enter.

9.2.1 Standard Mode

The default setting of the standard model of mobile phone factory default mode for standard mode, the user can open it for personal settings, including:

(1) ringtone:

SIM card 1 / SIM card 2 call:

Press the up or down arrow keys to select a ringtone, the phone will play the corresponding ringtone.

determine the selection, you can set the ringtones.

Alarm: Alarm bell sounds, methods of operation with the "incoming call" ringtone.

Boot: boot playback sound, press OK to enter the function.

Press the up or down arrow keys to select a ringtone, the phone will play the corresponding ringtone. You can also set "mute."

Press OK to select.

Shutdown: Beep shutdown, the operating method with the "boot" ringtone.

SIM card 1 / SIM card 2 Information: refers to information sent tone when you receive a message, set the method above.

Key: refers to the sound of the keys, press the OK function key to access this feature.

Press the up or down arrow keys to select silent, click or tone, press the OK button to confirm the selection function. Press the right button after selecting the function returns.

(2) Volume: You can ring tone / keypad tone set.

(3) prompt type: Select the incoming call alert mode.

(4) calls the voice prompts: closed or open to telegraph number function.

(5) Bell Type: refers to the way the sound emitted when the bell.

(6) Other Beep: refers to whether or not to open "warning, error, network connection, the call is connected" sound.

(7) The answer mode: refers to when an incoming call, you can select "Headset Auto Answer" / "any key" to answer the call.

9.2.2 conference mode

Modify the default settings in conference mode as above: Standard Mode

9.2.3 Outdoor mode

Modify the default settings for outdoor mode as above: Standard Mode

9.2.4 Indoor mode

Modify the default settings for indoor mode as above: Standard Mode

9.3 Phone Settings

Select the unit is set according to its function keys, you can time and date, timer switch, the language, the preferred input method, the standby menu display, shortcuts, specify the function keys, and other functions can be set.

Time and Date: refers to the city can be on the phone, time, date and time display format can be set.

① time setting: on a bar can set the time, you can enter the date of the next column. You can also choose whether to open the daylight saving time.

② time format settings: time format to:;. "" 12 or 24 hour clock date formatting options are DMY day / month / date, date separator options, ":", "/" "-."

timer switch: There are four timer function, you can set the phone to automatically startup and shutdown time, to use the timer switch function, you must first open state. Then set the startup or shutdown options, and finally set the time.

Language: refers to the display and written language of choice.

preferred input method: refers to the text editor during the default input method.

Standby menu display: You can set the phone in standby mode wallpaper, Vice-screen wallpaper, switch machine animation, displays the date and time.

shortcuts: quick list of features can be added, edited, deleted.

designated function key: You can set the shortcut keys, and the default key for the specified function key, the next key to the alarm.

9.4 Network Settings

9.4.1 SIM card 1 network settings

(1) Network selection: You can set automatically or manually select the network (recommended to select automatic mode), select Automatic, the phone will give priority to be selected according to the network SIM card is located. When using the manual, you need to select the SIM card registered in the same network as the network operator to use.

(2) Preferences: select the network operator precedence, the default state of the display is the network SIM card currently in use is located.

(3) band selection: The default is automatic, you can manually select a different frequency bands.

9.4.2 SIM card 2 network settings

Operating with a SIM card network settings.

9.5 Security Settings

Security settings can refer to certain features of the phone encryption settings. Helps prevent your mobile phone and SIM card against unauthorized use. When asked to enter any password described below, type the correct password (the "*" is displayed) and press "OK" function key. Error If you enter, first press the "Clear" function key to delete the incorrect input, and then enter the correct number. In the security settings can change the PIN code, PIN2 code.

9.5.1 SIM card security settings

1, SIM card lock

Using this feature can be a mobile phone SIM card lock / unlock operations, need to enter the SIM card password (ie PIN) operation. Enter your PIN (Personal Identification Number) Set up SIM card lock or open, the default state, SIM card lock off.

When the SIM card is locked, will be asked to enter a password at boot SIM card, that PIN.

* PIN provided by the SIM card operator, pay attention even when the three entered incorrectly, it requires a PUK (Personal Unblocking Key), PUK code is used to unlock and change a blocked PIN code. If the PUK code is not provided or missing, please contact your network operator.

2, fixed dialing

If your SIM card has this feature, you can define the phone number dialed out.

If this function is activated, you can only call a SIM card limits exist in the list a phone number to dial. Set this feature requires the PIN2 code.

* After boot after losing a PIN2 code, PIN2 code before the shutdown is no longer needed. Therefore, if you do not want others to change the fixed dialing status, were set off in the future, then reboot.

3, prohibit dialing

If your SIM card has this feature, you can restrict outgoing calls out.

If you enable this feature, your SIM card can only call emergency numbers. Set this feature requires the PIN2 code.

4. Change Password

This feature allows you to change the SIM card PIN, PIN2.

Steps: Enter the old password to change the password → → → Enter the new password again to confirm the new weight lost password.

9.5.2 phone lock

Using this feature can be a mobile phone lock / unlock operations, need to enter the mobile phone password (ie phone password) operation.

When a mobile phone on the lock, it will require a password at boot Enter your mobile phone.

Mobile phone password is 4 to 8 digits, the default password is 1234.

9.5.3 Keyboard Lock

With this feature you can phone keypad lock / unlock operations. Setting key lock time: 5 seconds, 30 seconds, 1 minute, 5 minutes.

When the keyboard lock, unlock, press the corresponding prompt.

9.5.4 Change Password

This feature allows you to change the SIM card PIN, PIN2 and phone password.

Steps: Enter the old password to change the password → → → Enter the new password again to confirm the new weight lost password.

9.6 Restore Factory Settings

This function is used to set the phone back to the factory defaults. After selecting the "restore factory settings" option, and then press the OK button, the screen prompts "Enter Password" and press to enter the correct password and press the OK button. (This password is the phone password, the default is 1234)

10 Multimedia

10.1 Camera

Select "Multimedia" into the → "camera" in the main menu, then the display will ingest to choose the right picture of the dynamic picture → Press the "shoot" button to take pictures.

In preview mode, press the Options key to perform the following operations:

Album: enter the mobile phone making a good photo album view.

Camera settings: You can set "shutter sound" and other functions.

Photo Set: You can set the camera photo size and picture quality.

Storage Location: Select the storage location information of the path taken.

Restore Defaults: All of the above settings to their factory settings.

10.2 Album

View've taken a good photo.

After entering this option, if a photo, press the Options button to perform the following operations:

View: Zoom in to see the photo. Press the up and down arrow keys to browse through photos.

Forward: The photo can convey "wallpaper, switch machine animation, screen saver."

Rename: Change the name of the photo.

Delete: Delete this photo.

Delete all files: delete all photos in the album.

Sort by: photos accordance with the rules set in the album sort.

Storage Location: Select the storage location path album information.

10.3 video device

In the main menu, select "Multimedia" → Select "video" on entering → press the corresponding button to start the video recording, recorded after a good press the right function key to stop and save.

State into the options in the viewfinder, the following actions:

Video settings: You can make a number of settings, noted in the need to set up.

Effects settings: select various video special effects.

Restore Defaults: Restores all settings in this option to the initial state.

10.4 Video Player

After entering this option, animation files, if met, will display a list of them, press the down arrow key to select a movie file, you can do the following:

Play: play the file. Press the OK function key player, while playing press the corresponding function key to pause, stop, press the up and down arrow keys to rewind or fast forward, press * # key to change the volume of video playback, press the 0 key full-screen playback, after sowing Press the right function key to return.

Rename: Change the name of the photo.

Delete: Delete this file.

Delete all files: delete all animated video files.

Sort by: photos are sorted according to the rules set in the album.

10.5 Recording

Multimedia menu, press the function button → select "Record" to enter:

If there is audio files you can view after entering into an existing audio file. Press Options has the following functions:

Recording: You can record new audio file.

List: Displays all recorded phone files.

Play: Play the recorded sound good.

additional: Add a new record on the current audio file.

Rename: You can modify the file name of the current recording.

Delete: delete the current audio file.

Delete All: Delete all files in the folder.

: Set the recording storage location.

Forward: to transfer audio files to the current profile for the ringtone selection.

10.6 Music Player

(1) The music player interface shows the corresponding soft keys and keyboard operation of its functions, the key basic instructions:

(2) the key (number 2 key): to increase the volume

(3) down key (number 8 key): decrease the volume

(4) number 4 keys: a.

(5) number 6 key: under one.

(6) (2) music player has the following functions:

(7) Play: Play the current track.

- (8) Details: View detailed information on the current track.
- (9) Add to ringtone library: the current music added to the ringtone library for use.
- (10) updated playlist: refresh the playlist.
- (11) Setting: You can set the "preferred list (card / phone), automatically generated list, repeat (play tracks the way), random."
- (12) 10.7 Radio
- (13) Multimedia menu, press the function button → select "FM Radio" to enter:
- (14) Key Description:
 - (15) number 2 key: increase the volume
 - (16) number 8 key: to decrease the volume
 - (17) number 4 keys: Up to manually adjust the channel.
 - (18) number 6 key: Down to manually adjust the channel.
 - (19) number 5 key: Play or Stop.
- (20) When the radio is playing channel, press the "Options", has the following functions:
- (21) Channel list: You can view the new channel or channel search, select and enter the option to make a channel name, set the frequency. Channel is not set, the list appears blank.
- (22) Manually enter: You can manually enter the frequency to listen.
- (23) Auto Search: You can automatically search for and save channels to the channel list.
- (24) Setting: speaker phone can turn on / off, background playback on / off settings, etc.
- (25) 10.8 Document Management
- (26) This phone is designed with file management, similar to the computer model, available to users. You can use this function manage stored files if you use this phone for electronic mobile hard disk.
- (27) Press the function key to enter: mobile phones, memory cards.
- (28) After which the "phone" and "Memory Card" to enter you can view all the storage space and the remaining available space. Press Options and OK key to open: open the current mobile data library.
- (29) Format: The current storage path (phone / memory card) format.
- (30) After selecting the Open Library, press Options can do the following:
- (31) Open: Open the selected folder or file.
- (32) New Folder: can be self-built a new folder.
- (33) Renamed: file (folder) Rename.
- (34) Delete: Delete the current file (folder).
- (35) Sort by: choose by name, type, according to time, depending on the size or none.
- (36) When you select a file, can also be used to send, copy, move, sort, and many other operations.
- (37)
- (38) 11 Toolbox
- (39) 11.1 Calculator
- (40) You can add, subtract, multiply, and operations in addition to the (dial key, hang up key, the key, the next key key corresponding subtraction, multiplication and division)
- (41) 11.2 magnifier
- (42) Enter a magnifying glass, camera alignment to be amplified in kind, has a zoom function.
- (43) 11.3 Fun and games
- (44) Comes with a magic sushi game, only for recreational use.

(45) 11.4 SOS set

(46) Can be set to three emergency numbers, press the SOS button standby interface, automatically start dialing a number from the first, if the first number is missed, automatically dials the next number, and so on, until the other answer, and automatically send a distress SMS to emergency numbers set.

(47) 11.5 Calendar

(48) Mobile phone as a convenient, fast communication tool, now has the majority of users, and its practicality, efficiency and other features make the phone work has become an indispensable tool.

(49) This function is used to view the status of a certain date and lunar dates. Such as: You can view the August 15 is the day of the week and time of their lunar calendar.

(50) Press Up, Down, dial, hang up keys to move the viewing.

(51) Press Options can do the following:

(52) Calendar: View, add agenda.

(53) Jump to a specific date: You can jump directly enter the date you want to see.

(54) Lunar: open or close the calendar display.

(55)

(56) 11.6 Alarm

(57) This function is used to make the phone sounding the alarm tone at a specified time. If the specified time has come when the phone is turned off, this function can also send alarm sounds, and you are prompted to boot.

(58) Press the function key to enter the alarm clock function (can set up to three alarm).

(59) Press the up or down arrow keys to select the alarm, press the Edit button to enter the setting.

(60) 1. In the first row of the left and right arrow keys to move the alarm is "open" (press * or # key to select).

(61) 2. In the second line, enter the time you want the alarm.

(62) 3. Ring mode: press * or # key to select the ring pattern, once a day, custom (if selected as a custom ring mode, you need to set up each day of the week, according to needs to be set on or off the end. press Done, and save the settings.

(63) 4. Snooze time: press * or # key to set the Snooze time length.

(64) * Set button press vertically moving items, press *, # key to select content

(65)

(66) 11.7 family number

(67) You can set nine family number, speed dial is turned, the standby screen press the number keys 1-9 to dial the number that corresponds to the family.

(68) 12 Input Method

(69) 12.1 Input button

(70) numbers, symbols, letters keys: keyboard altogether 12 letter keys

(71) letter keys can be achieved on the screen corresponding to the key numbers, symbols, complex functions;

(72) Spacebar: Under state pinyin input, strokes, and other digital English, press 0 for the spacebar, which can press the 0 key can also press the virtual keyboard spacebar

(73) toggle keys: [#] key for input method switch

(74) 12.2 Pinyin Input Method

(75) 12.2.1 Pinyin input method introduced

(76) Pinyin input is alphabetically constitute Pinyin initials and finals, enter each letter from consonant to vowel sequence, such as phonetic spelling zhang process should be the order of input: z, h, a, n and g, then press the left and right arrow keys to move the cursor to the selected word, then press the OK function key word selection.

(77) 12.2.2 Clear entered text

(78) In spelling during the last letter press the clear key to delete the input and then delete all the letters to spell the state press the clear key to exit back to the idle state.

(79) 12.2.3 Legend mode

(80) When you select a word, the bottom of the screen will appear with this word related word association, in which case the input method to enter the association input mode. If you have the desired word, press the left and right arrow keys to move the cursor to the selected word and then press the function key word selection, without the required words, you can repeat the steps to re-enter within the predictive character input mode.

(81) 12.3 stroke input method

(82) 12.3.1 Basic concepts

(83) Enter the text can be used to sequentially, handwriting input.

(84) 12.3.2 stroke input rules

(85) Please enter characters by handwriting habits!

(86) An input of Chinese characters: the number keys corresponding to the five basic strokes 1,2,3,4,5 characters: one (horizontal, mention), Shu (vertical, vertical hook), Pie (apostrophe), Dian (point, flick), B (off).

(87) Second, select characters: upper and lower arrow keys to flip, left and right arrow keys to move the cursor keys to select the word OK ..

(88) 12.3.3 Clear entered text

(89) In stroke input, press the Clear key to delete the last entered sum, then press to remove all strokes clear key to exit back to the idle stroke input state.

(90) 12.3.4 Legend mode

(91) When you select a word, the bottom of the screen will appear with this word related word association, in which case the input method to enter the association input mode. If you have the desired word, press the left and right arrow keys to move the cursor to the selected word and then press the function key word selection, without the required words, you can repeat the steps to re-enter within the predictive character input mode.

(92) 12.4 English input method

(93) 12.4.1 Basic concepts

(94) Switch the input method to letters.

(95) Enter English word method is direct input.

(96) 12.4.2 Clear input word

(97) At spelling, press the clear key to delete the last letter entered. Exit spell the word state in the idle state the user can press the Clear key to delete the screen, one or more words, press the * key to open punctuation mode.

(98) 13 USB connection

(99) USB storage devices can be connected

- (100) The computer will appear after appropriate disk 1) Select a storage device, but can also be charging.
- (101) 2) the shutdown case of connecting USB storage devices can be charged and function
- (102) 14 security password
- (103) Security code protects your phone and SIM card from unauthorized use, as described in this presentation, useful to the phone settings.
- (104) the key (number 2 key): to increase the volume
- (105) down key (number 8 key): decrease the volume
- (106) number 4 keys: a.
- (107) number 6 key: under one.
- (108) (2) music player has the following functions:
- (109) Play: Play the current track.
- (110) Details: View detailed information on the current track.
- (111) Add to ringtone library: the current music added to the ringtone library for use.
- (112) updated playlist: refresh the playlist.
- (113) Setting: You can set the "preferred list (card / phone), automatically generated list, repeat (play tracks the way), random."
- (114) 10.7 Radio
- (115) Multimedia menu, press the function button → select "FM Radio" to enter:
- (116) Key Description:
- (117) number 2 key: increase the volume
- (118) number 8 key: to decrease the volume
- (119) number 4 keys: Up to manually adjust the channel.
- (120) number 6 key: Down to manually adjust the channel.
- (121) number 5 key: Play or Stop.
- (122) When the radio is playing channel, press the "Options", has the following functions:
- (123) Channel list: You can view the new channel or channel search, select and enter the option to make a channel name, set the frequency. Channel is not set, the list appears blank.
- (124) Manually enter: You can manually enter the frequency to listen.
- (125) Auto Search: You can automatically search for and save channels to the channel list.
- (126) Setting: speaker phone can turn on / off, background playback on / off settings, etc.
- (127) 10.8 Document Management
- (128) This phone is designed with file management, similar to the computer model, available to users. You can use this function manage stored files if you use this phone for electronic mobile hard disk.
- (129) Press the function key to enter: mobile phones, memory cards.
- (130) After which the "phone" and "Memory Card" to enter you can view all the storage space and the remaining available space. Press Options and OK key to open: open the current mobile data library.
- (131) Format: The current storage path (phone / memory card) format.
- (132) After selecting the Open Library, press Options can do the following:
- (133) Open: Open the selected folder or file.
- (134) New Folder: can be self-built a new folder.
- (135) Renamed: file (folder) Rename.

- (136) Delete: Delete the current file (folder).
- (137) Sort by: choose by name, type, according to time, depending on the size or none.
- (138) When you select a file, can also be used to send, copy, move, sort, and many other operations.
- (139)
- (140) 11 Toolbox
- (141) 11.1 Calculator
- (142) You can add, subtract, multiply, and operations in addition to the (dial key, hang up key, the key, the next key key corresponding subtraction, multiplication and division)
- (143) 11.2 magnifier
- (144) Enter a magnifying glass, camera alignment to be amplified in kind, has a zoom function.
- (145) 11.3 Fun and games
- (146) Comes with a magic sushi game, only for recreational use.
- (147) 11.4 SOS set
- (148) Can be set to three emergency numbers, press the SOS button standby interface, automatically start dialing a number from the first, if the first number is missed, automatically dials the next number, and so on, until the other answer, and automatically send a distress SMS to emergency numbers set.
- (149) 11.5 Calendar
- (150) Mobile phone as a convenient, fast communication tool, now has the majority of users, and its practicality, efficiency and other features make the phone work has become an indispensable tool.
- (151) This function is used to view the status of a certain date and lunar dates. Such as: You can view the August 15 is the day of the week and time of their lunar calendar.
- (152) Press Up, Down, dial, hang up keys to move the viewing.
- (153) Press Options can do the following:
- (154) Calendar: View, add agenda.
- (155) Jump to a specific date: You can jump directly enter the date you want to see.
- (156) Lunar: open or close the calendar display.
- (157)
- (158) 11.6 Alarm
- (159) This function is used to make the phone sounding the alarm tone at a specified time. If the specified time has come when the phone is turned off, this function can also send alarm sounds, and you are prompted to boot.
- (160) Press the function key to enter the alarm clock function (can set up to three alarm).
- (161) Press the up or down arrow keys to select the alarm, press the Edit button to enter the setting.
- (162) 1. In the first row of the left and right arrow keys to move the alarm is "open" (press * or # key to select).
- (163) 2. In the second line, enter the time you want the alarm.
- (164) 3. Ring mode: press * or # key to select the ring pattern, once a day, custom (if selected as a custom ring mode, you need to set up each day of the week, according to needs to be set on or off the end. press Done, and save the settings.
- (165) 4. Snooze time: press * or # key to set the Snooze time length.

- (166) * Set button press vertically moving items, press *, # key to select content
- (167)
- (168) 11.7 family number
- (169) You can set nine family number, speed dial is turned, the standby screen press the number keys 1-9 to dial the number that corresponds to the family.
- (170) 12 Input Method
- (171) 12.1 Input button
- (172) numbers, symbols, letters keys: keyboard altogether 12 letter keys
- (173) letter keys can be achieved on the screen corresponding to the key numbers, symbols, complex functions;
- (174) Spacebar: Under state pinyin input, strokes, and other digital English, press 0 for the spacebar, which can press the 0 key can also press the virtual keyboard spacebar
- (175) toggle keys: [#] key for input method switch
- (176) 12.2 Pinyin Input Method
- (177) 12.2.1 Pinyin input method introduced
- (178) Pinyin input is alphabetically constitute Pinyin initials and finals, enter each letter from consonant to vowel sequence, such as phonetic spelling zhang process should be the order of input: z, h, a, n and g, then press the left and right arrow keys to move the cursor to the selected word, then press the OK function key word selection.
- (179) 12.2.2 Clear entered text
- (180) In spelling during the last letter press the clear key to delete the input and then delete all the letters to spell the state press the clear key to exit back to the idle state.
- (181) 12.2.3 Legend mode
- (182) When you select a word, the bottom of the screen will appear with this word related word association, in which case the input method to enter the association input mode. If you have the desired word, press the left and right arrow keys to move the cursor to the selected word and then press the function key word selection, without the required words, you can repeat the steps to re-enter within the predictive character input mode.
- (183) 12.3 stroke input method
- (184) 12.3.1 Basic concepts
- (185) Enter the text can be used to sequentially, handwriting input.
- (186) 12.3.2 stroke input rules
- (187) Please enter characters by handwriting habits!
- (188) An input of Chinese characters: the number keys corresponding to the five basic strokes 1,2,3,4,5 characters: one (horizontal, mention), Shu (vertical, vertical hook), Pie (apostrophe), Dian (point, flick), B (off).
- (189) Second, select characters: upper and lower arrow keys to flip, left and right arrow keys to move the cursor keys to select the word OK ..
- (190) 12.3.3 Clear entered text
- (191) In stroke input, press the Clear key to delete the last entered sum, then press to remove all strokes clear key to exit back to the idle stroke input state.
- (192) 12.3.4 Legend mode
- (193) When you select a word, the bottom of the screen will appear with this word related word association, in which case the input method to enter the association input mode. If you have the

desired word, press the left and right arrow keys to move the cursor to the selected word and then press the function key word selection, without the required words, you can repeat the steps to re-enter within the predictive character input mode.

(194) 12.4 English input method

(195) 12.4.1 Basic concepts

(196) Switch the input method to letters.

(197) Enter English word method is direct input.

(198) 12.4.2 Clear input word

(199) At spelling, press the clear key to delete the last letter entered. Exit spell the word state in the idle state the user can press the Clear key to delete the screen, one or more words, press the * key to open punctuation mode.

(200) 13 USB connection

(201) USB storage devices can be connected

(202) The computer will appear after appropriate disk 1) Select a storage device, but can also be charging.

(203) 2) the shutdown case of connecting USB storage devices can be charged and function

(204) 14 security password

(205) Security code protects your phone and SIM card from unauthorized use, as described in this presentation, useful to the phone settings.

Unusual circumstances	Causes	Solution
Poor signal reception	1. Use of mobile phones in areas with poor reception. Such as tall buildings or near the basement.	If, within the building, move near a window. If the signal is weak, move to the open space.
	2. Intensive period in a call, the line can not call cause congestion.	Try to avoid.
	3. Away from the network operator's base station.	You can ask the network operators to provide the service area map.
Can not boot	The battery is exhausted.	To charge the battery.

Standby time is shorter	1. The standby time and the network operator's system settings. The same phone in different network usage and standby time vary.	In poor reception area signal, temporarily shut down.
	2. Battery depletion, the use of a few years after the battery's performance will gradually decrease.	Replace with new batteries
	3. When no signal is received, the phone will continue to launch, looking for the base station, consume a lot of battery, causing the standby time is short.	Move to a better area or the received signal is temporarily closed.
SIM cards can not be used	1.SIM card is damaged. 2.SIM card is not installed. SIM card or SIM card contacts dirty.	1. back to the network operator to check. 2. Reinstall the SIM card correctly. 3. Use a clean cloth to wipe clean the contacts.
No network service	1.SIM card is invalid. 2 out of service area. 3. The signal is weak. Subscriber line switch is correct	1. Contact your network operator. 2. Check the network operator's service area. 3. Move the window or select another service network. 4. Select the correct line (read "L1" try!)
Can not send text	This service is not open or does	Contact your network operator;

messages	not enter a short message center number	set text message center number.
Unable to make a call or you can not answer the phone	Has set a fixed dialing or call restrictions.	Off fixed dialing or call restrictions. The phone number is set to "System Default"
PIN error	Enter an incorrect PIN code three times.	Contact your network operator.
Battery not charging or charging no display	<ol style="list-style-type: none"> 1. The battery or charger is damaged. 2. Phone temperature is below 5 degrees Celsius or above 40 degrees Celsius. 3. bad. 4.The battery is exhausted。 	<ol style="list-style-type: none"> 1. Replace with new batteries or chargers. 2. Adjust the charging environment. 3. Check whether the charger connector connected. 4. extend the charging time (when the battery voltage is returned only when the CPU operating voltage display) or cradle try!
Unable to input data	The phone book is full of information。	Delete some phone book.
Some functions can not be set	Network operators do not provide this functionality.	Contact your network operator
MP3 players can not be	Are there download MP3 format music to your phone.	Download the MP3 format music right to your phone

Appendix 1:

16 terms

GSM digital cellular Global System for Mobile Communications

SIM subscriber identification card

SMS Short Message Service

PIN personal identification number, usually refers to PIN1, supplied with the SIM card, the SIM card with a password.

PUK personal unlock code together with the SIM card. When three consecutive wrong PIN code, SIM card is locked to unlock the SIM card, or to change the PIN code.

PIN2 personal identification code 2, provided by the network operator, during the special features, such as the need to support the SIM card protected fixed dialing numbers (FDN) and other functions use.

PUK2 personal unlock code 2, provided with a specific SIM card, used to modify or open PIN2 code.

FCC

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over on one gram of tissue.

Device types: I534 (FCCID: 2ADWD- I534) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.809 W/kg and when properly worn on the body is 0.776W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0 cm separation distance between the user's body and the back of the handset.

The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment .This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The user's manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.