




280\*101mm

80g书纸+单面印刷+风琴折

 

# User Manual

Product Name: BT Speaker




## DESCRIPTION OF PARTS

1. OFF/ON
2. Charging port (DC 5V)
3. USB slot
4. Mic input port
5. Volume knob
6. Next track  /V+ Previous track  /V-
7. SPEAKER MODE
8.  /SCAN:Auto scan in FM mode

## USB

1. Make sure the Multimedia Speaker is in USB mode by pressing the speaker mode button.
2. Insert the USB flash memory into the USB slot.
3. The Multimedia speaker box will read the MP3 format music automatically.
4. Press "▶||" button to Play/Pause. Press " /V-" or " /V+" button to be previous track or next track, rotate the Volume knob to increase or decrease the Volume.
5. Please Note: The memory size of USB devices which can be supported up to 32GB.

## FM RADIO

Press  /SCAN to search FM channels automatically. This operation will scan all FM stations and Pre-record them to memory. The scan procedure will take several minutes and cannot be interrupted. Once completed, press " /V-" or " /V+" button to be previous track or next track, rotate the Volume knob to increase or decrease the Volume.

## LED light mode:

Press the LED button to select between the Multiple lighting modes. Press and hold the LED button to off the LED light.

## CHARGING

Plug the USB cable into the speaker's charging port and connect to the power source.

The red LED indicator on panel will be lit when the unit is charging..

## MAINTENANCE AND MAINTENANCE

1. After using this product, pull up the plug in time, Be careful of the dust, dirt.
2. If the too large sound cause distortion, firstly try to turn down the volume, then adjust the main volume button the problem will be gone.
3. Before turning on the speaker, please Rotate the volume button, turn down it to be minimum volume; in case the too large output Power damage horn

## BATTERY MATTERS NEEDING ATTENTION

1. You'd better turn off the device before battery charging
2. Charging time: 3-4 hours, then pull the plug. Don't keep charging it too long.

3. When the device start getting stuck, or the voice getting weaker, then it's time to charge.

4. You should charge the device before the battery capacity being used up.

## Product Specifications

Product Name: Karaoke Machine K Serial Wireless Version  
Bluetooth Version: V5.3  
USB: Maximum support up to 32GB  
Bluetooth Reception Disiarice:  $\geq 10$  meters  
Speaker Impedance: 4 $\Omega$   
Speaker size: 2x 4"  
Speaker Power: 5W\*2  
Signal-to-Noise Ratio:  $\geq 90$ dB  
Frequency Response Range: 80Hz-20KHz  
External Interfaces: Micro USB charging interface, USB interface  
Power Input: DC5V  $\rightarrow$  1A  
Control Merhod: Button adjustment  
Battery: 3.7V 2500mAh  
Play Time: 12H

## Product and Accessories List:

Speaker .....	1PC
Charging Cable .....	1PC
User Manual.....	1PC
Microphone .....	1PC

1

2

3

4

中间对折

**FCC Warning**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Radiation Exposure Statement**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.