


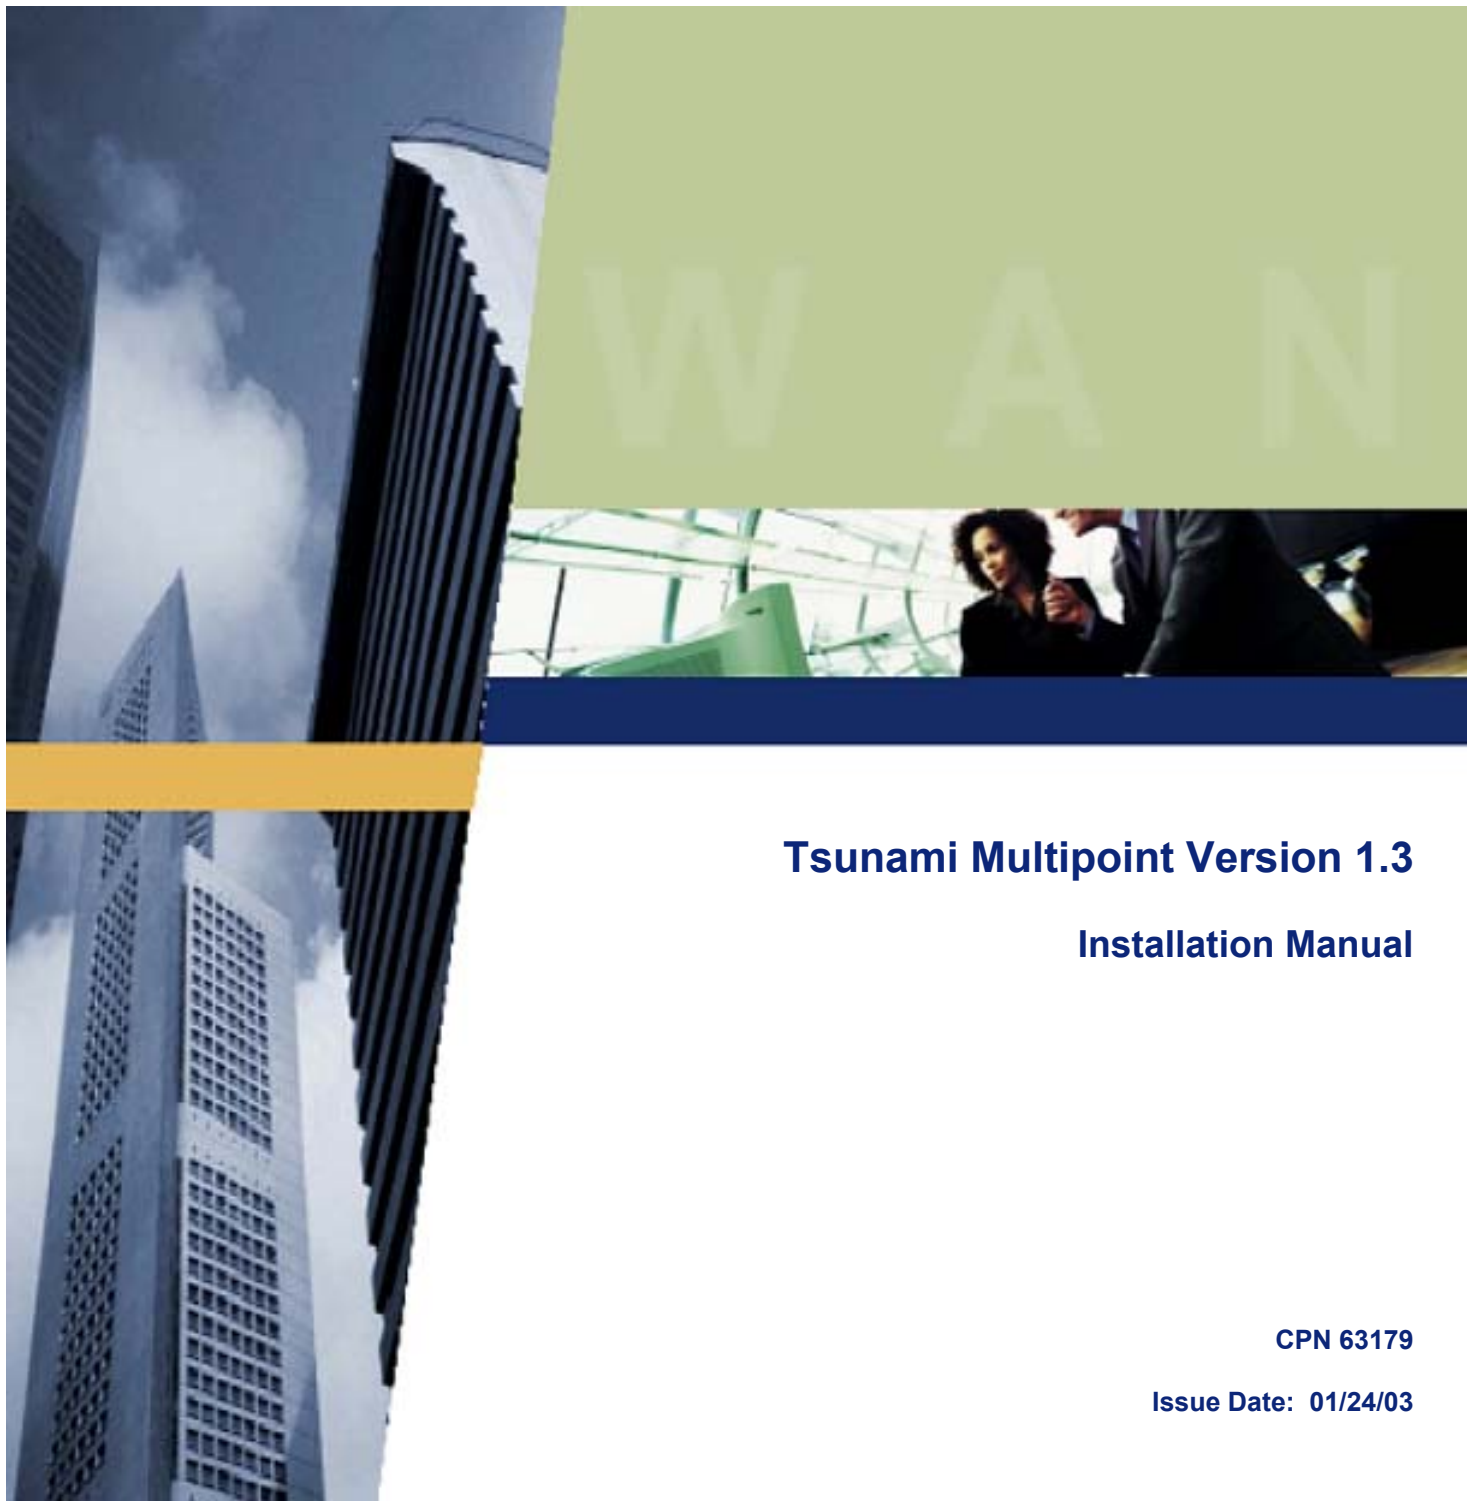

Tsunami Multipoint Version 1.3

Installation Manual

CPN 63179

Issue Date: 01/24/03



Take your network further

Copyright and Service Marks

Copyright © 2002 by Proxim Corporation. All rights reserved. No part of this manual may be reproduced without prior written permission from Proxim Corporation.

The information contained in this manual is subject to change without notice. Proxim Corporation shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual or equipment supplied with this manual. Proxim Corporation makes no warranty of any kind with regard to this manual or any equipment supplied with this manual, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Tsunami™ is a registered product of Proxim Corporation.

Windows® is a registered product of Microsoft Inc.

Other names are trademarks of their owners.

Y2K (Year 2000 Issue): All software supplied by and for Proxim Corporation products adhere to the four-(4) digit year nomenclature as required for Year 2000 compliance.

Regulatory Notice

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Shielded cables and I/O cords must be used for this equipment to comply with the relevant FCC regulations.

Changes or modifications not expressly approved in writing by Proxim Corporation may void the user's authority to operate this equipment.

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

WARNING! This device must be professionally installed!

Contents

ABOUT THIS BOOK	5
Required Software and Firmware.....	5
Safety Instructions.....	6
CHAPTER 1. SITE PLANNING	7
General Considerations	7
Specific Considerations	8
Interference and How to Avoid It.....	10
Antennas	11
Path Planning	14
PMP Radio Information	14
CHAPTER 2. DEPLOYING THE BASE STATION UNIT (BSU)	16
Unpacking the System	16
Mounting the Base Station Unit	17
Installing the GPS Antenna.....	24
Installing BSU Configuration Software.....	25
CHAPTER 3. DEPLOYING THE SUBSCRIBER UNIT.....	31
Mounting the Subscriber Unit (SU)	31
Installing the Subscriber Utility Software	34
Aiming the SU	35
Displaying Link Status Information	36
Confirming Network Activity	38
CHAPTER 4. SYSTEM DIAGNOSTICS AND OPERATING TIPS	40
Radio Diagnostics.....	40
Network Configuration Tips	44
Protecting the System	45
APPENDIX A. INITIAL SETTINGS	49
Specify the Desired Modulation (Data Rate)	49
Specify the BSU's Gateway Address	49
Select the Routing Mode	49
Change the Frequency Plan and Operating Frequency.....	50
APPENDIX B. INSTALLING THE CONFIGURATION SOFTWARE AND UPGRADING	
FIRMWARE	51
Base Station Configuration Software Version 1.5	51
Subscriber Utility Software	54
Firmware Downloads	54
APPENDIX C. TECHNICAL SPECIFICATIONS.....	57
Burst-Rate Limit	57
Downlink/Uplink Throughput.....	57
Frequency Plans	57
Tx Power	58
Antenna	58
Receiver Sensitivity	58
Maximum Distance Between Base Station and Subscriber Unit.....	58
System.....	59
Standards Compliance and Interfaces	59
Configuration and Management.....	59
Power/Environment Safety	60
Physical Dimension	60
Installation Details	61

Optional Accessories.....	61
APPENDIX D. CONSTRUCTING POWER AND ETHERNET CABLES.....	62
Subscriber Unit Power and Ethernet Cable	62
Assembling the RJ45 (Woodhead) Weatherproof Connector.....	64
BSU Power and Ethernet Cable	65
Installing the AMP CPC Connector with Shield and Strain Relief.....	69
APPENDIX E. LIGHTNING PROTECTION RECOMMENDATIONS	70
Introduction	70
Recommendation	71
Physical Considerations.....	72
Where Should the Protection Units be Located?	73
Lightning Protection Specifications.....	73
APPENDIX F. TECHNICAL SUPPORT AND TRAINING	76

Figures

Figure 1. BSU Wind Loading Analysis.....	9
Figure 2. SU Wind Loading Analysis.....	9
Figure 3. BSU Azimuth Antenna Pattern	12
Figure 4. BSU Elevation Antenna Pattern.....	12
Figure 5. SU Antenna Pattern	13
Figure 6. Base Station Unit Components	16
Figure 7. BSU Mounting Hardware.....	18
Figure 8. U-Shaped Mounting Brackets Attached	18
Figure 9. Downtilt and Clamp Brackets with Screws Attached	19
Figure 10. Bracket Assembly Detail of Screw, Washers, and Nut	19
Figure 11. Bracket Assembly Attached to Mounting Bracket.....	20
Figure 12. Screws/Clamp Bracket Assemblies Attached.....	20
Figure 13. Strap Clamps Attached and Mounted BSU	21
Figure 15. BSU's Power and Ethernet Connector	21
Figure 16. GPS Antenna Mounted on BSU.....	24
Figure 17. Subscriber Unit Installation Kit	31
Figure 18. Mounting Clamp Housing and U-Bolts Attached.....	32
Figure 19. Mounting Bracket Attached to SU.....	32
Figure 20. Mounted SU	33
Figure 21. SU's Power and Ethernet Connector and Grounding Screw	33
Figure 22. Settings Page in Subscriber Utility.....	35
Figure 23. Aiming Tool in Subscriber Utility	36
Figure 24. Subscriber Utility Status Window	37
Figure 25. BSU Log in the Base Station Configuration Software.....	40
Figure 26. Log 1	42
Figure 27. SU Log 2	43
Figure 28. BER Log in Base Station Configuration Software	44
Figure 29. Password Definition/Usage Diagram	47
Figure 30. Fresnel Zones.....	58
Figure 31. 8-Pin DIN and RJ45 Contact Arrangements	62
Figure 32. Soldered Wires on 8-Pin DIN Connector	63
Figure 33. Metal Shell Placed Over 8-Pin DIN Connector	63
Figure 34. Jacket Placed Over 8-Pin DIN Connector	64
Figure 35. Cat 5 Cable with Insulation Removed	64
Figure 36. Wires Crimped into RJ45 Connector	64
Figure 37. Woodhead Cover Placed Over RJ45 Connector.....	65
Figure 38. End Nut Seated on RJ45 Connector.....	65
Figure 39. 18-Pin Positronic Connector	65
Figure 40. BSU Power and Ethernet Cable Connectors	66
Figure 41. Crimping Styles and Insertion	67
Figure 42. Indoor Portion of Power and Ethernet Cable	67
Figure 43. Wire Preparation.....	68
Figure 44. BSU Cable Construction Tools.....	68
Figure 45. 8-Pin AMP Connector.....	69