



尺寸:105x148.5mm 材质:超感米100g 折页方式:风琴折

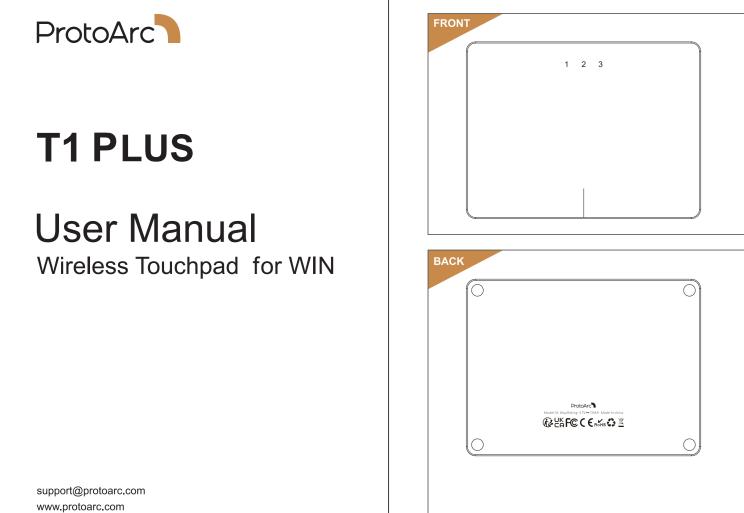


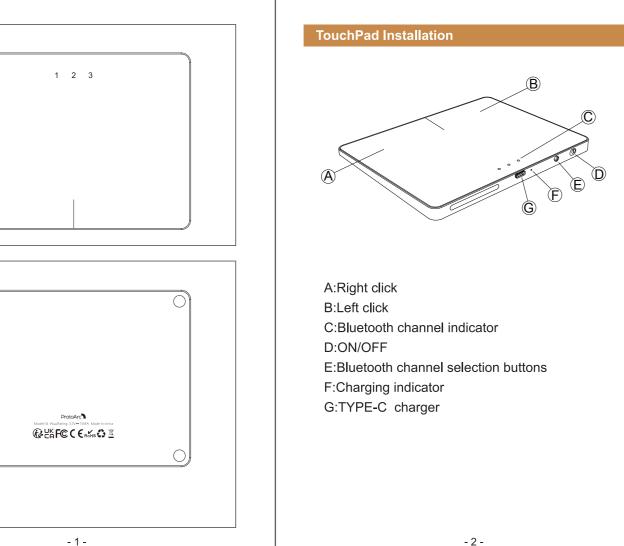


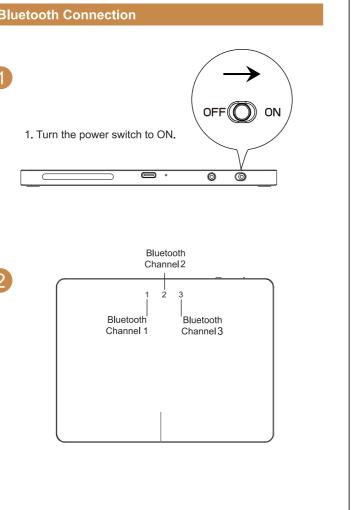

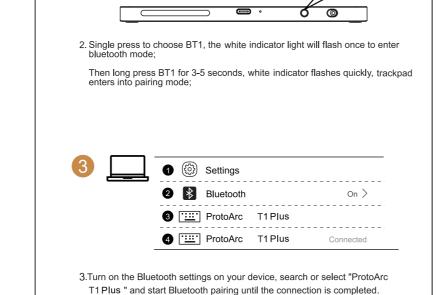

BT2 and BT3 connection are the same as BT 1, when successfully pair 2 or 3 devices, short press connect button to switch.

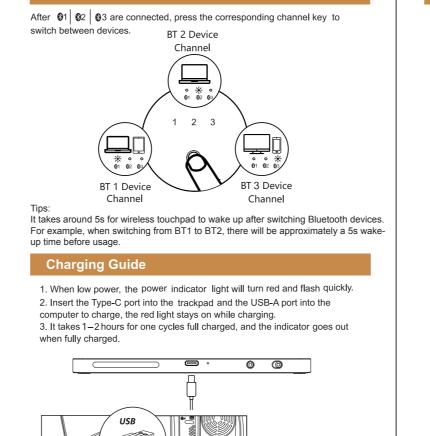


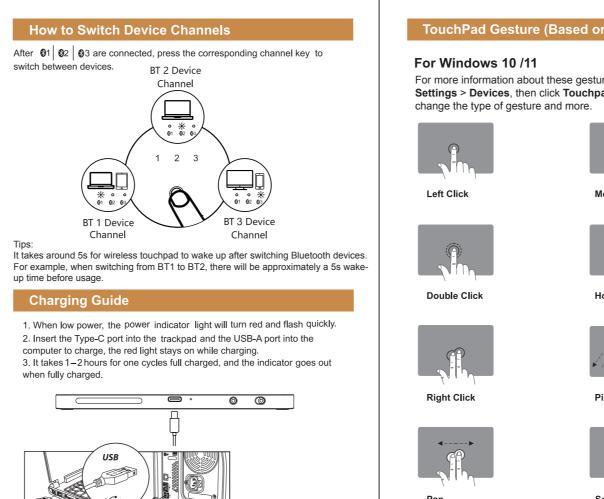

Left Click

Right Click

Pinch / Zoom

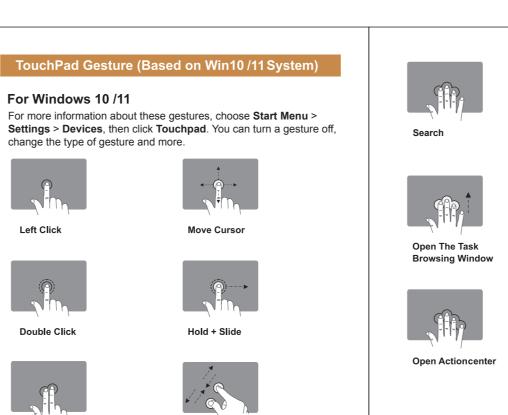



device and reconnect.

Four-finger swipe left/right

- Switch desktops

Bluetooth: Windows10, Windows 11	▶ 1* User Manual
500 mAh	
1000 charge and discharge cycles	QA
1 million keystrokes test	1.About the prompt of unrecognized device when charging:
≥180 Days	This is a wireless touchpad that does not support wired mode. The prompt on the computer does not affect the Bluetooth connection or charging of the touchpad. Simply close the prompt.
Touchpad click to wake up	
2m / 6.5 ft	
≤37mA	2. How to fix Bluetooth connection issues or intermittent connection:
162 x114 x11 mm /6.4 x 4.8 x 0.4 in	<ul> <li>Ensure the touchpad is fully charged. Low battery can affect the touchpad's performance.</li> </ul>
	500 mAh  1000 charge and discharge cycles  1 million keystrokes test ≥180 Days  Touchpad click to wake up  2m / 6.5ft ≤37mA

ery Capacity	500 mAh	
ery Life	1000 charge and discharge cycles	QA
on Life	1 million keystrokes test	1.About the prompt of unrecognized device when charging:
ndbyTime	≥180 Days	This is a wireless touchpad that does not support wired mode. The prompt on the computer does not affect the Bluetooth connection or charging of the touchpad. Simply close the prompt.
ike Mode	Touchpad click to wake up	
ctive Distance	2m / 6.5 ft	
king Current	≤37mA	2.How to fix Bluetooth connection issues or intermittent connection
)	162 x114 x11 mm /6.4 x 4.8 x 0.4 in	Ensure the touchpad is fully charged. Low battery can affect the touchpad's performance.
		Delete the touchpad's Bluetooth connection on the computer, restart the touch

and re-pair to connect via Bidetooth.
<ul> <li>Delete any unnecessary Bluetooth connections on the computer.</li> </ul>
Restart the computer.
Confirm if the device has built-in Bluetooth; external dongles may not be

1. If the Bluetooth connection is not working properly, turn off and turn on the If the issue persists, try connecting the touchpad to another device to determine touchpad again to restart the device's Bluetooth and attempt to reconnect. Or if the problem is specific to your current device. This will help identify if the issue delete the extra Bluetooth option name in the Bluetooth connection list of the lies with the touchpad or the device itself.

gesture function:

Windows 11.

- 2. To switch to a successfully connected channel, press the channel button and wait for 3 seconds before continuing to use.
- 3. The touchpad has a memory function. When it connected on a specific channel, turn off the touchpad and turn on again, they will automatically connect to the default channel and this channel indicator is on.

- ▶ 1\* Wireless Touchpad
- ▶ 1\* Type-C Charging Cable
- 1\* User Manual

3. How to solve touchpad compatibility issues and cannot use the

Please ensure that the device's operating system is either Windows 10 or

## ⚠ Heat Exposure: Avoid leaving the item in high-temperature environments or in direct sunlight, which could result in a fire hazard.

IMPORTANT: To reduce risk of fire, electric shock, or injury, follow these

▲ Charging Safely: Use only the provided cable. Charge in a well-ventilated, dry

A Battery Handling: Do not attempt to replace the item's lithium battery. Battery

replacement should be conducted by qualified personnel to prevent hazards.

safety instructions.

area away from inflammable materials.

- Liquid Exposure: Keep the item away from water and liquids. Do not use if wet
- until thoroughly dried. ▲ Damage and Leakage: Cease usage and consult customer service if the item
- is damaged or the battery leaks. ▲ Correct Disposal: Follow local regulations for disposing of electronic devices
- and batteries. Do not dispose of with household waste. ▲ Radio Frequency Interference: This device may cause interference with other
- electronics. Keep a safe distance from sensitive devices.
- A Child Safety: Keep the item and its components out of reach of children to avoid choking or battery ingestion hazards. Never allow children to handle the item unsupervised.
- CAUTION: Non-compliance with the above warnings can lead to serious injury or property damage.
- For further assistance or information, please contact our customer service. Emergency Contact: +1 866-287-6188 (United States)

RESTRICTED LA SERVICION CONTRACTOR CONTRACTO

uss name: g.L.L. GmbH ess address: Bauernvoglkoppel, 55c, 22393, Hamburg, Germany i: g.L.L.DE@outlook.com 49 162 3305764

Wireless Touchpad for WIN

Shenzhen DZH Industrial Co., LTD

T1 Plus

Place of Production:

Manufacturer:

European Representative:

Date of Sign:

EU agent name:

Date of Sign:

Address:

3.7 V == 10mA

3.7 V==250mA

Made in China

liuq@dzhgy.com

It is our sole responsibility to declare that the above products are in full compliance with Directive 2014/53/EU, 2011/65/EU (as amended)

Managing Director

2022.1.5

# **FCC Warning**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## IC Warning

This device complies with Innovation, Science and Economic Development Canada's licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux CNR exemptes de licence d'innovation, sciences et développement économique Canada . Son fonctionnement est soumis aux deux conditions suivantes :

- (1) Ce dispositif ne peut causer d'interférences; et
- (2) Ce dispositif doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF.

L'appareil peut être utilisé sans restriction dans des conditions d'exposition portables.