

PAIRING NAME: BB-BT-SP

Front

billboard

WIRELESS SPEAKER
WITH LED DISCO LIGHT

ENGLISH
USER MANUAL




WIRELESS SPEAKER

Thank you for purchasing the Billboard® Wireless Speaker. For best use of this device, we recommend carefully reading this user manual and keeping it for your records.

Package contains:

- a. Wireless Speaker
- b. USB charging cable
- c. User manual

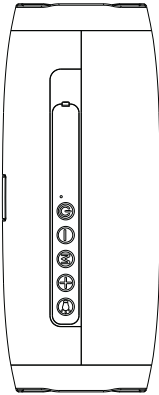

PRODUCT SPECIFICATIONS
BT:V5.1
BATTERY : 3.7V 1200mAh
POWER:3W*2
CHARGING:5V/500mA

FCC Information

FCC ID : 2AML6BB276

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard. FOR HOME OR OFFICE USE. Warning : This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

BATTERY INFORMATION

The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. Never use any charger or charging cord that is damaged.

Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. The optimal temperature for the battery is between 59°F and 77°F. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Do not dispose of the device in a fire as it may explode. Batteries may also explode if damaged. Always dispose of electronics according to local regulations.

Do not discard this rechargeable device as trash. Consult your local waste collection agency for proper disposal or recycling methods. You may also contact Call2Recycle at 877-273-2925 or online at call2recycle.org for a battery recycling drop-off location near you.



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.


Back

GUIDE

KEY AND SLOT FUNCTION

1. DC 5V slot: Use the standard Micro USB charging cable for power charging.
2. TF slot: It can decode and play MP3 format audio when putting the TF card into the slot.
3. USB slot: It can decode and play MP3 format audio when putting the USB disk into the slot.
- 4.AUX jack:Use the Mini 3.5 head input through outside devices.
- 5.Button "Power": long press for power on /power off. When playing music,(USB disk / TF card/Bluetooth/AUX.), short press for "play/pause". In FM mode, short press to search an FM station automatically, press again to stop searching.
- In BT mode with mobile paired, when a call is coming, short press to answer a call hands-free, press again to hang up, and press twice to redial the last number.
- 6.Button "-": When playing music, short press for the last song, and long press to turn down the volume.
- 7.Button "+": When playing music, short press for the next song, long press to turn up the volume.
8. Button "M": Short press to switch mode (BT/ USB/TF / FM /AUX).
9. Button "Light": short press for the option of the LED flashing light, long press to turn on/off the LED light.

NOTE: In the FM mode, put in a micro charging cable to get a better FM radio station. USB DISK/ TF CARD should be format FAT32

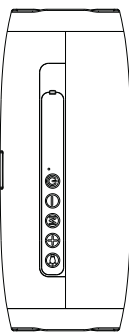

- 2.Instruction
Key Function
To turn on the speaker, Press the Power On/Off button for seconds to turn on the speaker.

To turn off the speaker, press and hold the Power On/Off button. To switch between Bluetooth and FM modes short press the mode button.

Activate the Bluetooth® feature on your phone, and set the phone to search for wireless devices (See the User Manual for your device)
The speaker will show on your device as BB-BT-SP. (if passcode is requested enter 0000)
A voice prompt will signal that the connection is successful.

If not paired, the speaker will turn off automatically after about 5 minutes .
Press the Power button to play/pause your device's music.

When the speaker is paired to your mobile device, press the power button to answer the call and press again to end call, Press and hold power button to reject calls. Press the Power button twice quickly to redial the last number .

Short press the "+" button to go to the next song or long-press the "+" button to turn the volume up.

Short press the "-" button to go to the last song or long-press the "-" button to turn the volume down.

PRODUCT FEATURE

1. International advanced BT chip and circuit design tech- niques, support all wireless devices.
2. With FM function, can search radio station broadcast auto-matically.
3. With a Hi-Fi speaker, to make sure a clear and bright sound.
4. Support Micro SD card and USB disk, play MP3 format audio.
5. The wireless working distance is up to 33 feet .
6. With AUX jack, can directly connect the outside devices, for example, tablet PC/TV/cell phones.
7. It will turn off automatically after about 5 minutes if disconnect BT & torchlight not working .
8. A variety of flashing LED lights with different colors, also color lights flash with the melody.

CHARGING THE BATTERY

1. Plug the charge cable into the MicroUSB port.
2. Connect the charge cable to a USB power source. The red indicator light will display during charging. Charging the battery fully may take up to 2 hours.
3. When the battery is fully charged. Disconnect the charge cable from the power source and the Speaker. The fully charged battery has power for up to 4 hours of music .



WARNING:

CHOKING HAZARD - Small parts. Not for children under 3 years.

LIMITED WARRANTY

ESI Cases & Accessories, Inc., warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor at any product the exterior of which has been damaged or defaced which design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases & Accessories, Inc.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases & Accessories, Inc. and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases & Accessories, Inc. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liabilities and responsibilities of ESI Cases & Accessories, Inc. be liable or in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

This warranty does not cover cables that have become frayed, cracked, or broken from use. The user should immediately replace this, or any, charge cable that has become frayed, cracked, or broken, as it may constitute a serious safety risk, including electrocution, if it is continued to be used.

Send product with \$11.95 shipping & handling fee to:
ESI Cases & Accessories
One Gateway Center, Suite 2600 Newark, NJ 07102
TechSupport@ESICellular.com