## 12. Product function description

#### 1. Function introduction

Bluetooth button , Google voice, infrared learning, SmartRCU , backlight

### Second, the hardware part

Main control chip: RTL8752CJF

• Indicator light: 1 LED red indicator light

• Backlight: 11 white backlights

Launch tube: 1 launch tube

Antenna form: PCB antenna

### 3. Functional requirements


## 1. Bluetooth pairing

step	operate
enter pairing mode	Case 1 : When the remote control has no pairing information, press any
	button to enter the pairing mode (except the learning button)
	Case 2: Press and hold " <b>HOME+BACK</b> " at the same time for 3 seconds,
	clear the pairing information, and then send the pairing broadcast to
	enter the pairing mode
Pairing time and	1: Enter pairing mode, the red light flashes quickly (5-6 times per second)
indicator	2: The pairing is successful, the indicator light is always on for 3s and then
	goes out
	3: Pairing fails, the indicator light flashes for 60 seconds and exits pairing
	mode
	4: When pairing by pressing the key combination, first clear the previous



	pairing record
bluetooth device	BH100J
name	

## 2. Infrared code format and parameters

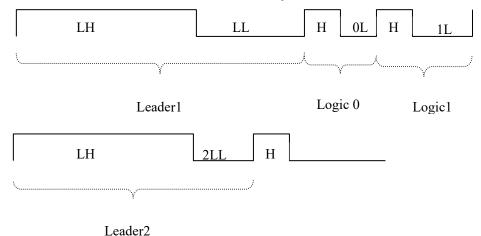

Note: NEC-N format IC: PT6121/2 UPD6121[T32DBA]; low byte read code first, duty ratio: 1:3;

Leader1	8B Custom		8B Custom		8	8B Data		8B Data/			Delay1	
©Leader2			Delay2			To © Cycle						
Name	KHz	LH		LL	Н		0L		1L	2LL		С
T32DBA(NEC)	37.90k	9.00	)m	4.50m	560	0u	560u		1.69m	2.251	m	108m

### 3. Key code value

#### 1) Key function

When any key is pressed, the white backlight lights up, and if there is no more key press within 4s, the backlight turns off. When the backlight is on, the key appears again to start timing for 4s, and the backlight is also on for 4s after long-pressing the key.

2) Key code value:

key sequ	key name	IR code: NEC	Usage	Usage ID	NOTE		
ence	key name	User code: 0x 00,FF	page	Osage ID	NOTE		
	TV POWER	0xF1	/	/	<ol> <li>Support manual learning</li> <li>Support SmartRCU</li> </ol>		
	TV SOURCE	0xF2	/	/	<ol> <li>Support manual learning</li> <li>Support SmartRCU</li> </ol>		
	BOX Power	/	0x0C	0x0030			
	REWIND	/	0x0C	0x00B4			
	PLAY/PAUSE	/	0x0C	0x00CD			
	FAST_FORWARD	/	0x0C	0x00B3			
	Live TV	/	0x0C	0x0063			
	Record/REC	/	0x0C	0x00b2			
	Option	/	0x0C	0x0083			
	Youtube	/	0x0C	0x000c			
	On Demand	/	0x0C	0x0200			
	UP	/	0x0C	0x0042			
	DOWN	/	0x0C	0x0043			
	Left	/	0x0C	0x0044			
	Right	/	0x0C	0x0045			
	Center/OK	/	0x0C	0x0041			
	VOL+	/	0x0C	0x00e9	Smrat RCU support		
	VOL-	/	0x0C	0x00ea	Smrat RCU support		
	CH+	/	0x0C	0x009c			
	CH-	/	0x0C	0x009d			
	BACK	/	0x0C	0x0224			
	Assistance	/	0x0C	0x0221			
	Home	/	0x0C	0x0223			
	Menu	/	0x0C	0x0040			
	All Apps	/	0x0C	0x01A2			
	1	/	0x07	0x001E			
	2	/	0x07	0x001F			
	3	/	0x07	0x0020			
	4	/	0x07	0x0021			
	5	/	0x07	0x0022			
	6	/	0x07	0x0023			
	7	/	0x07	0x0024			
	8	/	0x07	0x0025			
	9	/	0x07	0x0026			
	Mute	/	0x0C	0x00e2			
	0	/	0x07	0x0027			
	TV/RADIO	1	0x0C	0x001c			
	OK+BACK	/	0x0c 0x004	1+0x0c 0x0224	Bugreport		
	DOWN+BACK	/	0x0c 0x004	3+0x0c 0x0224			

### 4. Google ATV voice function

- Support Google voice 1.0 spec;
- 2) Use Google ATV standard voice interface; support long key recording, and key release recording;
- 3) Voice key Press the key, and send out the press and release together;
- 4) After Google Voice is turned on, if the host has not received the command to turn off Google Voice, the remote control will automatically exit after a timeout of 30 seconds.

### 5. Infrared learning function

- The learning function has a total of 2 buttons, the "TV POWER" and "TV SOURCE" buttons are the buttons for learning;
- 1) Press and hold the "learning button" for 3 seconds, the indicator light is always on, and the indicator light continues to be on when you let go to enter the learning function.
- 2) control to be learned at the infrared tube of the BH13J remote control, and press the button of the remote control to be learned.
- 3) After the learning is successful, the indicator light flashes three times quickly and then goes out and saves the learning data;
- 4) The learning failure indicator goes off immediately.
- 5) Press and hold the "VOL+ and VOL-" keys for 10 seconds, and the indicator light flashes 3 times to clear the infrared learning data and the infrared code configured by the SmartRCU.

#### Remark:

a) When learning, the transmitters of the two remote controllers should be on the same line, and the

distance should be within 3cm.

- b) After entering the learning function, if no learning is performed within 20 seconds, it will automatically exit the learning state.
- c) Repeatedly learning the same button, the previously learned code will be overwritten after learning, and the last learning signal will be retained; learning failure and learning overtime will not change the original learning data.
- d) When pressing any non-learning key in the learning state, exit the manual learning function.

#### 6. SmartRCU function

- 1) details, please refer to the SmartRCU standard document
- 2) TV POWER, TV SOURCE, VOL+, VOL- support SMartRCU function
- 3) Press and hold "VOL+ and VOL-" at the same time for 10 seconds, the red light flashes 3 times, clearing the infrared code configured by the SmartRCU, and also clearing the infrared learning data.

#### 7. Other functions

- 1) Entering sleep and waking up: When the link is disconnected, the remote control enters the low-power sleep mode within 7s, and enters the deep sleep mode after 20 seconds; when the link is disconnected, it does not enter the sleep deep sleep mode;
- 2) Press any key to wake up the remote control, and use the Bluetooth low energy protocol to establish a quick connection with the set-top box that has been coded, and send the corresponding key value.
- 3) the case of abnormal disconnection of the remote control (except when the host actively disconnects), it will automatically send back a connection broadcast packet at intervals, with a timeout of 30s;

- 4) remote control is disconnected, after the power button sends a wakeup broadcast packet (2s), it sends a 7s return broadcast packet;
- 5) In the case of disconnection, the button sends back the connection broadcast packet (1s direct connection broadcast packet + 10s non-direct connection broadcast packet). During the broadcast process, it supports replying to the scan request of all devices. The scan response should contain the Bluetooth device name "BH100J", but only Support connect request of devices in the whitelist;

#### 8. Power management

Power supply	2 AAA dry batteries			
low power	VBAT $\leq$ 2.3V $\pm$ 0.2V; when the battery is low, the indicator light flashes			
	slowly (once in 1 second) during the key operation, and then goes out			
	after flashing 3 times.			
Power acquisition	Supports normal battery reading service for the host to read the battery			
	level of the remote control.			

### 9. The remote control supports ota (online) upgrade

In order to adapt to new needs or changes, the remote control needs to support ota upgrades. The upgrade package is sent to the Bluetooth remote control through the box side .

#### 10. Software version number

1) Software version number: BH100J Vx.xx

Version number description: BH100J\_ is a fixed format, after the software version is updated, the cumulative update Vx.xx

### 1 1. VID & PID

Vendor ID: 0x1d5a

Product ID: 0x1800

# 12. Indicator light description

state	Runni	ng light indication	cycle
	Press and hold	for 3s to enter the pairing	
Manual	state, the indica	ator light will be on, and the	Flashing frequency: fast flashing (5-6 times
pairing	indicator will	flash quickly for 60s after	per second)
	letting go, wait	ing for pairing	
	The pairing is s	uccessful, the indicator light	
Bluetooth	is always on for	3s and then turns off	
connection	Pairing failed, t	he light is off	
	button click	Function indicator flashes	Frequency: Flashes 2 times in 1 second,
		slowly	and turns off after 6 flashes
infrared key		The backlight is always on	
(Unpaired,		for 4s and then turns off	
disconnected		Function indicator flashes	Frequency: Flashes 2 times in 1 second,
)		slowly	and turns off after 6 flashes
	long press	The backlight is always on	
		for 4s and then turns off	
bluetooth		Function indicator does	
button	button click	not light up	
(link		The backlight is always on	

succeeded)		for 4s and then goes off	
		Function indicator does	
	long proce	not light up	
	long press	The backlight is always on	
		for 4s and then goes off	
Infrared low	During key	The indicator light flashes	Frequency: flashes once per second,
power	operation	slowly	flashes 3 times and then turns off
bluetooth	During key	The indicator light flashes	Frequency: flashes once per second,
low power	operation	slowly	flashes 3 times and then turns off

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired expertion.

including interference that may cause undesired operation .

Changes or modifications to this unit not expressly approved by the party responsible for compliance could

void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

-- Reorient or relocate the receiving antenna.

interference by one or more of the following measures:

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

**Radiation Exposure Statement** 

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.