

360° Panoramic Camera

Wi-Fi · 1-inch Screen · 360° Panoramic Video/Photo



Made in China



Panoramic
Video



Dual Screen



1" Screen



VR Video



VR Video

THE BASICS



Micro USB Port

ACCESSORIES



Tripod



USB Cable



Charger

MOUNTING YOUR CAMERA

Attach your camera to the tripod.



GETTING STARTED

HELLO

Congratulations on your new 360° Panoramic Camera! This user manual will help you learn the basics of capturing life's most incredible moments!

To power ON:

 
Press and hold the **Power/Mode Button** for **3 seconds**.

To power OFF:

Press and hold the **Power/Mode Button** for **3 seconds**.

OVERVIEW

Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:



960P30

Record 960p30 video



2.7K25

Record 2.7K25 video



4K15*

Record 4K15 video



Photo

Capture a 4M photo

360° PANORAMIC VIDEO RESOLUTION

360° Video Resolution:

960p30 / 2.7K25 / 4K15

MicroSD Card	960p30	2.7k25	4k15
32 GB	300 mins	60 mins	60 mins

360° PANORAMIC VIDEO MODE

 960p30 / 2.7K25 / 4K15

To record **360° Video**, verify the camera is in **Video mode**. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To start recording:

Press the **Shutter/Select Button**. The camera will emit one beep.

To stop recording:

Press the **Shutter/Select Button**. The camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

360° PANORAMIC PHOTO MODE

 4M Photo

To capture a **360° Photo**, verify the camera is in **Photo mode**. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To take a photo:

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.