深圳英博伟业科技有限公司 **ØINKBIRD** 型号 HSC-400W 设计师 103.01.00486 林华美 编码 零件名称 说明书 |单位/比例 | MM/1:1 设计主管 YUI 尺寸要求 谢兆栋 审核 |未注准公差| ±0.1mm

20240416

材质: 70g 书纸 折页 风琴折 尺寸: 104 X 137 mm

颜色: 单色印

重量要求

CONFIDENTIAL 未经允许禁止改动

版 本 | V1.0

# 页序

2	3	4	5	6	7	8	9	10



Please keep this manual properly for reference. You can also scan the QR code please feel free to contact us at support@hioazo.com.


Wenn Sie eine Bedienungsanleitung in deutscher Sprache benötigen, scannen Sie bitte den QR-Code und besuchen Sie unsere Website, um sie zu erhalten und ein Video über die Verwendung des Produkts zu sehen.


Se avete bisogno di un manuale di istruzioni in italiano, scansionate il codice QR e visitate il nostro sito web per ottenerlo e vedere un video su come utilizzare il prodotto.

Si vous avez besoin d'un mode d'emploi en français, veuillez scanner le code QR pour visiter notre site officiel afin d'obtenir et de visionner la vidéo


Als je een Nederlandstalige handleiding nodig hebt, scan dan de QR-code om naar onze officiële website te gaan en bekijk de video over het gebruik van het


Si necesita el manual de instrucciones en español, escanee el código QR para ir a nuestro sitio web oficial y ver el vídeo sobre cómo utilizar el producto.

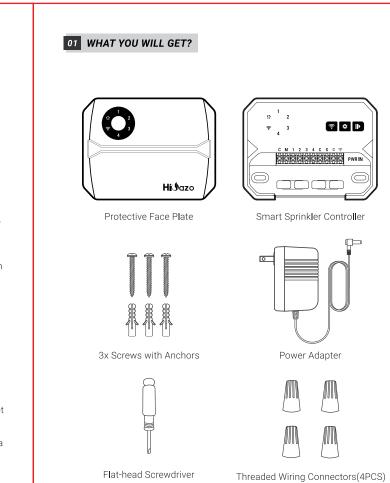

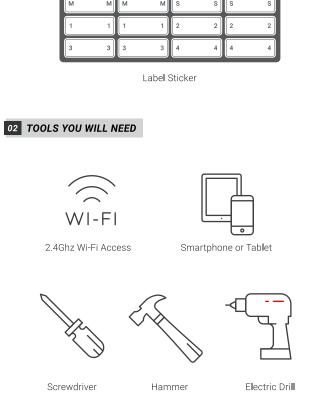



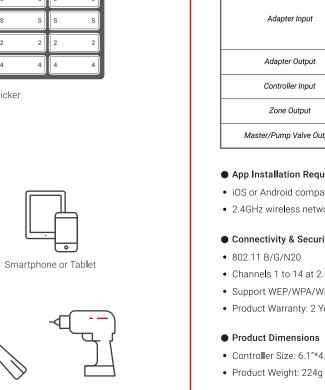

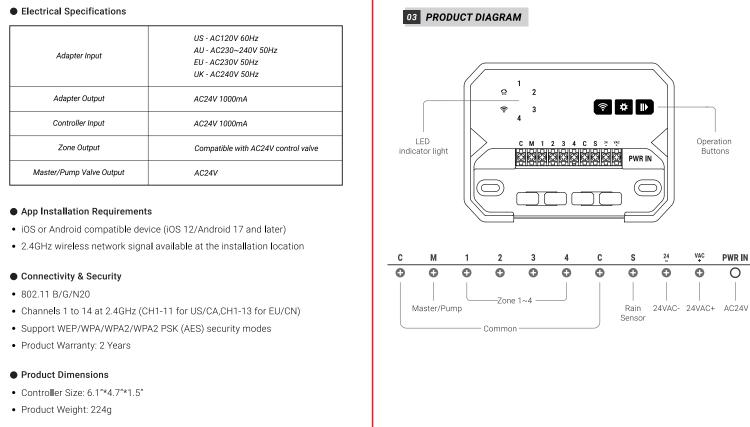







### Step 2: Connect to Wi-Fi

Plug the device into a power socket, and the LED light will fully light up for one second. After waiting for 5 seconds, the 🛜 indicator light will flash, indicating that the device has entered the WiFi connection state. If the ? indicator light does not flash, press and hold the 🛜 button for two seconds to reset the WiFi

Open the HiOazo app and click "+" on the top right corner to add a device. Then, follow the app instructions to complete the Wi-Fi connection. Note that this controller only supports 2.4GHz Wi-Fi networks. After the connection is successful, the 🛜 indicator on the controller will always be on.

Congratulations! You have successfully connected the product to WiFi! Please follow the steps below to complete the installation.

### Step1: Remove your old controller

Step 2: Mark Screw Locations


under 6 feet (1.8 meters).

First, test your old controller to make sure it can work properly. Then use the included label stickers to mark all the lines you have connected. Finally, remove the old controller.







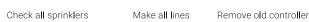

1.Please make sure the distance between the device and the power socket is

2.Use the mounting template to mark the location for installation. Then use the


electric drill to drill holes in the marked mounting locations. Finally, use the

hammer to install the screw anchors to the wall.

### Step 3: Install Your New Controller

Hang your new controller on the nut. Then secure the controller with two screws at the bottom.

nut and the wall for hanging the controller.

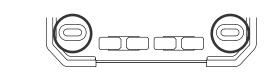


3. Secure the top screw. Pay attention to leave a proper distance between the

### Step 4: Wire Connection

Attach the labels for the marked wires to your new device.

Common port is usually marked with C. A common wire can be inserted into any wire hole marked with C.

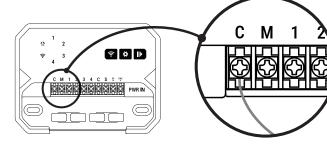


### Mater/Pump Valve(optional)

C Common Wires

### 1.Master Valve

The master valve is usually marked with M. If the master valve is required, it

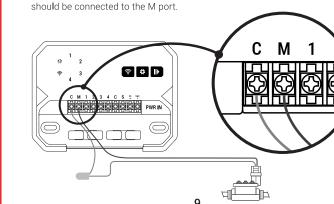


HíSazo

### 2.Pump Valve


Connect an optional pump start replay to the controller. Water pumps are used to extract water from wells or other water sources. If you want to start up the water pump of the controller, you must install a pump start relay. The connection method of the pump start relay and the controller is the same as that of the main valve, but the connected water source is different.

The controller does not provide the main power supply for the water pump.

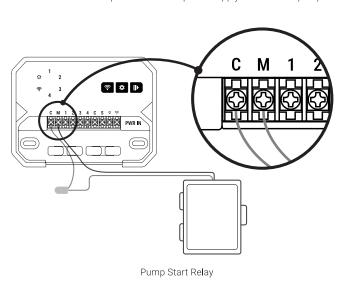




into the labeled number.

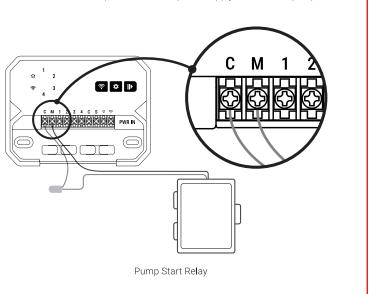


Zone wires correspond to the areas to be watered, which should be inserted

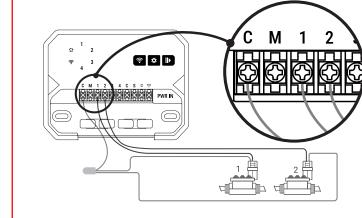

11

S 24VAC-Sensor Wire (optional)

You can connect one rain sensor to the ports marked with S and 24VAC-.

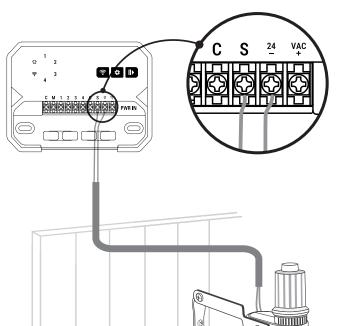



Congratulations! You are now ready to use the new controller! Let's start a new

Create your smart

## 05 TROUBLESHOOTING GUIDE

What can you do if the Wi-Fi connection or irrigation facilities are not working? Here are some possible reasons and relative solutions for reference. We hope they are helpful. For any further questions, please feel free to contact us at support@hioazo.com.

1. Ensure your home router is switched to a 2.4GHz Wi-Fi

Remotely control

channel. This product only supports 2.4GHz Wi-Fi routers. 2. Ensure the distance between the router and the controller is within the connection range. And obstacles such as walls Wi-Fi Connection will affect the wireless connection. 3. Ensure your smartphone has Bluetooth enabled. With

(What if the Wi-Fi Bluetooth assistance, the controller can connect to your connection fails?) smartphone faster.

13

4. Ensure the Wi-Fi function on the controller stays in the connection state, and the Wi-Fi icon 🤶 is flashing fast/slowly. Otherwise, press and hold the 🛜 button for 2 seconds to reset the Wi-Fi connection status.

### 1. After plugging in the power supply, if the indicator light does not light up, check that the power adapter is fully inserted into the power port, and make sure the main power (What if the switch is turned on. controller does not 2. After enabling the automatic watering mode, if the controller does not execute watering, check that all wires are correctly connected and make sure the water valve is compatible with 24 VAC control voltage.

(How to reset Wi-Fi Press and hold the 🛜 button for 2 seconds to reset Wi-Fi.

(What if the indicator light does not light up?)

1. Make sure the power adapter is working properly. 2. Make sure the power supply is properly connected to the POWER IN port.

## 06 FUNCTION DESCRIPTION

## Indicator Lights

1<sub>2</sub> Zone 1~4 operating status indicator light: Stays on when watering is in progress; flashes when watering is paused. following two conditions:



## Rain delay indicator light

WiFi indicator light

### Operational Buttons

WiFi button: Press and hold for 2 seconds to reset WiFi

SET button Start/Skip Button

### Manual Watering

Press the button to enter the setting mode, and the indicator lights of each channel are on. When setting channel one, the indicator of channel one flashes. Press the 🛜 button to cancel the manual irrigation of that channel and enter the setting of the next channel. Press the 😝 button to confirm the setting and advance to set the next channel. Press the Dutton to exit the setting and start irrigation, and press the 🕟 button again to skip or end irrigation.

### Skip Watering

During watering, press **D** to cancel watering in this zone.

## 07 FCC Requirement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference

that may cause undesired operation.

15

### residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

**Note:** This equipment has been tested and found to comply with the limits for a

Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are

designed to provide reasonable protection against harmful interference in a

 Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which

the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. This equipment complies with FCC radiation exposure limits set forth for an

uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## 08 CUSTOMER SERVICE

the following measures:

This item carries a 2-year warranty against defects in either components or workmanship. During this period, products that prove to be defective will, at the discretion of HiOazo, be either repaired or replaced without charge. For any problems in use, please feel free to contact us at support@hioazo.com. We will do our best to help you.

## support@hioazo.com

Factory address: 6th Floor, Building 713, Pengji Liantang Industrial Area, NO.2 Pengxing Road, Luohu District, Shenzhen, China Office address: Luohu District, Shenzhen, China











**Hí**Sazo

USER MANUAL