

SILVERCREST®



BLUETOOTH® -LOUDSPEAKER SBLP 5.0 B1
Copy of the operating instructions

IAN 330233_1904



WARNING: indicates a hazardous situation that, if not avoided, could result in death or serious injury.



CAUTION: indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE

indicates a situation which could lead to property damage.

TIP

indicates circumstances and specifics that should be observed when handling the device.

Thank you for your trust!

Congratulations on your purchase of your new portable Bluetooth speaker.
For safe handling of the device and in order to get to know the entire range of features:

- **Thoroughly read these user instructions prior to initial use.**
- **Above all, observe the safety information!**
- **The device should only be used as described in this copy of the user instructions.**
- **Keep this copy of the user instructions for future reference.**
- **If you pass the device on to someone else, please include this copy of the user instructions. The user instructions are a part of the product.**

We hope you enjoy your new portable Bluetooth speaker!

Terminology

As used in this instruction manual in general and with regards to safety information, safety messages and warnings, in particular, the following words have the following meanings:

- May: this word is understood to be permissive.
- Shall: this word is understood to be mandatory.
- Should: this word is understood to be advisory.

Intended purpose

This is an entertainment electronics device. The Bluetooth speaker is intended for playing sound from audio devices via Bluetooth or using the 0.141 inch TRS socket. The speaker can be connected to your device together with another speaker using TVS.

The device is designed for private home use. This device must not be used for commercial purposes.

Do not make any changes or repairs. The manufacturer is not liable for damage or malfunctions caused by improper repairs or modifications. This is the sole responsibility of the user.

Symbols on your device

The symbol means that the content of the user instructions must be observed.

IMPORTANT SAFETY GUARDS



When using electrical appliances, basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS BEFORE USING

1. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this appliance if it is not working properly or if it has been dropped or damaged. Return the appliance to a service center for examination and repair.

IMPORTANT SAFETY INSTRUCTIONS

If necessary, the following symbols and warnings will be used in this copy of the user instructions:

Safety Alert Symbol

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury and death.

Meaning of the signal words



DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury.

Items supplied

- 1 Bluetooth speaker
- 1 USB charger cable (Type A on Micro USB) **13**
- 1 0.141 inch TRS audio cable **14**
- 1 copy of the user instructions
- 1 copy of the quick reference guide

Before using for the first time

- Remove all packing materials.
- Remove all protective films from the device.
- Check that the device is undamaged. A damaged device must never be used.

SAVE THESE INSTRUCTIONS

4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- Drips and water splashes
- Heat, direct sunlight, and open flames (e.g., candles)
- Knocks and similar actions
- o Protect the cable against damage, for example from:
 - sharp edges
 - hot places
 - clamping or crushing agents.
- o Do not use any astringent or abrasive cleaning agents.
- o In order to avoid any hazards, do not make modifications to the device. Repairs must be carried out by a specialist workshop or the Service Center.



Risk of material damage

- o If you notice any anything unusual happening (e.g., unusual noises, strange smells or smoke developing) turn the device off immediately and remove all cables. Do not use the device any longer.
- o If the device is moved from a cold location to a warm location, condensation may form in the device. Leave the device switched off for a few hours while it becomes acclimatized.
- o Protect the device against damage, for example from:

Operation

Functions of the buttons

TIP: It is possible that not all of the functions will be supported by all audio devices. This is not a device error.

Button	Function
 6	• Switching on/off: Press for approx. 2 sec. • A brief sound sequence is audible.
+ 5	• Press briefly: Increase the volume (audio signal at maximum volume) • Keep pressed: next track
▶ 4	• Press briefly: pause / play • Press briefly: Reduce the volume (audio signal sounds at minimum volume)
— 3	• Keep pressed for 1x: start of track • Keep pressed for 2x: previous track
 1	• Press briefly until a sound can be heard. The active connection is interrupted and a new one can be set up. • Press and hold on one speaker to connect 2 speakers together.

LED displays

LED display	Function
Charging LED 8 is lit red	The battery is being charged / or the battery is under 10 % of capacity.
LED 2 flashes white	Device sending device identification in order to establish a Bluetooth connection (pairing)
LED 2 flashes white very slowly	Bluetooth connection is established
LED 2 is lit white	Left speaker of paired speakers
LED 2 is lit green	The plug of the 0.141 inch TRS cable 14 is plugged into the 0.141 inch TRS socket 10 (no Bluetooth function)

Charging




- o Because of the high power consumption, do not charge the loudspeaker through a laptop / PC. Only charge the loudspeaker via a USB power unit (5 V, min. 1 A, not included in the items supplied).
- o The device must not be covered while the battery is charging.
- o The device must only be charged in a dry environment.

TIP:

- When using a USB power unit (not included), comply with its user instructions. The USB power unit must be able to supply at least 1A output current.
- Charge the battery fully before using the device.
- The maximum battery capacity is reached after approx. 4 – 5 charging cycles.

Overview

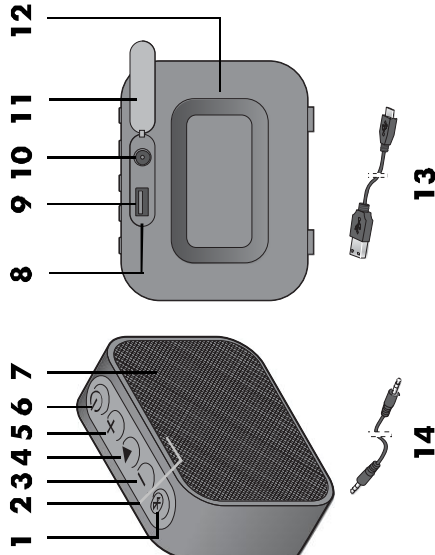

- 13** USB charger cable for Micro USB / Type A
- 14** 0.141 inch TRS cable

