

 Power-Off Method 1: Put the EarBuds back into the charging case, it will auto power off. Method 2: Tap the multi-function buttons for 3s – Tap 3s

— Tap

Play the music

Voice Assistant Tap the multi-fuction button for 3 times to activeate the voice assistant (eg.Siri) Tap the multi-function button to play the music



Model:WX-336A Bluetooth Version:V5.0 Range:≤10m Earbud battery capacity:40mAh

Tap 2 Times

- Tap 3 Times

Charging case battery capacity:300mAh Charging time :1.5H Plaving time: About 4H Weight: Earbud around 5g. Charging case around 46g

\*NOTE\* actual results may vary by device

mode: if a procedure error occurs on mobile devices, please reset it; otherwise, reset the EarBuds.

## Warning

1. Never disassemble or modify it to avoid causing any damages or dangers. 2. Do not store it in extreme temperatures (under 0 ℃ or over 45 ℃) Keep it away from the kids.
 Do not use it during thunderstorm s. 5. Do not use harsh chemicals or strong detergents to clean it. 6. Keep it dry.

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following neasures:

In our and the interference of the control of the benchmap measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is somected.
-Consult the dealer or an experienced radio/TV technician for help Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device may acace tany interference received, including interference that may cause undesired operation.

MADE IN CHINA