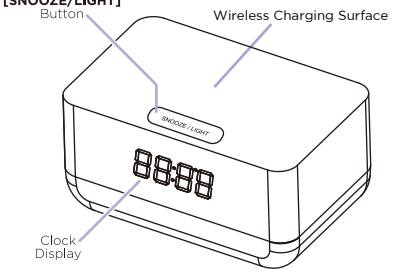 
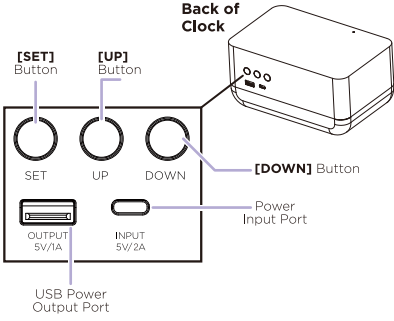 
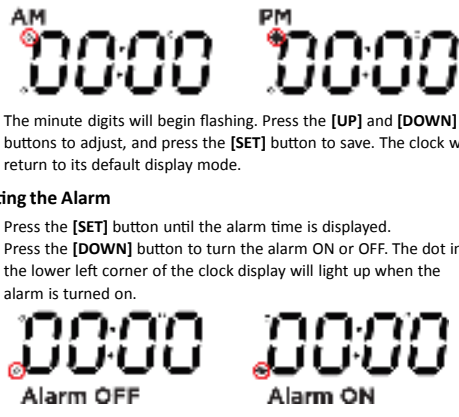 


front83MM83MM83MM83MM

120MM

<p>Sunrise Alarm Clock with Himalayan Salt Lamp & Wireless Charger Instruction Manual XO-9917</p> <p>READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THIS MANUAL</p> <p>In the Box</p> <ul style="list-style-type: none">XO-9917 Sunrise Alarm Clock with Wireless Charger (x1)Power Cable (x1)User Manual (x1) <p>Safety Precautions</p> <ul style="list-style-type: none">This product is NOT a toy, keep away from children and pets.Only use the device according to the instructions in this manual. Never use the device for anything other than its intended purpose.This device is NOT a substitute for proper medical equipment or attention.ONLY use the supplied power cable.Do not open this product or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.Do not expose device or power cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.Do not submerge in water. Do not use in a location where the device or power cable could fall into liquid.Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.Do not use if device or power cable is damaged. If device or power cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.Attachments on the back of your device can impede effectiveness of the wireless charger, and lead to overheating. Remove attachments from your device before charging on this wireless charger.	<p>Product</p>   <p>Connecting to Power</p> <ul style="list-style-type: none">Plug the small connector of the included charging cable into the USB-C charging port on the clock.Plug the large connector into a USB power source, such as a compatible 5V/2A USB power adapter (not included) and plug into a wall outlet.	<ul style="list-style-type: none">The clock display will turn on when the clock is connected to power.If the clock is disconnected from power, it will only save the time and settings for 60 seconds. <p>Display Modes</p> <ul style="list-style-type: none">Press the [UP] button on the back of the clock to switch between clock display modes. Press the [SET] button to save as the default mode.Mode 1 shows the time for 10 seconds and the date and temperature for 2 seconds.Mode 2 shows the time, alarm, date and temperature at all times. <p>Setting the Time</p> <ul style="list-style-type: none">Press the [SET] button until the time is displayed.<i>Press and hold</i> the [SET] button to set the time. The time hours will begin flashing. Press the [UP] and [DOWN] buttons to adjust. The dot in the upper left corner of the display will appear when the hour is PM. Press the [SET] button to save the hour setting.  <p>Setting the Alarm</p> <ul style="list-style-type: none">Press the [SET] button until the alarm time is displayed.Press the [DOWN] button to turn the alarm ON or OFF. The dot in the lower left corner of the clock display will light up when the alarm is turned on.	<ul style="list-style-type: none">When the alarm is turned on, <i>press and hold</i> the [SET] button to set the alarm time. The alarm hours will begin flashing. Press the [UP] and [DOWN] buttons to adjust. Press the [SET] button to save alarm hour setting.The alarm minute digits will begin flashing. Press the [UP] and [DOWN] buttons to adjust, and press the [SET] button to save. The clock will return to its default display mode. <p>Setting the Date</p> <ul style="list-style-type: none">Press the [SET] button until the date is displayed.<i>Press and hold</i> the [SET] button to set the date. The year will begin flashing. Press the [UP] and [DOWN] buttons to adjust. Press the [SET] button to save year setting.The month will begin flashing. Press the [UP] and [DOWN] buttons to adjust, and press the [SET] button to save month setting.The day will begin flashing. Press the [UP] and [DOWN] buttons to adjust, and press the [SET] button to save. The clock will return to default display mode. <p>Changing Temperature Units</p> <ul style="list-style-type: none">Press the [SET] button until the temperature is displayed.Press the [DOWN] button to switch between degrees Fahrenheit (°F) and Celsius (°C).Press the [SET] button to save. The clock will return to default display mode. <p>Using the Bedside Light</p> <ul style="list-style-type: none">Press the [SNOOZE/LIGHT] button on the top of the clock to turn the bedside light ON in white light mode.Press the [SNOOZE/LIGHT] button to adjust the light brightness between low, medium and high.<i>Press and hold</i> the [SNOOZE/LIGHT] button to switch to color-changing light mode.In color-changing light mode, press the [SNOOZE/LIGHT] button to choose a light color.<i>Press and hold</i> the [SNOOZE/LIGHT] button to switch back to white light mode.
--	--	---	---

back83MM83MM83MM83MM

120MM

<p>Note:</p> <ul style="list-style-type: none">The bedside light can only be powered OFF from white light mode.The bedside light can NOT be used when the clock is in sunrise mode or snooze mode. <p>Using the Sunrise Light</p> <ul style="list-style-type: none">The clock's sunrise light function will turn on 20 minutes before your alarm time, and gradually increase in brightness until your alarm goes off.To use the sunrise light, set the alarm before your go to sleep. <p>Snooze Function</p> <ul style="list-style-type: none">Press the [SNOOZE/LIGHT] button on the top of the clock when the alarm goes off to activated the Snooze function. The alarm will ring again in 5 minutes. The sunrise light will continue to shine at full brightness during the snooze time.To turn the alarm and sunrise light off completely, <i>press and hold</i> the [SNOOZE/LIGHT] button when alarm goes off. This only turns them off for the day, and they will activate again as normal the next day. <p>Wireless Charging & USB Output</p> <ul style="list-style-type: none">The LED indicator will flash RED and BLUE alternatively, then turn RED to indicate the charging pad is in standby mode and ready to begin charge, when the clock is connected to power.Place a wireless charging enabled device on the charging pad, the wireless charger will begin to charge automatically. The LED indicator will glow BLUE to indicate your device is charging properly. If your device does not begin to charge, try repositioning your device on the charging pad. You may need to remove your smartphone case to charge properly.When your device is fully charged, the wireless charging LED indicator will turn RED. Remove your device from the charging pad.Note: If the LED indicator is flashing RED and Blue when the charging pad is in use, either the device is NOT wireless charging enabled, or there is an object between the device and charging pad interfering with the charging process.	<ul style="list-style-type: none">To power or to charge a USB device using the USB power output port on the back of the clock, simply plug your device's USB connector into the USB output port and the other end into your device. <p>Tech Specifications</p> <ul style="list-style-type: none">USB-C Input: DC 5V/2AWireless Charging Output: 5W (Max)USB-A Output: DC 5V/1A <p>FCC Information</p> <p>TThis device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.</p> <p>This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none">--Reorient or relocate the receiving antenna.--Increase the separation between the equipment and receiver.--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.--Consult the dealer or an experienced radio/TV technician for help.	<p>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>Radiation Exposure Statement</p> <p>This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. During the operation of device a distance of 15 cm surrounding the device and 20 cm above the top surface of the device must be respected.</p> <p>FC Made in China</p>	
---	--	--	--