

## Product Details



## Using Way



As show in the picture, put the adapter into your headphone.

## Pairing Method

- Long press the power button for 3 seconds to power on the adapter.
- Please keep the adapter and the cellphone in the range of 1 meters if it's the first pairing.
- The red and blue lights flash alternately when entering the pairing mode after adapter power on ( if it doesn't enter pairing mode, please long press the Vol"+" and Vol"-" button at the same time for 2 seconds until the red and blue lights flash alternately)  
\*Please refer to the "Enter pairing mode" in "Basic Operation" table on page 4.
- Open the BT set on your cell phone or the devices with BT function. Then search the BT devices and choose pairing name " C15 ". Enter "0000" pin code if needed.
- The blue LED flash slowly when it's paired successfully.

### Note:

1. When the distance between the adapter and the BT devices is far than 10 meters or 33 feet, the adapter will disconnect from the devices. After that, once they are in the range of 33 feet, they will automatically reconnect.
2. If the headphones has paired, you can force the adapter "Enter pairing mode" again which other cellphone can find the adapter and connect it.

## Connect Two Devices

- Follow the pairing method, pair the first cellphone and then "Enter pairing mode" again to pairing the second cellphone.
- Enter the cellphone setting interface of the first cellphone, and connect the device C15 again.

## Charging Method

With a Micro USB cable(attach with the package)to connect the adapter and the USB port of your PC or charging source, the adapter will be charged. it takes 2 hours for full charging.When charging, the LED indicator is RED, after charging finished , the LED indicator will turn to BLUE.

Note:

- 1.Because the battery may lose some power in the storage, here kindly suggest charging your adapter full before the first time you use it.
- 2.When charging, the adapter can not be used.
- 3.If not use adapter for a long time, suggest charging it once a month to keep battery life.

## LED Indicator

Red led flash quickly: low power

Keeping red led light: charging

Keeping blue led light: charging complete

Blue led and red led flashing alternately: pairing mode

Blue led flashing slowly: connected/calling/playing music

Blue led flashing quickly: incoming call

Blue led double flashing slowly: the adapter doesn't connect the cellphone

## Product Accessories

USB cable (USB to Micro)



## Specification

Play time: 6~8 hours(depending on the actual volume and the sound source)

Charging time: 2 hours

Standby time: Up to 10 days

Effective range: 10 meters(33 feet)

## Basic Operation

Opeation	Adapter button controller	Warning tone
Power on	Long press Power button for 3 seconds	Power on
Power off	Long press Power button for 3 seconds	Power off
Answer a call	Click the Play/Pause button	No Buzzing
End a call	Click the Play/Pause button	No Buzzing
Reject a call	Double press Play/Pause button fast within 0.5 seconds	No Buzzing
Volume control	Click the Vol "+" / "-" button	No Buzzing
Play or pause the music play( *)	Click the Play/Pause button	No Buzzing
Next song	Long press the Vol "+" button for 2 seconds	
Previous song	Long press the Vol "-" button for 2 seconds	
BT paired		Paired
BT disconnected		Dingdong
Enter pairing mode	Long press the Vol"+" and Vol"-" button at the same time for 2 seconds	Ready to pair
Low battery		Dudu more times

\*Because of the different operation system and music player, this feature may be different.

## Fault Diagnosis and Solution

Fault	Possible reasons	Solution
Can not power on	Check whether the battery is low	Charging it
Can not automatic connection	Check if enters standby mode	Double click on the Play/Pause button to reconnect or power on once again
Can not discover adapter	Not enter pairing mode	Long press the Vol"+" and Vol"-" button at the same time for 2 seconds

## Storage & Maintenance

- Please store the wireless adapter in a cool, dry place. The working temperature is -10~45 C(14~113 F). In cold or hot highly humid place will reduce the battery life.
- When long time storage, please charge it before using.
- Adapter resistance to water, but not waterproof, please don't put the adapter into water. If there is water on it, please use soft cloth to wipe clean.
- Use soft dry cloth to clean adapter.
- Do not use any sharp objects in connect with adapters.
- Do not put adapter at a higher or lower temperature.
- Do not charge the adapter in the moist environment.

## Product Warranty

Product Name:

Product Model Number: C15

Purchase Date: \_\_\_\_\_

Invoice Number: \_\_\_\_\_

Customer Name: \_\_\_\_\_

Customer Phone: \_\_\_\_\_

Customer Address: \_\_\_\_\_

## Warranty Terms

1. There is a manual and warranty card in the package. User fill out the warranty card as the warranty certificate.
2. When adapter quality problems occur in normal use and not more than a year since the date of purchased, users can enjoy free repair services.
3. Which of the following don't belong to the scope of warranty:
  - A. Warranty card without dealer signature or seal.
  - B. Artificial or force majeure cause damage.
  - C. Machine to normal wear and tear.
4. Such as the failure of human, more than the warranty period and irresistible reasons, we will collect repair costs.
5. If the product be send back to factory for repair, please contact us, and fill the warranty cards with your name, address, telephone and fault phenomena.

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## 产品示意图



听音乐，打电话，玩游戏，立体声音，真质音效，清晰震撼。

## 使用方式



如图示，将适配器器沿着耳机的下方将音频口插入耳机。



## 无线配对步骤

- 长按电源键 3 秒，开启适配器。
- 适配器配对时，请将适配器以及手机的距离控制在 1 米的范围内。
- 开机进入配对模式，红蓝灯交替闪烁。（如果没有出现，请同时按音量“+”和音量“-”键 2 秒钟直到红蓝灯交替闪烁）  
\* 请参考第 4 页“操作提示”表格中“进入配对模式”操作。
- 打开手机的 BT 功能，搜索 BT 设备。选择“C15”设备，如果需要输入配对码，请输入“0000”配对失败后重复上面的操作。
- 配对成功后，蓝灯慢闪。

注意：

- 1、当与设备的连接距离超出BT的有效距离（10米或 33英尺）时，适配器将与设备断开连接。此后，一旦它们再次处于BT有效距离范围内，它们会自动重新连接，但是，如果适配器与所连设备断开超过 3 分钟，您可能需要双击播放/暂停键，以重新连接设备。
- 2、如果适配器连接过设备。再次打开时，适配器会自动回连上一次的 BT 设备。
- 3、如果开机配对成功后，再次“进入配对模式”，此时别的手机可以连接到此适配器。

## 多点连接一拖二功能

按配对步骤，配对第一个手机后，再次“进入配对模式”，此时可配对第二个手机，然后使用第一个手机BT设置界面再次连接刚才断开的C15。

## 充电方式

用标准的Micro USB充电线（随包装附送一条）将适配器和你的个人电脑或USB充电器即可充电。大约 2小时可以充满，充电的时候 LED 指示灯为红色，充电完成后变成蓝色。

注意：

- 1、由于电池在储存的过程中有可能损失电量，建议在第一次使用前先给适配器充电。
- 2、在充电的过程中适配器是不可使用的。
- 3、长时间不适用，建议每个月充电一次，以保持电池寿命。
- 4、适配器在没有连接设备的情况下超过5分钟，适配器自动关机。

## LED灯提示

红色快速闪烁:电量不足

红色常亮:正在充电

蓝色常亮:完成充电

蓝色与红色交替闪烁:配对模式

蓝色慢速闪烁:已连接，正在拨打电话/正在播放音频

蓝色快速闪烁:接到来电

蓝色闪两下:断开连接

## 产品配件图



## 规格参数

播放时间: 6~8小时(视实际音量及声源而定)

充电时间: 2小时

待机时间: 长达10天

有效距离: 10米(33英尺)

## 操作提示

操作	无线适配器控制	提示音
开机	长按电源键3秒	Power on
关机	长按电源键3秒	Power off
接听电话	单击播放/暂停键	无
结束呼叫	单击播放/暂停键	无
拒接电话	在0.5秒内双击播放/暂停键	无
音量控制	单击 "+" / "-" 键	无
暂停/播放音乐(*)	单击播放/暂停键	
下一曲	长按 "+" 键2秒	
上一曲	长按 "-" 键2秒	
BT已连接		Paired
BT已断开		Dingdong
进入配对模式	同时按音量"+"和音量"-"键2秒钟	Ready to pair
电池电量低		Dudu

\* 对不同类型对BT设备，因为不同的操作系统或者音乐播放器，此功能可能有所不同。

## 故障诊断及解决措施

问题	故障原因	解决措施
不能开机	检查电池是否充满电	给电池充满电
不能自动连接	适配器是否进入待机模式	双击播放/暂停键或者重新开机
无法配对适配器	没有进入配对模式	同时按音量"+"和音量 "-"键2秒钟

## 存储与维护

- 请将无线适配器存放在阴凉，干燥的地方。工作温度-10~45°C (14~113°F)。在冷/热环境或高度潮湿的地方工作会降低电池的寿命。
- 长时间存储后，请在使用前先充电。
- 适配器防汗不防水。请勿将耳机放入水里。假如有水，请使用干净的软布擦拭干净。
- 请使用柔软的干布清洁适配器。
- 请勿将任何尖锐物体接触适配器。
- 请勿将适配器置于温度极高或极低的环境下。
- 请勿在潮湿的环境下给适配器充电。

注意：设计和规格如有变更，恕不另行通知。

## 产品保修单

产品品牌：

产品型号：C15

用户姓名：\_\_\_\_\_

购买日期：\_\_\_\_\_

联系电话：\_\_\_\_\_

联系地址：\_\_\_\_\_

电子邮箱：\_\_\_\_\_

购买渠道：\_\_\_\_\_

## 保修条款

- 1、用户购机时，随机附带有一本说明书及保修卡。用户填好后妥善保管，作为保修凭证。
- 2、自购机之日起，一年之内适配器在正常使用下出现问题，持卡用户可免费享受保修服务。以下不属于保修范围：  
A 保修卡无销售单位签字或盖章;  
B 人为或不可抗拒因素造成损坏;  
C 机器正常磨损;
- 3、若因人为、超过保修期及不可抗拒因素造成的故障，我们将收取维修费用。
- 4、产品出现故障需要返厂保修时，请联系我司。并填好具体的姓名、地址、电话及故障现象。

制造商：

地址：

电话：

网址：