

Precautions

1. Please fix the product on a solid and reliable wall. When hitting, please hit the area, and do not hit the corner area to avoid hand injury or equipment damage.

2. This product is suitable for adults. Children should use it under adult supervision.


3. Beginners should not be too strong to avoid hand injury. First of all, pay attention to safety during the exercise. It is strictly forbidden to hit legs and knees.

4. Do not hit the horn area.

5. The device can not be turned on or abnormal please check whether the power is too low, should be charged in time, charging time should not exceed 8 hours, long-term use is recommended to charge once 1-2 months.

6. This product is not waterproof, wipe boxing target need to use dry cloth do not touch water.

7. Please take good care of the instructions for emergency use.



Smart Music Boxing Target  
Instruction Manual

Product Description


④

④

③

⑤

⑥



①

②

⑦

① Loudspeaker

② Impact Point

③ Horse Race Lamp

④ Lamp Ring

⑤ Hook the Point

⑥ USB Charging Port

⑦ Operating Interface

Installation Notes

Installation Way 1:

1.Hole No.1/2/3/4 are mounting holes for brackets.

2.First fix the No.2 and No.3 holes of the back of the boxing target with flat head screws.

3.Draw the No.1 and No.4 holes of the bracket on the wall, drill the holes with an impact electric drill, and fix them on the wall with expansion screws.

4.Before using the product, please make sure the installation is firm.

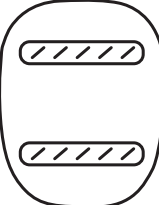 
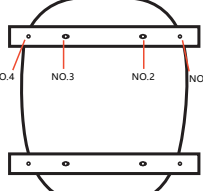 
(Bracket installation is the most secure)

Installation Way 2:

1.Align and paste the hook and loop fasteners with glue on the back of the product.

 
2.Peel off the double-sided tape on the top half.

 

3.Align the position with the wall and stick it firmly.

 


 
Installation For Use


Bluetooth Name: GDBX- Serial number, serial number is 6 numbers or letters A-F

Switch on and off: Long press  button for 2 seconds to switch on and off the machine. When the Bluetooth is not connected, the machine will automatically shut down without any operation.

 
Volume up or down: Long press  button to lower the volume, long press  button to increase the volume

Mode Selection: Press  button to select P01-P09, a total of 9 modes. P01 is a random mode, the others are fixed pattern.

Speed Selection: Press  to select HAU, H01-H09, a total of ten speeds, in which HAU is the music rhythm mode, the others are fixed speed.

Sound Switch: Press  button to turn on or off the impact sound.

Play Pause: After connecting Bluetooth, short press the power button to control Bluetooth music play pause.

Next Music: Short press  , you can switch the next music.

Charging: After plugging in the charger, the battery icon will increase step by step, and when the battery is full, the battery icon will flash together.

Low Battery Warning: When the device battery is low, the display will flash "----" to prompt charging.

Power Out: The power is completely exhausted, the key operation will not have any reaction, must be charged to a certain amount of power to turn on.

Troubleshooting

NO.	Symptoms	Cause Analysis	Method of exclusion
1	No lights and no sound	The product is not powered on	Short press the switch
2	No lights and no sound	Battery drain	Charge
3	Lights flicker	Low battery	Charge
4	Short press the switch can not turn on	The main chip capacitor is short of power due to long-term non-startup	Repeatedly short press the switch
5	Banging sound inside the device	Issued by the internal active stress structure	Normal phenomenon

PDF  
Adobe

## FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC RF Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.