

Start up device Slide the switch from 'OFF' to 'ON' position. Device will light up RED to indicate device is ON. Modes - Bluetooth /FM - Auxiliary / TF Card Reader Bluetooth - Push 'MODE' button once. - Activate Bluetooth mode on Bluetooth-enabled mobile device. - Search for "CACW Speaker" on mobile device's Bluetooth menu. - Pair the mobile device to CACW Bluetooth Speaker. This is typically done by pressing "CACW Speaker" on mobile device, but may vary across devices. Press "Yes" or "Confirm" to connect the mobile device. - Speaker will beep twice to indicate mobile device has connected successfully.	*NOTE: Only one mobile device may be connected to CACW Speaker at a time. To connect new device, ensure no other mobile device is connected and follow Bluetooth pairing steps. FM you need put the cable into mini usb port and the cable act as FM antenna,then you can enjoy your FM function. Auxiliary - Push 'MODE' button twice. > /(phone) Short-press to toggle between Auxiliary and TF Card Reader Mode. - Connect 3.5mm jack cableto mobile device (jack cable not included) TF Card Reader - Push 'MODE' button three times. > /(phone) Short-press to toggle between Auxiliary and TF Card Reader Mode. - Insert TF Card into TF Card Reader Slot (TF card not included)	Music Play and Controls Use your CACW Bluetooth Speaker to play your favorites songs. - Use mobile device's music app to select songs, play, pause, stop, and adjust volume (Bluetooth or Auxiliary Modes only). - Use CACW Speaker to control your music (Bluetooth and TF Card Modes only) +/>> Short-press to play next song . Long-press to increase volume. -/>> Short-press to play previous song. Long-press to decrease volume. > /(phone) Short-press to play/pause song. Hands-free Calling Your CACW Mobile Speaker also comes equipped for hands-free calling (Bluetooth Mode only) > /(phone) Short-press once to answer incoming call. Short-press twice to call last number dialed. Long-press to reject incoming calls.	Speaker Charge Speaker comes equipped with USB cable to charge the device. Device will begin to beep continuously when device has low charge. - Connect charging cable to USB/AUX port on Speaker. - Connect USB cable to a computer or to a wall jack adapter (wall jack adapter not included). **NOTE: some computers may not be capable of charging speakers. If unable to charge try a different computer or wall jack. Note:The Standard USB port used for charging for other device.
---	--	---	---

User Manual Bluetooth Speaker Model:PRR#1639-WDMPA00047(75868)	This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
---	--