

Model:RR119–4BT

P/N: RR119–K55

Step by Step How to Program Instructions: Note: These instructions will only program the remote portion of the key.Entering the programming mode cancels all learned keyless remotes, so none of the previously programmed remotes will work. You must reprogram all of the keyless remotes once you are in the programming mode. You must complete each step within 5 seconds of the previous step to keep the system from exiting the programming mode.

1. Turn ignition switch to ON (II)
2. Press the LOCK or UNLOCK button on one of the remotes. (An unprogrammed remote can be used for this step.)
3. Turn ignition switch to LOCK (0)
4. Repeat steps 1, 2 and 3 two more times using the same keyless remote used in step 2
5. Turn the ignition switch to ON (II)

-
6. Press the LOCK or UNLOCK button the same remote.Make sure the power door locks cycle to confirm you are in programming mode.
 7. Press the LOCK or UNLOCK button on each remote you want to program. Make sure door locks cycle after you push each remote button to confirm system has accepted the remote.
 8. Turn the ignition switch to LOCK (0) to exit programming mode.
 9. Test remote(s). You can use the instructions above to program the remote portion of the key but to cut and program key portion you will need a Locksmith.

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.