

Venue 10
5000 Series

Quick Start Guide

Quick Start Guide
Quick Start Guide
Quick Start Guide
Quick Start Guide



1 Connect the power adapter and turn on your tablet

Connect the power adapter and turn on your tablet
Connect the power adapter and turn on your tablet
Connect the power adapter and turn on your tablet
Connect the power adapter and turn on your tablet


2 Finish Android setup

Finish Android setup
Finish Android setup
Finish Android setup



Connect to your network.
Connect to your network.
Connect to your network.

- NOTE:** If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.
- NOTE:** If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.
- NOTE:** If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.
- NOTE:** If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.

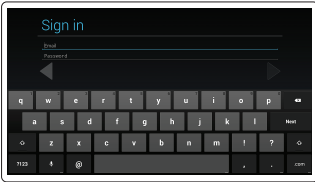

Sign in to your Google account or create a new account.
Sign in to your Google account or create a new account.
Sign in to your Google account or create a new account.
Sign in to your Google account or create a new account..


3 Register your tablet

Register your tablet
Register your tablet
Register your tablet

dell.com/support/retail

Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)

Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)
Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)
Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)
Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)

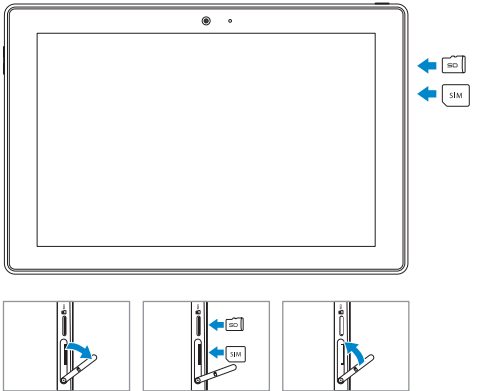


Product support and manuals	dell.com/support
Product support and manuals	dell.com/support/manuals
Product support and manuals	
Product support and manuals	
Contact Dell	dell.com/contactdell
Contact Dell Contact Dell	
Contact Dell Contact Dell	
Regulatory and safety	dell.com/regulatory_compliance
Regulatory and safety Regulatory and safety	
Regulatory and safety Regulatory and safety	
Regulatory model	T14G
Regulatory model Regulatory model	
Regulatory model Regulatory model	
Regulatory type	T14G001
Regulatory type Regulatory type	
Regulatory type Regulatory type	
Computer model	Venue 10 5050
Computer model Computer model	Venue 10 5050 WWAN
Computer model Computer model	Venue 10 5050 series [ZHCN only]

Información para NOM, o Norma Oficial Mexicana	
La información que se proporciona a continuación se mostrará en los dispositivos que se describen en este documento, en conformidad con los requisitos de la Norma Oficial Mexicana (NOM):	
Importador: Dell México S.A. de C.V. Paseo de la Reforma 2620 - Piso 11.º Col. Lomas Altas 11950 México, D.F.	
Número de modelo reglamentario:	T14G
Voltaje de entrada:	100 VAC–240 VAC
Corriente de entrada (máxima):	0,3 A
Frecuencia de entrada:	50 Hz–60 Hz
Corriente de salida:	2 A
Voltaje de salida	5 VDC


Connecting the keyboard

Connecting the keyboard | Connecting the keyboard
Connecting the keyboard | Connecting the keyboard

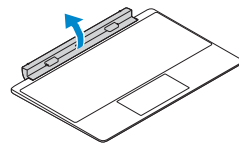

Turn the dock panel outwards to 90 degrees.

Turn the dock panel outwards to 90 degrees.
Turn the dock panel outwards to 90 degrees.
Turn the dock panel outwards to 90 degrees.
Turn the dock panel outwards to 90 degrees.

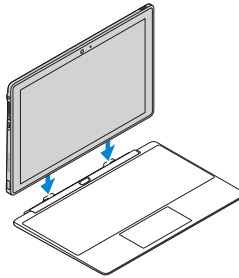


Align the dock latches with the tablet dock-guides and dock the tablet to the keyboard dock.

Align the dock latches with the tablet dock-guides and dock the tablet to the keyboard dock.
Align the dock latches with the tablet dock-guides and dock the tablet to the keyboard dock.
Align the dock latches with the tablet dock-guides and dock the tablet to the keyboard dock.
Align the dock latches with the tablet dock-guides and dock the tablet to the keyboard dock.

Disconnecting the keyboard

Disconnecting the keyboard | Disconnecting the keyboard
Disconnecting the keyboard | Disconnecting the keyboard

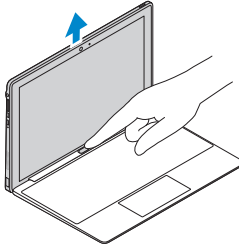


Press the undock button and remove the tablet.

Press the undock button and remove the tablet.
Press the undock button and remove the tablet.
Press the undock button and remove the tablet.
Press the undock button and remove the tablet.


Modes

Modes | Modes | Modes

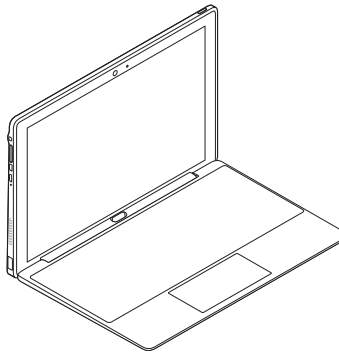

Laptop mode

Laptop mode
Laptop mode
Laptop mode
Laptop mode

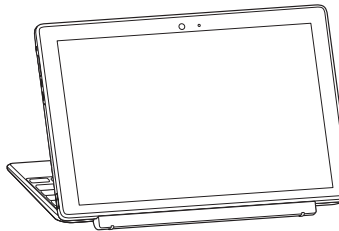


Media mode

Media mode
Media mode
Media mode
Media mode

Features

Features | Features | Features | Features

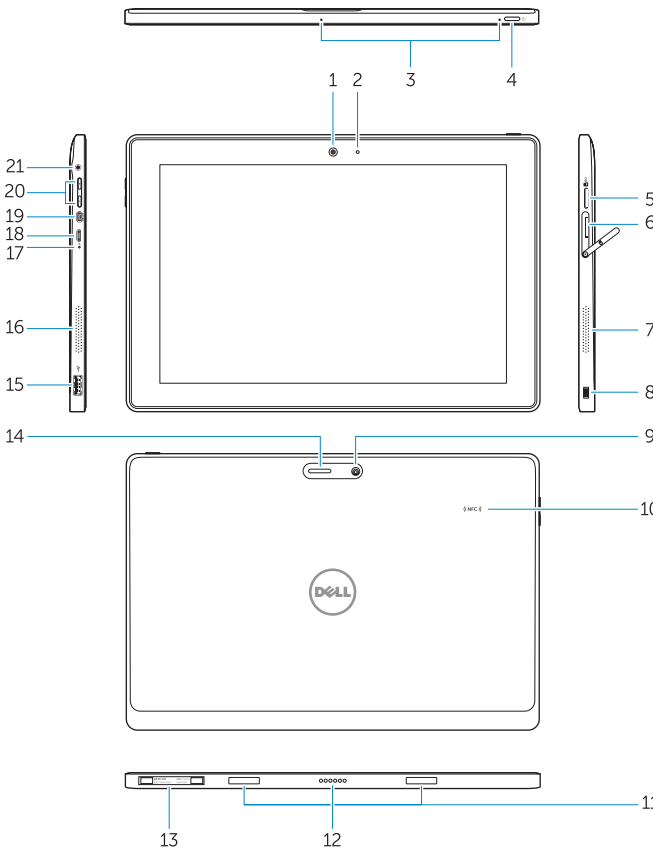

- 1. Camera
- 18. Camera-status light
- 3. Microphones
- 4. Power button
- 5. MicroSD memory card reader
- 6. Micro-SIM reader (LTE/HSPA+ models only)
- 7. Speaker
- 8. Noble security-cable slot
- 9. Back camera
- 10. Near Field Communication (NFC) reader
- 11. Dock-guide slots
- 12. Dock pins
- 13. Service-tag label
- 14. Wi-Fi / WWAN status light
- 15. USB 2.0 connector
- 16. Speaker


- 17. Battery-status light
- 18. Micro USB power connector
- 19. Micro HDMI connector
- 20. Volume buttons
- 21. Audio connector

Keyboard dock (optional)

- 22. Dock connector
- 23. Dock latches
- 24. Undock button
- 25. Touchpad

Pen (Optional)

- 26. Pen Tip (replaceable)
- 27. Programmable buttons
- 28. Pen loop

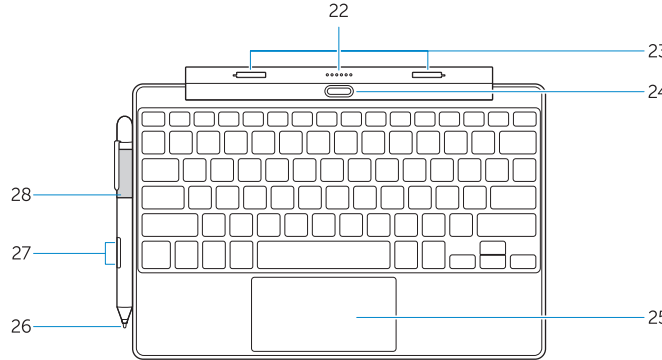

- 1. Language2
- 2. Language language language
- 3. Language
- 4. Language language
- 5. Language
- 6. Language language language
- 7. Language language
- 8. Language language language
- 9. Language language language
- 10. Language language
- 11. Language
- 12. Language language language
- 13. Language language
- 14. Language language language
- 15. Language
- 16. Language language
- 17. Language language language

- 1. Language3
- 2. Language language language
- 3. Language
- 4. Language language
- 5. Language
- 6. Language language language
- 7. Language language
- 8. Language language language
- 9. Language language language
- 10. Language language
- 11. Language
- 12. Language language language
- 13. Language language
- 14. Language language language
- 15. Language
- 16. Language language
- 17. Language language language

- 18. Language
- 19. Language language language
- 20. Language
- 21. Language language
- 22. Language language language
- 23. Language
- 24. Language language language
- 25. Language language
- 26. Language language language
- 27. Language
- 28. Language language

- 18. Language
- 19. Language language language
- 20. Language
- 21. Language language
- 22. Language language language
- 23. Language
- 24. Language language language
- 25. Language language
- 26. Language language language
- 27. Language
- 28. Language language

- 1. Language4
- 2. Language language language
- 3. Language
- 4. Language language
- 5. Language
- 6. Language language language
- 7. Language language
- 8. Language language language
- 9. Language language language
- 10. Language language
- 11. Language
- 12. Language language language
- 13. Language language
- 14. Language language language
- 15. Language
- 16. Language language
- 17. Language language language

- 1. Language5
- 2. Language language language
- 3. Language
- 4. Language language
- 5. Language
- 6. Language language language
- 7. Language language
- 8. Language language language
- 9. Language language language
- 10. Language language
- 11. Language
- 12. Language language language
- 13. Language language
- 14. Language language language
- 15. Language
- 16. Language language
- 17. Language language language

- 18. Language
- 19. Language language language
- 20. Language
- 21. Language language
- 22. Language language language
- 23. Language
- 24. Language language language
- 25. Language language
- 26. Language language language
- 27. Language
- 28. Language language

- 18. Language
- 19. Language language language
- 20. Language
- 21. Language language
- 22. Language language language
- 23. Language
- 24. Language language language
- 25. Language language
- 26. Language language language
- 27. Language
- 28. Language language