
Wireless Mouse

4 Button Mouse

- 1 x 4 Button Mouse
- 1 x USB-A 2.4Ghz Receiver
- 1 x Instruction Manual

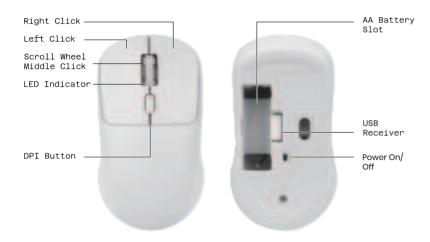

Product Requirements:

- → PC with a USB-A port
- → 1 AA Battery

Connecting via the Receiver:

- \rightarrow Remove the battery cover on the back of the mouse, take the receiver out from the compartment, and plug it into your computer.
- → Install the included AA battery, make sure the "+" and "-" symbols are aligned correctly, and replace the cover.
- → Switch the power button to on.
- \rightarrow The mouse and receiver will automatically pair, the indicator light will flash red and then turn solid when pairing is successful.

Connecting via Wireless Pairing:

- \rightarrow Remove the battery cover on the back of the mouse, install the included AA battery, make sure the "+" and "-" symbols are aligned correctly, and replace the cover.
- -> Switch the power button on the back to on, The indicator light will flash
- \rightarrow Hold the DPI button for 7 seconds to enter pairing mode.
- → Use your device to pair with "PCWM-001". The indicator will flash blue, solid blue and then fade when pairing is successful.

- → Hold the DPI button for 7 seconds to switch between pairing modes (2.4 GHz receiver or wireless).
- → When the mouse is powered on it will automatically re-pair in the previously used settings. If the indicator flashes blue it is pairing via wireless, if it is flashing red it is pairing via the receiver.

 \rightarrow Press the DPI button to adjust the mouse sensitivity. DPI 800 > 1200 > 1600

Troubleshooting:

- \Rightarrow If the mouse is not connecting, make sure the receiver is properly plugged into the computer or make sure wireless pairing is enabled on your device and pairing it has successfully paired.
- \Rightarrow If the mouse is not responding, check if your battery is low. If it is, please replace the battery in time.
- -> If the connection keeps dropping move closer to the device or reduce interference from other wireless devices.
- → Having trouble with your device? Be sure you're running the latest software on your devices. You can do this by doing a 'software update' in the settings of your device.

Safety:

- \Rightarrow Do not use near any water source
- → Do not modify or repair this device
- → Do not use chemical detergents to clean your device, use a soft dry cloth WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like

Mouse model: PCWM001_FCC ID: 2AO23-PCWM001_Receiver model: YZW1_FCC ID: 2AO23-YZW1_Receiver Input: 1.5V = 50mA_Working distance: 8-10m

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Charmodifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radiol frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interfect to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.
 Connect the equipment into a nullet on a circuit different from that to which the receiver is connected.
 Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

gemsfindyours.com 7157 Shady Oak RD.Eden Prairie, MN 55344 Distributed by Chug, Inc.

For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemsfindyours.com

FRONT

BACK