



BLING TUNES HEADPHONES

AGES
6+

INTRODUCTION

Congratulations on your purchase of your FAO Bling Tunes Headphones! Please read all instructions and warnings on this sheet before you start. Keep this instruction sheet as it contains important information for future reference.


CONTENTS

- Headphones
- Micro USB charging cable
- Aux cable
- 6 swappable earring accessories

FEATURES

- Aux input
- Adjustable headband
- Folding design
- Mic

LAYOUT

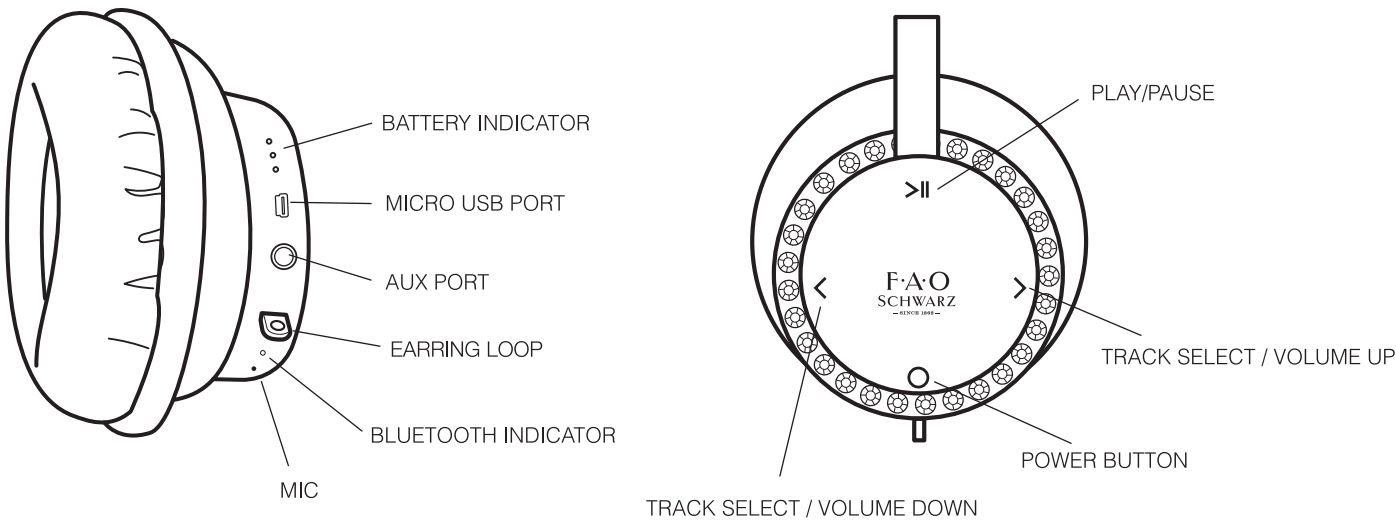

⚠ RECHARGEABLE BATTERY WARNING:

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- **Only charge using the provided charger, cable, and/or adapters**
- **Rechargeable battery is only to be charged by an adult.**
- Adult Supervision of the battery while it is charging is required
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts, and in the event of such damage, they must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

⚠ SAFETY WARNINGS: PLEASE READ ALL SAFETY WARNINGS BEFORE USE.

- Adult setup and supervision required.
- Not for children under 6 years of age
- Listening to loud music for extended periods of time may damage your hearing.
- Do not use while driving.
- Always pay attention to your surrounding while using this product.
- Only use the include power cable for operation.
- Do not attempt to use this product for other purposes.
- Do not expose to extreme temperatures or moisture.
- Thoroughly inspect product before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.





BLING TUNES HEADPHONES

AGES
6+

CHARGE

1. Insert the Micro USB end of the charging cable into the charging port.
2. Connect the other end to a USB port or a standard 5V USB adaptor.
3. Battery indicator LEDs will flash while charging headphones.
4. All 3 LEDs battery indicator lights turn off when the headphones are full charged.

POWER

ON – Press and hold the power button for 3 seconds. A sound will play indicating power is on.

OFF – press the and hold the power button for 3 seconds. A sound will play indicating power is off.

CONNECT

The headphones must be paired with a device or connected via auxiliary cable before operating.

Connect via Bluetooth®

1. Make sure that Bluetooth® is enabled on your device.
2. Turn headphones on. Bluetooth® indicator will flash rapidly
3. On your device, select “FAO Bling” from the list of available Bluetooth® devices.
4. Once connected, the Bluetooth® indicator light will remain on.
5. To disconnect Bluetooth® and connect to another device, press and hold the play/pause button for 3 seconds.

The Bluetooth® LED indicator will begin to flash. You are now ready to connect to a different Bluetooth® enabled device.

Connect via Auxiliary port

1. Insert auxiliary cable (included) to your device.
2. Insert the other side of the cable to the auxiliary port of the headphones.
3. Turn headphones on.

HOW TO ACCESSORIZE YOUR HEADPHONE!

1. Open the loop found on the included earring accessories.
2. Attach the loop on the earring accessory to the loop on the headphones.
3. Close the loop to secure the earring accessory and you're ready to go!

PLAY

Access your favorite media on your device then use the controls below.

- || Press to play/pause.
- ◀ ▶ Press arrow keys to skip forward or backwards on your playlist. Press and hold to lower and raise volume.
- Press to turn headphones on/off. Tone will be heard after headphones are turned on or off.

CARE

- Spot clean only with a dry cloth.
- Store in a cool, dry location.
- Do not expose to extreme temperatures.
- Keep all straps clean.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio / TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.



BLING TUNES HEADPHONES

AGES
6+

INTRODUCTION

Congratulations on your purchase of your FAO Bling Tunes Headphones! Please read all instructions and warnings on this sheet before you start. Keep this instruction sheet as it contains important information for future reference.


CONTENTS

- Headphones
- Micro USB charging cable
- Aux cable

FEATURES

- Aux input
- Adjustable headband
- Folding design
- Mic

LAYOUT

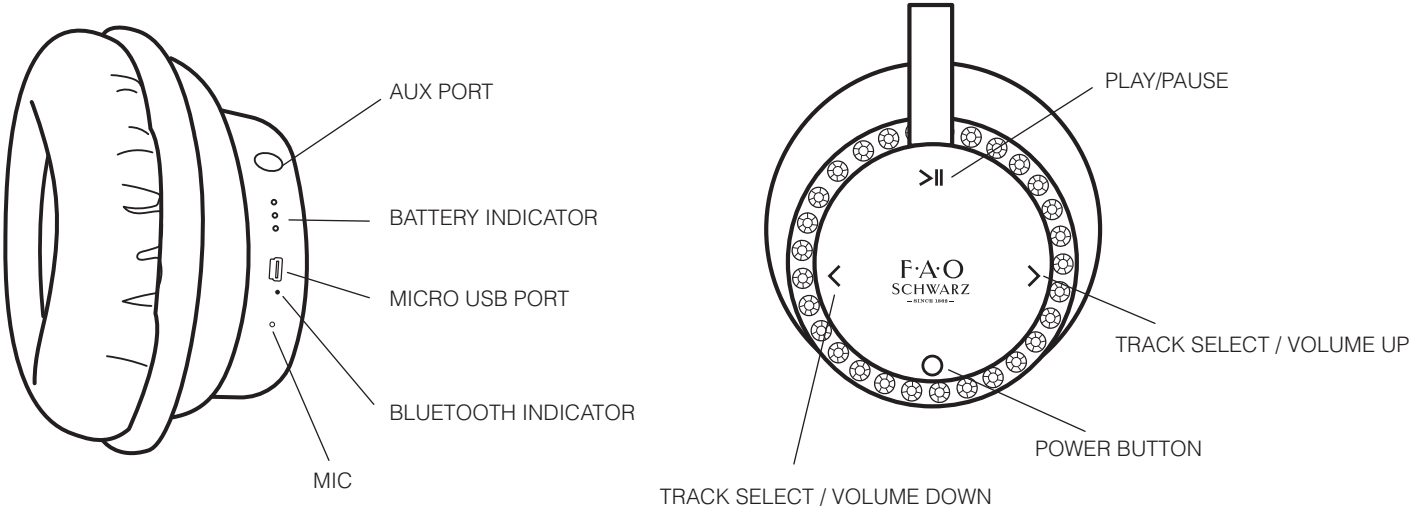

⚠ RECHARGEABLE BATTERY WARNING:

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- **Only charge using the provided charger, cable, and/or adapters**
- **Rechargeable battery is only to be charged by an adult.**
- Adult Supervision of the battery while it is charging is required
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts, and in the event of such damage, they must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

⚠ SAFETY WARNINGS: PLEASE READ ALL SAFETY WARNINGS BEFORE USE.

- Adult setup and supervision required.
- Not for children under 6 years of age
- Listening to loud music for extended periods of time may damage your hearing.
- Do not use while driving.
- Always pay attention to your surrounding while using this product.
- Only use the include power cable for operation.
- Do not attempt to use this product for other purposes.
- Do not expose to extreme temperatures or moisture.
- Thoroughly inspect product before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.





BLING TUNES HEADPHONES

CHARGE

1. Insert the Micro USB end of the charging cable into the charging port.
2. Connect the other end to a USB port or a standard 5v USB adaptor.
3. Battery indicator LEDs will flash while charging headphones.
4. All 3 LEDs battery indicator lights turn off when the headphones are full charged.

POWER

- ON – Press and hold the power button for 3 seconds. A sound will play indicating power is on.
- OFF – press the and hold the power button for 3 seconds. A sound will play indicating power is off.

CONNECT

- The headphones must be paired with a device or connected via auxiliary cable before operating.
- Connect via Bluetooth®
1. Make sure that Bluetooth® is enabled on your device.
 2. Turn headphones on. Bluetooth® indicator will flash rapidly
 3. On your device, select “FAO Bling” from the list of available Bluetooth® devices.
 4. Once connected, the Bluetooth® indicator light will remain on.
 5. To disconnect Bluetooth® and connect to another device, press and hold the play/pause button for 3 seconds.
- The Bluetooth® LED indicator will begin to flash. You are now ready to connect to a different Bluetooth® enabled device.

Connect via Auxiliary port

1. Insert auxiliary cable (included) to your device.
2. Insert the other side of the cable to the auxiliary port of the headphones.
3. Turn headphones on.

CARE

- Spot clean only with a dry cloth.
- Store in a cool, dry location.
- Do not expose to extreme temperatures.
- Keep all straps clean.

PLAY

Access your favorite media on your device then use the controls below.

- >|| Press to play/pause.
- < > Press arrow keys to skip forward or backwards on your playlist. Press and hold to lower and raise volume.
- Press to turn headphones on/off. Tone will be heard after headphones are turned on or off.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio / TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.