







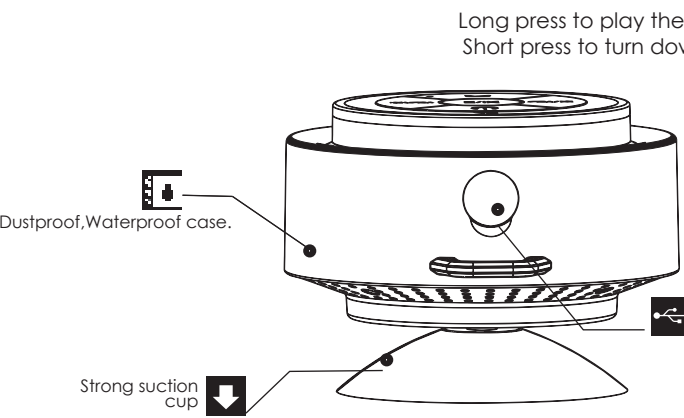
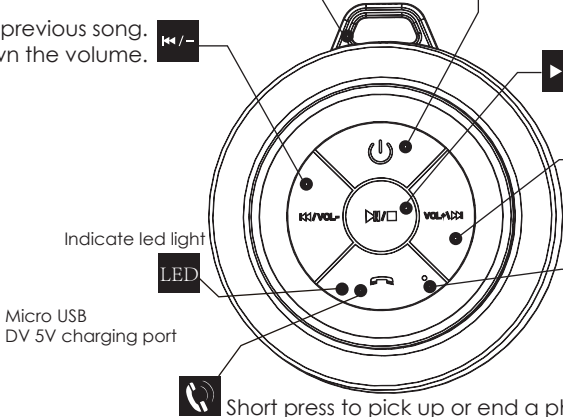







<div><div><div>F012</div><div>WATERPROOF BLUETOOTH SPEAKER MP3 PLAYER &amp; SPEAKERPHONE</div></div><div>Quick Start Guide &amp; User Manual</div></div> <div>version:3.0</div>	<div><div>KEY FUNCTION</div><div><div> Hold the power button for 3 seconds to switch the speaker on and off.</div><div><div> Short press to play or pause the music. Long press to connect or cut off the TWS connections of two speakers.</div><div><div> Long press to play the previous song. Short press to turn down the volume.</div><div><div> Long press to play the next song. Short press to turn up the volume.</div><div><div> Short press to answer or end phone call. Long press to reject an incoming call. Double click to redial the last phone number. Long press to cut off or reconnect the wireless connection with the device.</div></div></div><div>MAIN FEATURE</div></div></div></div></div>	<div><div><ul style="list-style-type: none"><li>• Bluetooth 5.0</li><li>• Waterproof IP grade: IP67</li><li>• Floats in the water</li><li>• Hands-free speakerphone</li><li>• Strong suction cup</li><li>• Portable with a hook for a carabiner clip</li><li>• Charging by USB cable</li><li>• True wireless stereo(TWS)</li></ul></div><div><div>SPECIFICATIONS</div><div><ul style="list-style-type: none"><li>• Frequency Range: 100Hz-20KHz</li><li>• Operating Distance: 10 meters</li><li>• Microphone: Built in</li><li>• Power Rating: 5W</li><li>• SNR: ≥85+2 dB</li><li>• Charging Voltage: DC 5V</li><li>• Battery Capacity: 730mAh</li><li>• Charge Time: Approx. 3 hours</li><li>• Playback Time: Approx. 6 hours</li><li>• Housing Material: ABS&amp;Silicone</li></ul></div></div></div>
<div><div><div>BLUETOOTH PAIRING</div><div>Please charge the speaker for 3 hours prior to the initial use.</div><div><div><div>1. Place your phone or media playing device next to the speaker. Press &amp; hold the power button for 3 seconds to power it on and it is now ready to pair. It will automatically turn off again after 10 minutes without a Bluetooth Connection.</div><div><div>2. Activate the Bluetooth feature on your media playing device and search for "My Speaker F012" from the list. Tap on this to pair with the speaker. Enter "0000" if the media device prompts for a password.</div><div><div>3. If pairing fails, please refer to the user manual of your media playing device for Bluetooth setup. Remove all the excess unused models from the list of paired devices and start over from step 1 again.</div></div></div></div></div></div></div>	<div><div><div>TWS CONNECTION</div><div>True Wireless Stereo (TWS) supports two speakers synchronously through a Bluetooth connection, forming a left and right channel stereo effect. Follow these instructions when first using the TWS function:</div><div><div><div>1. Turn on one of the speakers and pair your device to this 'host speaker' with a fixed blue light.</div><div><div>2. Turn on the second speaker in Bluetooth mode with blinking blue light.</div><div><div>3. Long press  on the host speaker. Stop pressing after you hear the connection sound. The two speakers will automatically connect after a few seconds.</div></div></div></div><div><div>IN TWS MODE</div><div>You can control the volume, change previous song/next song, play/pause, power off, etc., from either of the two speakers. Press and hold  to cut</div></div></div></div></div>	<div><div>off the TWS connection from either of the two speakers. To reconnect TWS, long press  on the host speaker.</div><div><div>NOTE:</div><div>TWS only works with Bluetooth. When answering an incoming call, the caller's voice can only be heard through the host speaker.</div><div>When using True Wireless Stereo (TWS) function for the first time, both speakers will take more time for searching and pairing with each other before connecting successfully.</div></div><div><div>PACKAGE CONTENTS</div><div><ul style="list-style-type: none"><li>• F012 Waterproof Bluetooth Speaker</li><li>• USB Charging Cable</li><li>• Portable Carabiner Clip</li><li>• Dedicated Suction Cup</li><li>• User Manual</li></ul></div></div></div>

<div><div><div>PRODUCT FEATURE</div><div><div><div><div><div>Dustproof, Waterproof case.</div><div>Strong suction cup</div></div></div><div><div><div><div><div>Hook for carabiner</div><div>Long press to play the previous song. Short press to turn down the volume.</div><div>Indicate led light</div><div>Micro USB DV 5V charging port</div><div>Short press to pick up or end a phone call. Long press to reject an incoming call. Double click to redial the last phone number. Long press to cut off or reconnect the wireless connection with the device.</div><div>Short press to play or pause the music. Long press to connect or cut off the TWS connections of two speakers.</div><div>Long press to play the next song. Short press to turn up the volume.</div><div>Built-in microphone for phone calls.</div></div></div></div></div></div></div></div></div>	<div><div><div>RECHARGING THE DEVICE</div><div>The Bluetooth Speaker is powered by a built-in rechargeable lithium battery and can be charged as follows: 1. Release the DC 5V charging port cover. 2. Connect the USB charging cable to a standard USB charging port such as computer or a USB wall charger to the DC 5V charging port on the speaker. 3. The red LED light is on while charging and off when fully charged.</div></div><div><div>TROUBLE SHOOTING</div><table><tr><th>Symptoms</th><th>Causes</th><th>Solutions</th></tr><tr><td>F012 Can't be powered on</td><td>Low battery level</td><td>Recharge the battery </td></tr><tr><td>Not able to pair with the speaker</td><td>F012 is already on or not in pairing mode.</td><td>Refer to "Bluetooth pairing section" on the previous page.</td></tr><tr><td>Volume too low</td><td>Battery is not charged up or volume is not set to the maximum on both F012 &amp; media player.</td><td>1. Please continue to click (short Press) on the volume up button. 2. Increase the volume on the media players.</td></tr></table></div><div><div>SAFETY INSTRUCTIONS</div><div>1. Please make sure the plug cover on the charging port is tight before use.</div></div></div>	Symptoms	Causes	Solutions	F012 Can't be powered on	Low battery level	Recharge the battery 	Not able to pair with the speaker	F012 is already on or not in pairing mode.	Refer to "Bluetooth pairing section" on the previous page.	Volume too low	Battery is not charged up or volume is not set to the maximum on both F012 & media player.	1. Please continue to click (short Press) on the volume up button. 2. Increase the volume on the media players.	<div><div><div>2. Keep the product away from extreme weather to protect the unit against electric shock, explosion or bodily injury.</div><div>3. Do not use the product in excessive heat, such as direct sunlight, stoves or open flame.</div><div>4. Keep the speaker out of reach of children. Do not use the speaker at excessive volume levels as it may damage hearing.</div><div>5. Clean the product with a soft cloth without using harsh corrosive chemicals. Always unplug from the power source before cleaning.</div><div>6. Do not puncture or disassemble the exterior surface of the speaker in any way.</div><div>7. Do not insert any metal object into the device to protect the unit against electric shock.</div></div><div><div>CE FCC RoHS   MADE IN CHINA</div></div></div>
Symptoms	Causes	Solutions												
F012 Can't be powered on	Low battery level	Recharge the battery 												
Not able to pair with the speaker	F012 is already on or not in pairing mode.	Refer to "Bluetooth pairing section" on the previous page.												
Volume too low	Battery is not charged up or volume is not set to the maximum on both F012 & media player.	1. Please continue to click (short Press) on the volume up button. 2. Increase the volume on the media players.												

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-- Reorient or relocate the receiving antenna.  
-- Increase the separation between the equipment and receiver.  
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-- Consult the dealer or an experienced radio/TV technician for help  
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.