


Battery Installation:

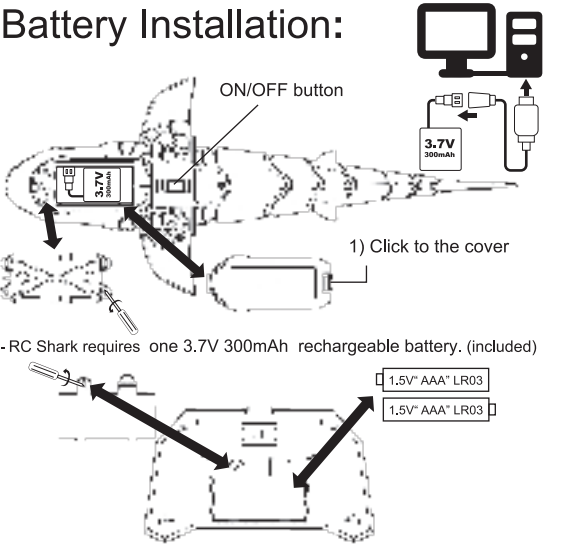

- RC Shark requires one 3.7V 300mAh rechargeable battery. (included)

- Remote controller requires 2 x 1.5V Alkaline "AAA" LR03 batteries. (Not included)

- Open the battery compartment: loosen the screw by turning counterclockwise with a Phillips screwdriver (included).
- Insert one 3.7V 300mAh rechargeable battery into the battery compartment of Shark with correct polarity.
- Insert 2 x 1.5V "AAA" LR03 batteries into the battery compartment of the remote controller with correct polarity.
- Close the battery compartment: tighten the screw by turning clockwise with a Phillips screwdriver.

How to play

- Put the batteries into the remote controller and press the ON/OFF button. If the left and right LEDs flash simultaneously (for 0.25 seconds), it indicates that the remote controller is ready for pairing.
- Put the batteries into the RC Shark, turn the ON/OFF switch to ON, and it will automatically pair with the remote controller to establish a connection. The left and right LEDs of the remote controller are always on.
- Put the shark into the water, and you can toggle the left and right joysticks forward or backward to control the shark to move forward or backward.
- The right button above the remote control can be used to control the speed of Shark.




WARNING: Never allow young children to play in or around water without adult supervision.

2.4GHz RC

Shark must be in water to function.

Shark has variable speed modes-can be tuned for movements like real sharks!

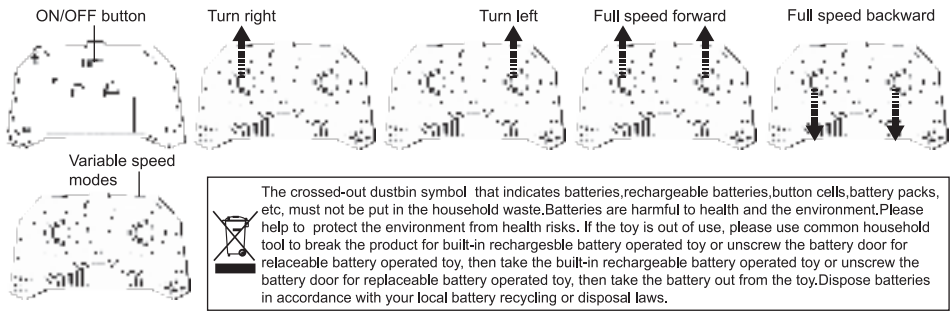

Caution:

- This product is a children's toy that will swim in the water through the 2.4GHz wireless remote control.
- This product has the function of automatic pairing. After successful pairing, it can only be controlled one-to-one.
- While pairing, put the RC Shark and remote controller as close as possible.
- The RC Shark has the function of sensing water. The motor will stop running once Shark is taken out of the water.
- The RC Shark possesses the waterproof function.
- The remote controller does not possess the waterproof function.
- *Distance of remote control: 30-40 meters in unobstructed environment.
- Operate only in calm, clear water for the RC Shark. Pools and shallow are recommended.
- After each use, wipe with a towel and allow to dry completely.
- Do not operate near concrete walls which may disturb transmission.
- Your RC Shark is designed for operation in fresh water. Avoid to operate it in salty water. Do not submerge the RC Shark in water for a long time.
- Maximum 10 players at a time.

Battery Notice

- 1) Shark uses one 3.7V rechargeable lithium battery and the remote controller uses two 1.5V AAA non-rechargeable batteries.
- 2) Ensure the batteries are removed and installed correctly with the regard to polarity (positive and negative) and voltage. Ensure the batteries are not to be short-circuited.
- 3) Non-rechargeable batteries are not to be charged.
- 4) Rechargeable batteries are only to be charged under adult supervision.
- 5) Rechargeable batteries are to be removed from the toy before being charged.
- 6) Do not mix different types of batteries. Do not mix old and new batteries.
- 7) Always use batteries as recommended or equivalent.
- 8) Always remove batteries if the battery drains or the product is to be left unused for a long time.
- 9) The supply terminals are not to be short-circuited.
- 10) Do not connect the product to excessive power supplies than recommended.
- 11) Inspect the cord, plug, housing and other parts of the charger for the toy at a regular basis. And if any damage has been found, please immediately stop using not until restored.