




WIRELESS WALL CONSOLE

Installation and Operation Instruction

NOTICE:

Door & Delay buttons operate all Genie Intellicode® openers.
Light button operates Genie Intellicode® openers produced 2013 or later.

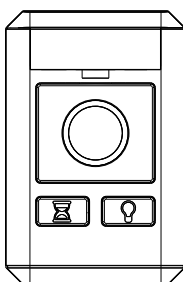

WARNING



MOVING DOOR CAN CAUSE SERIOUS INJURY OR DEATH.

- **DO NOT** install wall console unless the door operator's **safety device** works as required by the door operator's manual.
- Wall Console must be mounted in sight of door, at least 5 feet above floor and clear of moving door parts.
- **Keep people clear** of opening while door is moving.
- **DO NOT** allow children to play with the transmitter or door operator.
- If **safety reverse** does not work properly:
 - **Close door then disconnect opener** using the manual release handle.
 - **DO NOT** use transmitter or door operator.
 - Refer to Door and Door Opener Owner's Manuals before attempting any repairs.


WARNING



MOVING DOOR CAN CAUSE SERIOUS INJURY OR DEATH.

- **DO NOT** install wall console unless the door operator's **safety device** works as required by the door operator's manual.
- Wall Console must be mounted in sight of door, at least 5 feet above floor and clear of moving door parts.
- **Keep people clear** of opening while door is moving.
- **DO NOT** allow children to play with the transmitter or door operator.
- If **safety reverse** does not work properly:
 - **Close door then disconnect opener** using the manual release handle.
 - **DO NOT** use transmitter or door operator.
 - Refer to Door and Door Opener Owner's Manuals before attempting any repairs.

FIG-A

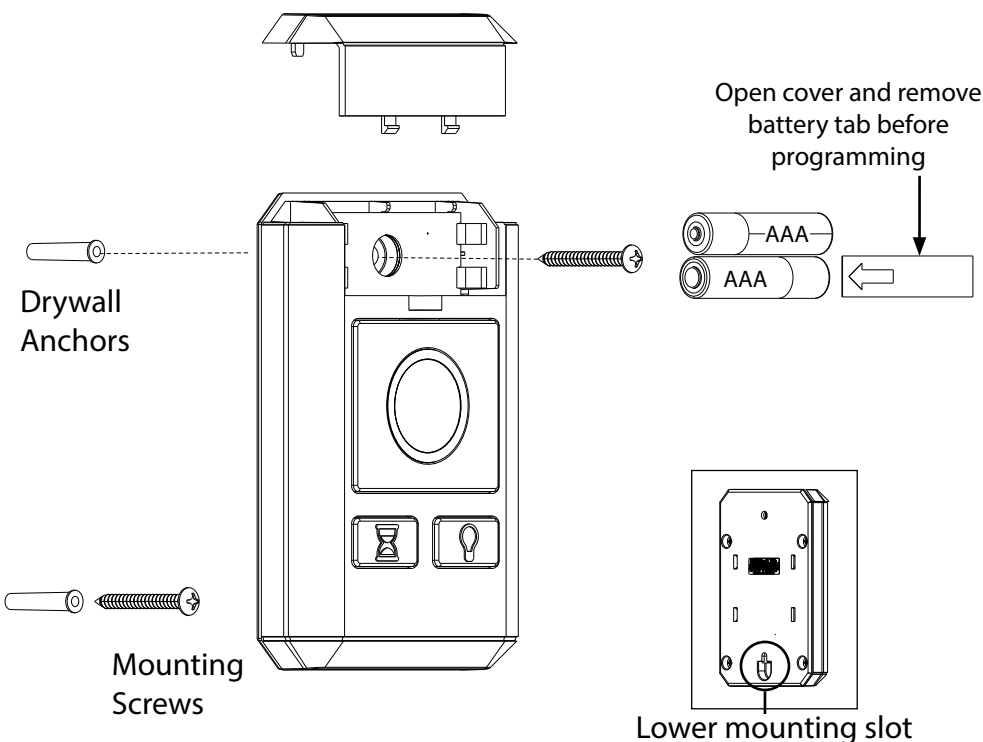

STEP 1) Program Wall Console to Garage Door Opener

Program Button Type Openers (See Fig. 1)

1. Press and hold the program button on the opener until the round LED turns blue, then release.
2. The round LED will go out and the long LED will begin flashing purple. Fig. 3.
3. Press the DOOR button on the WALL CONSOLE 3 times or until door operates.

-OR-

Learn Code Button Type Openers: (See Fig. 2)

1. Press and release the LEARN CODE button on the opener. Its RED LED will begin to flash.
2. Press the DOOR button on the WALL CONSOLE 3 times or until door operates.

Place operator into programming mode:

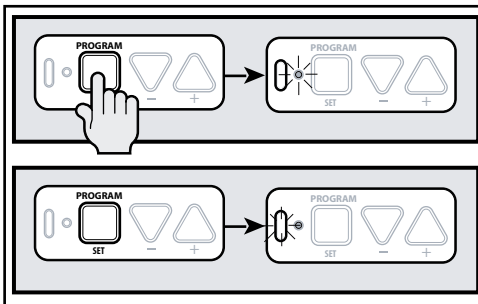


FIG. 1


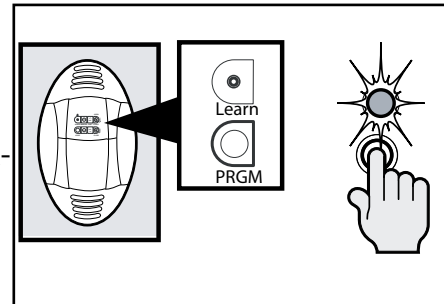


FIG. 2

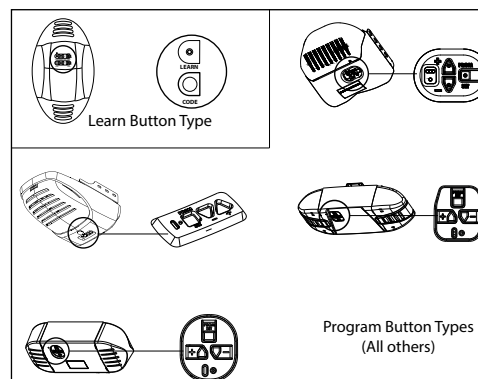


NOTE: Once in programming mode, you will have approximately 30 seconds to complete programming.

Openers compatible with the Wireless Wall Console include one model that programs with a LEARN BUTTON.

All other models use the PROGRAMMING BUTTON type. All programming button types, although appear different, program identically and are the most common.

STEP 2) Operating the Door with Wall Console

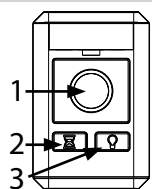

1. DOOR Button - Runs garage door opener.
2. DELAY Button - Adds a 10+ second delay for door operation. Press the delay button and door will automatically operate after set delay.
3. LIGHT Button - Overrides the automatic timed light function of the garage door opener.

Wireless Wall Console LED Signals:

The Wireless Wall Console includes self diagnostic LEDs

1. LED Blue Blink = Indicates NORMAL status.
2. LED Red Blink = Indicates low battery.

Delay Feature:

The default delay period is set for a 10 second delay. Once the DELAY button has been pressed the operation can't be canceled unless the same console DOOR button is pressed. During the activation of a delay operation consecutive button presses will add 10 seconds to the delay time. Up to 3 consecutive button presses for a total of 30 seconds can be made. At any point in time during a delay operation, a DOOR button press will disable the current delay operation

STEP 3) Mounting the Wireless Wall Console (See FIG. A)

Wall Consoles should be mounted at least 5 feet from floor in a convenient location within sight of the garage door.

- Remove battery cover, battery activation tab and batteries.

Mounting to garage framing:

1. Drill a 3/32" pilot hole for the bottom mounting screw.
2. Install included screw into pilot hole, leaving 1/8" gap between the screw head and wall.
3. Hook the slotted mount on back of Wall Console over the screw.
4. Mark and drill a 3/32" pilot hole for the top screw.
5. Secure Wall Console to the wall. (Do not over-tighten).
6. Reinstall batteries and battery cover.

Mounting to drywall:

1. Drill a 3/32" pilot hole for the bottom screw insert.
2. Lightly tap drywall anchor into hole with a hammer until flush with wall.
3. Install included screw into anchor, leaving 1/8" gap between the screw head and wall.
4. Hook the slotted mount on back of Wall Console over the screw.
5. Mark position of pilot hole for the top insert and remove wall console.
6. Drill 8/38" pilot hole for top drywall anchor.
7. Lightly tap anchor into hole with a hammer until flush with wall.
8. Secure Wall Console to the wall. (Do not over-tighten).
9. Reinstall batteries and battery cover.

- *Wireless Wall Console can also be direct mounted to a standard single gang wire box. (Screws and gang box not included)*

Changing LED Blink Rates

NOTE: Any changes to the Blue LED blink rate other than the default setting will impact battery life. Example....going to a faster rate (from once every 3 seconds to once every 2 seconds will decrease battery life).

BLUE LED Blink rate Mode 1 (Default - Once every 3 seconds)

With only (1) AAA battery installed - hold down the DOOR button while simultaneously installing the second AAA battery. Continue to hold the DOOR button for a total of 10 seconds until the LED flashes 3 times letting you know your selection is complete

BLUE LED Blink rate Mode 2 (Faster Blink Rate - Once every 2 seconds)

With only (1) AAA battery installed - hold down the LIGHT button while simultaneously installing the second AAA battery. Continue to hold the LIGHT button for a total of 10 seconds until the LED flashes 3 times letting you know your selection is complete.

BLUE LED Blink rate Mode 3 (Blue LED OFF - Maximum Battery Life)

With only (1) AAA battery installed - hold down the DELAY button while simultaneously installing the second AAA battery. Continue to hold the DELAY button for a total of 10 seconds until the LED flashes 3 times letting you know your selection is complete.

For questions, comments or troubleshooting, contact The Genie Company at:

1 Door Drive, Mount Hope Ohio, 44660

or call 1-800-354-3643 or visit our website at:

www.geniecompany.com

FCC Part 15.21 Statement:
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
FCC / IC Statement:
This device complies with FCC Part 15 and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.
Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.